



MODEL NO. 07341—50001 & UP

Installation Instructions

1/3-Area Size Flat Bed

For the Workman 3000 Series

Note: A radiator cover is not required when using a 1/3 bed, but it may be, if material being carried could spill into the radiator.

1. Place the bed on the vehicle, aligning the mounting holes with inserts in the frame channels. Position the bed so its slot cover is toward the rear of the vehicle.

2. Secure the bed to the frame channels with four 3/8-16 x 3/4" long flange head capscrews.

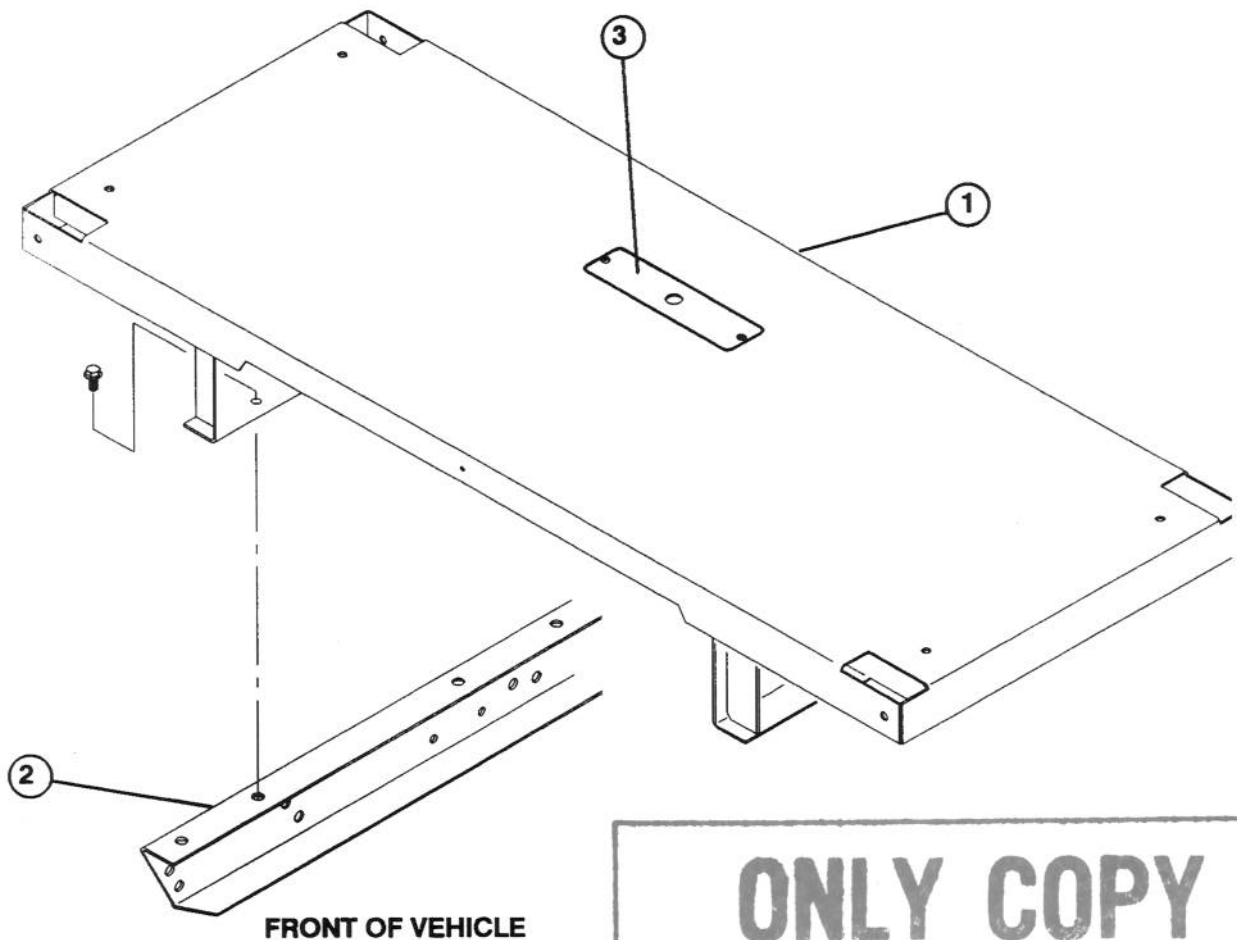


Figure 1
1. Flatbed
2. Vehicle frame
3. Slot cover

**ONLY COPY
DO NOT REMOVE**

Tech. Publications