Form No. 3360-603 Rev C

TORO®

Count on it.

Parts Catalog

Canopy Kit

Workman® MD/MDX/MDE Utility Vehicle


Model No. 07324

Register at www.Toro.com.
Original Instructions (EN)

CE

3360-603 C

Canopy Kit Assembly

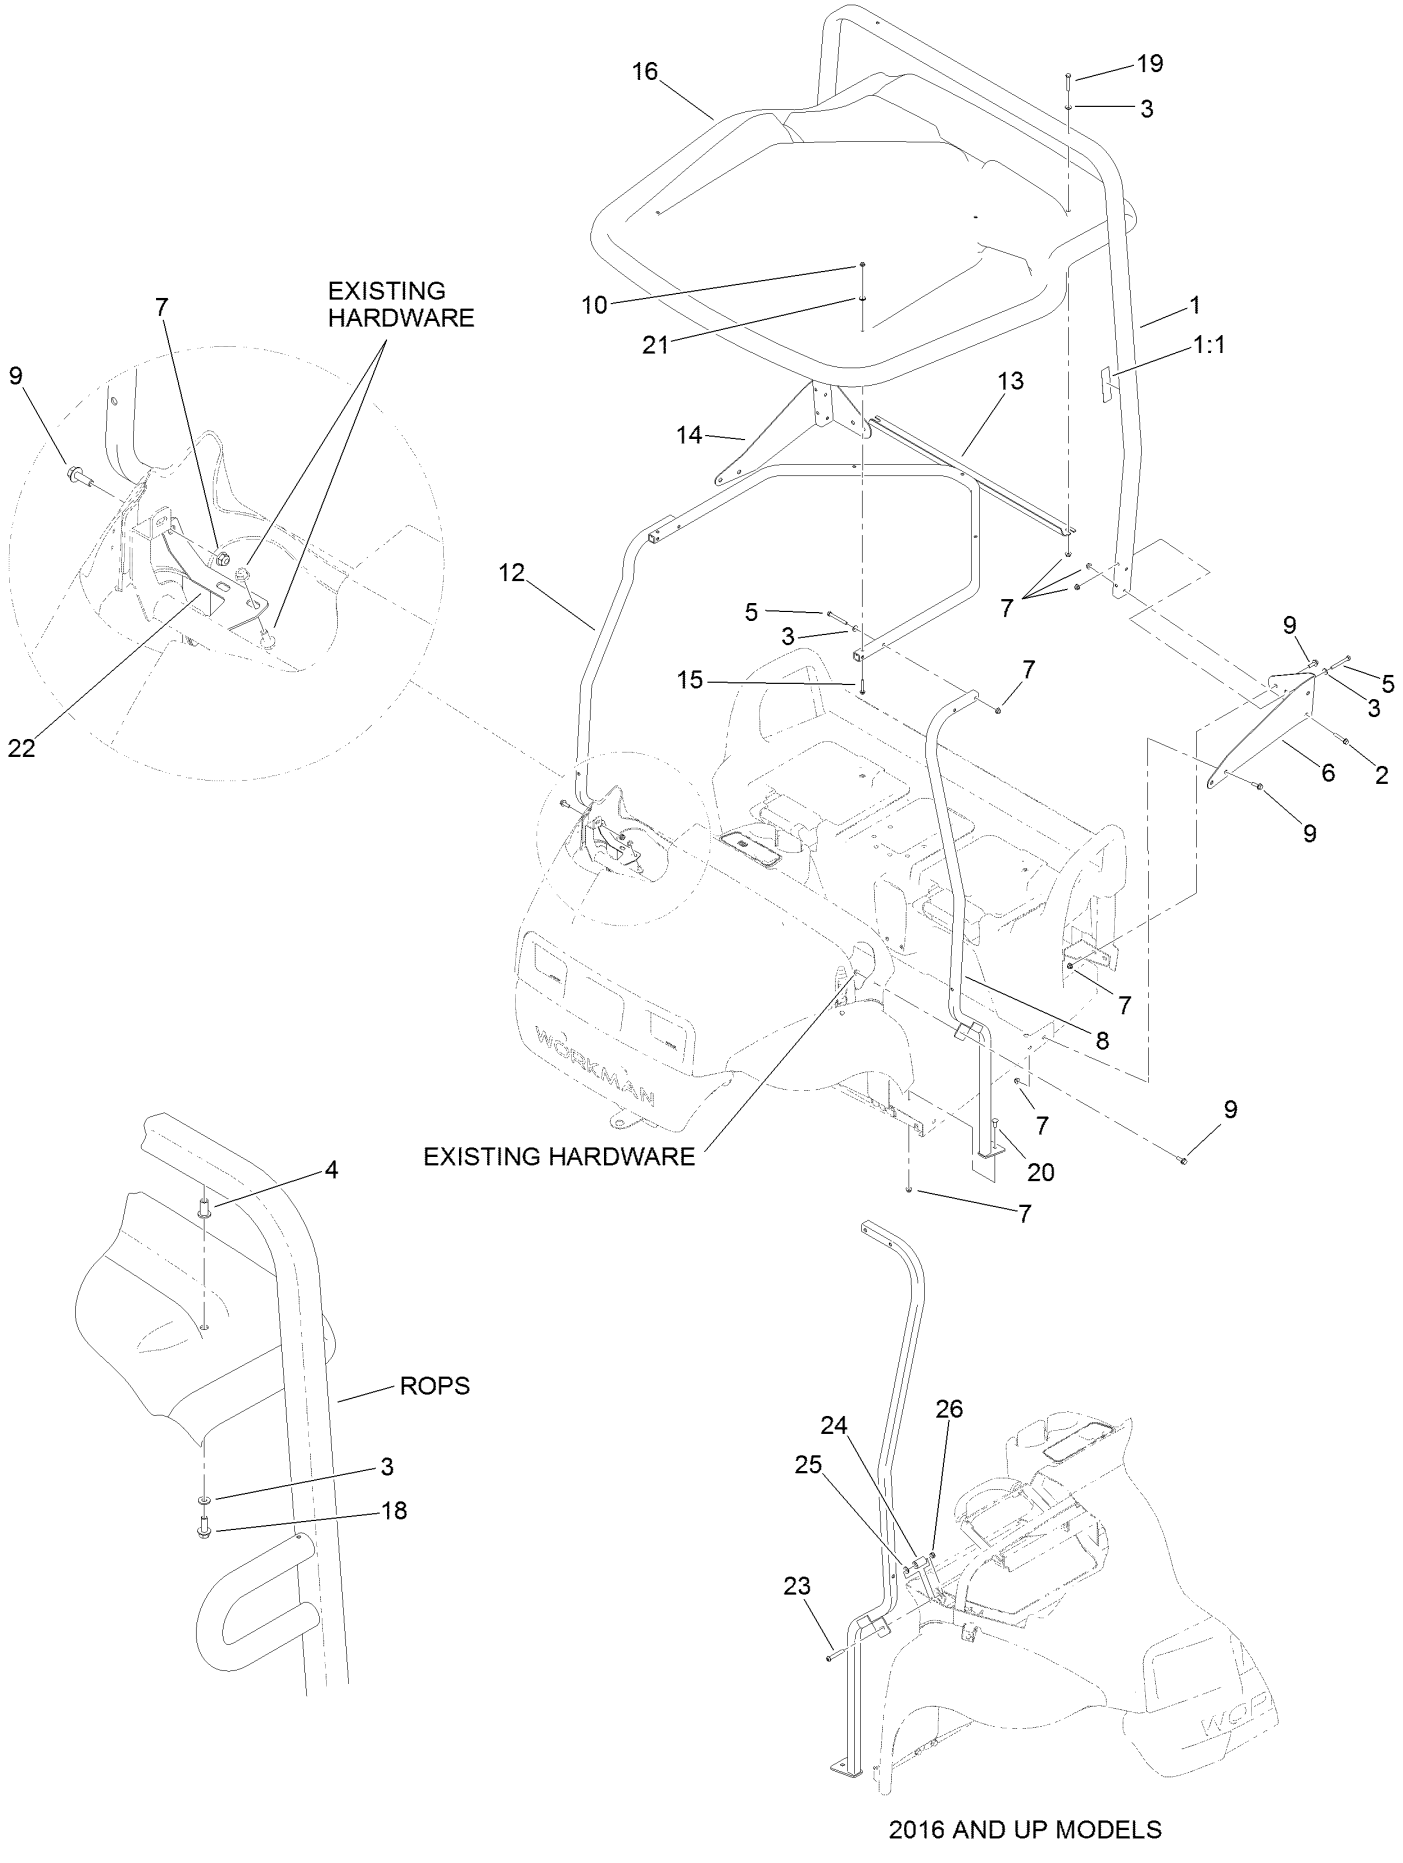

Canopy Kit Assembly (continued)

Ref.	Part Number	Qty.	Description
1	115-7671	1	Rear Tube Support ASM
1:1	115-7670	2	Decal-Warning, No ROPS
2	94-5780	4	Screw-HWH
3	3256-2	10	Washer-Flat
4	104-6743	2	Nut-Clinch
5	322-13	8	Screw-HH
6	104-6713	1	Bracket-Rear Support, LH
7	104-8300	25	Nut-Flange, NI
8	115-2347	1	LH Front Support ASM
9	3234-29	10	Screw-HHF
10	104-7201	5	Nut-Flange, NI
12	115-2346	1	RH Front Support ASM
13	104-6708	1	Support-Canopy
14	104-6712	1	Bracket-Rear Support, RH
15	32105-18	5	Screw-HHF
16	104-6623	1	Canopy
18	3234-42	2	Screw-HHF
19	322-10	2	Screw-HH
20	3230-10	2	Screw-CARR
21	119-0872	5	Washer-Sealing, Bonded
22	115-2377	1	Bracket-Support, Dash
23	120-5499	1	Screw-HSBH
24	77-3180	1	Spacer
25	3256-70	1	Washer-Flat
26	3296-47	1	Nut-Lock, NI



Count on it.