



CHOKE AND THROTTLE CABLES KIT

PART NO. 99-3745

INSTALLATION
INSTRUCTIONS

Loose Parts

Note: Use the chart below to identify parts used for assembly.

DESCRIPTION	QTY.	USE
Adapter	1	
Screw #10-32 x 1/2" (13 mm)	1	
Throttle cable	1	Install replacement cables
Choke cable	1	

Install Cables

1. Remove existing throttle and choke cables from tractor (Fig. 1).

Note: Save all hardware for use when installing new cables.

2. Observe location of boots on ends of new throttle and choke cables. Remove boots.
3. Remove jam nut from new choke cable (Fig. 1).
4. Route throttle lever through rear of dash and secure with screws previously removed. Press knob onto throttle lever (Fig. 1).
5. Route choke cable through front of dash and secure with jam nut previously removed (Fig. 1).

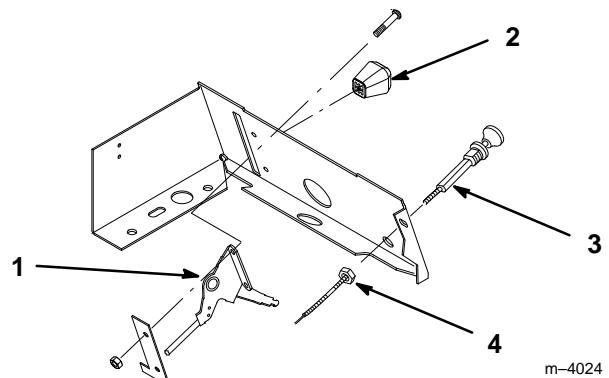


Figure 1

1. Throttle
 2. Knob
 3. Choke
 4. Jam nut

6. Align adapter so tabs are below engine cable bracket (Fig. 2).
7. Secure adapter to engine cable bracket with new #10-32 x 1/2" (13 mm) screw (Fig. 2).

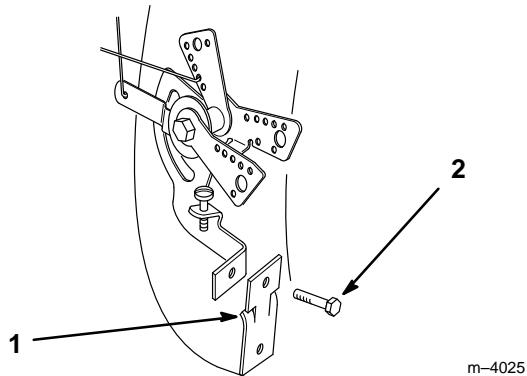


Figure 2

1. Adapter tab
2. Screw #10-32 x 1/2'
(13 mm)

8. Route cables the same as previous routed.
9. Install boots onto throttle and choke cables as previously positioned.
10. Hook cable Z ends into lower holes of engine controls as shown (Fig. 3).
11. Place cables against adapter and secure with previously removed cable clamp, washer and screw (Fig. 3).

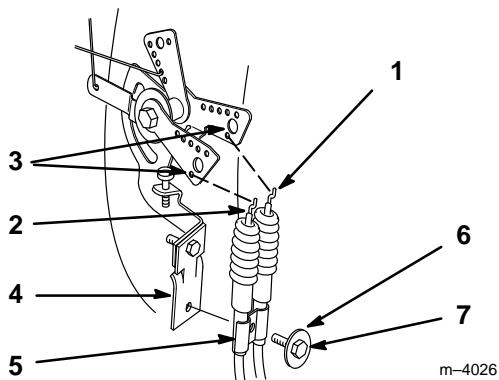


Figure 3

1. Throttle Z end
2. Choke Z end
3. Bottom hole
4. Adapter
5. Cable clamp
6. Washer
7. Screw

12. To adjust cables, move throttle lever to the "FAST" position and pull the choke to the full "CHOKE" position.
13. Loosen clamp screw and push the cables up, at the adapter, until engine controls are against their stops (Fig. 3).
14. Tighten cable clamp mounting screw securely (Fig. 3).