



STRIPING KIT

FOR 44"/52" WAM DECKS

Model No. 30121

INSTALLATION INSTRUCTIONS

Loose Parts

**Note:** Use the chart below to identify parts used for assembly.

DESCRIPTION	QTY.	USE
Mounting bracket	8	Installation of kit
Wiper	1	
Hex lock nut, 1/4-20	8	
Hex head screw, 1/4-20 x 3/4" (19 mm)	16	
Flat washer, 1/4"	8	
Speed nut, 1/4"	8	
Parts catalog	1	
Installation Instructions	1	Read before installing

Installation

1. 44" deck installation

- A. Orient the wiper as shown in Fig. 1. From the left hand end, count over to the seventh set of holes. Measure 1-1/2 inches from the center of these holes toward the right hand end and make a mark. Cut and remove excess material beyond this point.

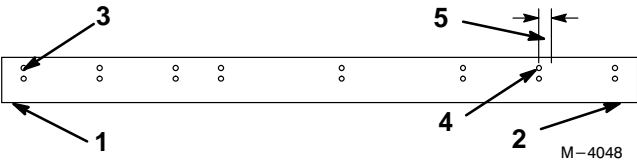


Figure 1

1. Left hand end
2. Right hand end
3. 1st set of holes
4. Seventh set of holes
5. 1-1/2" measurement

- B. Install the speed nuts on each of the mounting brackets as shown in Fig. 2.

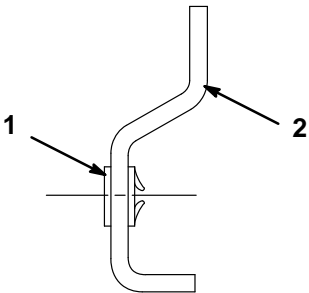


Figure 2

1. 1/4-20 Speed nut
2. Mounting bracket


- C. Attach the mounting brackets (with speed nuts assembled) to holes 1,2,4,5,6 and 7 (Fig. 3) using the flat washers and 1/4-20 x 3/4" (19 mm) screws. Place the flat washers on the screws and insert the screws through

the wiper into the speed nuts. Align the brackets vertical to the wiper and tighten the screws.

**Note:** Use the upper holes for greater striping effect and the lower holes for less effect.

## 2. 52" deck installation

- A. Orient the wiper as shown in Fig. 1. Use the wiper without any modification.
- B. Install the speed nuts on each of the mounting brackets as shown in Fig. 2.
- C. Install the mounting brackets (with speed nuts) to holes 1 through 8 (Fig. 3) using the flat washers and 1/4-20 x 3/4" (19 mm) screws. Place the flat washers on the screws and insert the screws through the wiper into the speed nuts. Align the brackets vertical to the wiper and tighten the screws.

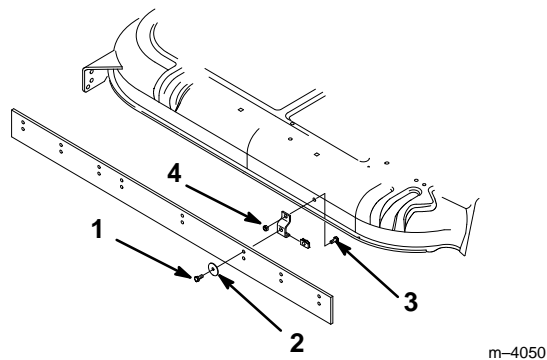

**Figure 3**

- |                                   |                                   |
|-----------------------------------|-----------------------------------|
| 1. 1/4-20 x 3/4" (19 mm)<br>screw | 3. 1/4-20 x 3/4" (19 mm)<br>screw |
| 2. Flat washer                    | 4. 1/4-20 lock nut                |

## 3. Installation to deck

- A. Center the wiper, with the mounting brackets assembled, against the rear of the deck. Position the lower leg of each mounting bracket under and up tight against the bottom lip of the rear deck wall.
- B. Using the mounting brackets as a template, drill 9/32 inch diameter holes in the deck. Secure in place with the 1/4-20 x 3/4" (19 mm) screws and 1/4-20 lock nuts. Install the screws in the deck with the heads on the inside and nuts to the outside as shown in Fig. 3.