



Windshield Kit

Workman® GTX Utility Vehicle with Canopy

Model No. 07151

Installation Instructions

Installation

1

Preparing the Machine

No Parts Required

Procedure

1. Move the machine to a level surface (box A of [Figure 1](#)).
2. Engage the parking brake (box B of [Figure 1](#)).
3. Shut off the engine (box C of [Figure 1](#)).
4. Remove the key from the ignition (box D of [Figure 1](#)).

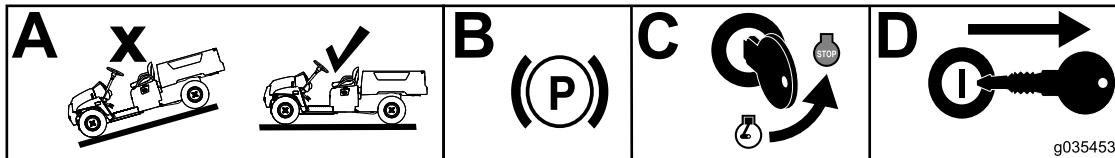


Figure 1

g035453



2

Installing the Windshield Kit

Parts needed for this procedure:

1	Windshield support
4	Flange-head screw (1/4 x 1-1/2 inches)
4	Flange nut (1/4 inch)
2	Windshield mount bracket
2	Hex-head screw (5/16 x 3/4 inch)
1	Windshield assembly
2	Shoulder screw (5/16 x 1-1/4 inches)
2	Backup washer
4	Flange bushing
2	Flange nut (5/16 inch)
2	Receiver clip

Procedure

1. Secure the windshield support to the canopy tubes using 4 flange-head screws (1/4 x 1-1/2 inches) and 4 flange nuts (1/4 inch) as shown in [Figure 2](#).

For installation on machines equipped with Model 07921 or 07922 canopies only:

You may have to loosen the canopy mounting hardware to install the windshield support.


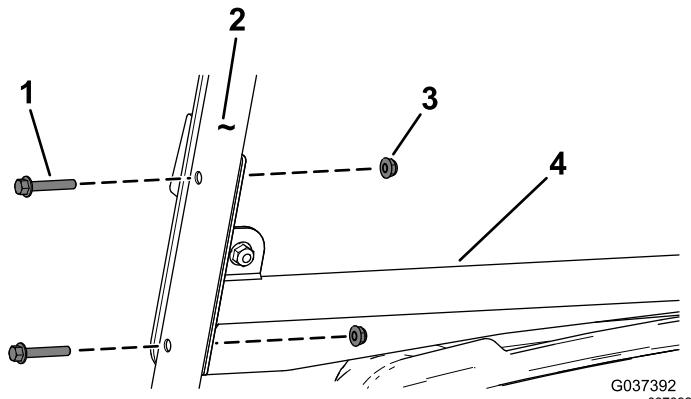


Figure 2
Driver's Side Shown

1. Flange-head screw (1/4 x 1-1/2 inches)
2. Canopy tube
3. Flange nut (1/4 inch)
4. Windshield support

2. For installation on machines equipped with Model 07921 or 07922 canopies only:

In the hole above the windshield support, install the windshield mounting brackets to the canopy tubes ([Figure 3](#)).

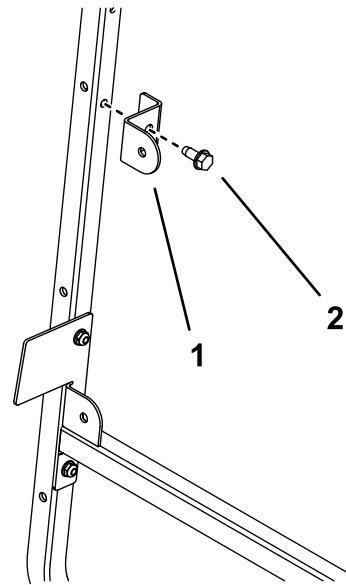

g265327

Figure 3

1. Windshield mount bracket
2. Hex-head screw (5/16 x 3/4 inch)
3. Secure the top holes of the bottom windshield to the brackets on the canopy tubes using 2 shoulder screws (5/16 x 1-1/4 inches), 2 backup washers, 4 flange bushings, and 2 flange nuts (5/16 inch) as shown in [Figure 4](#).

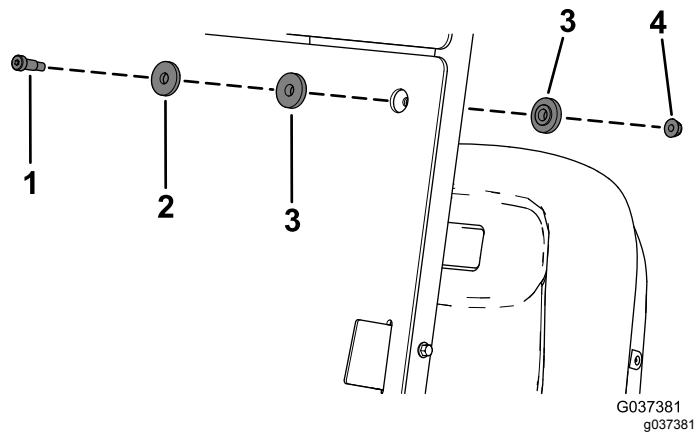


Figure 4
Driver's Side Shown

1. Shoulder screw (5/16 x 1-1/4 inches)
2. Backup washer
3. Flange bushing
4. Flange nut (5/16 inch)

4. Secure the top windshield to the canopy tubes using the 2 receiver clips ([Figure 5](#)).

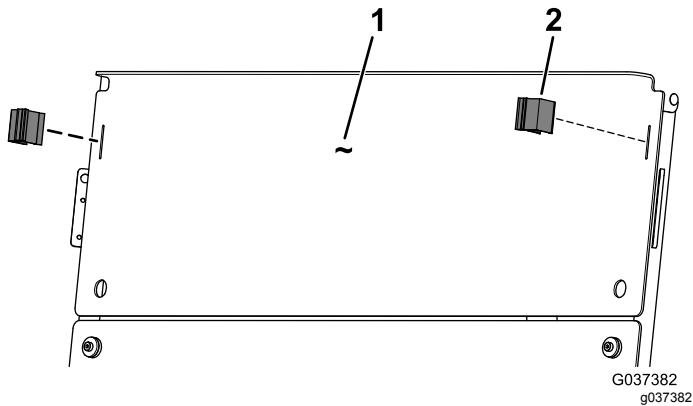


Figure 5

1. Top windshield 2. Receiver clip

5. Secure the rest of the bottom windshield to the brackets on the canopy tubes using 3 shoulder screws (5/16 x 1-1/4 inches), 3 backup washers, 6 flange bushings, and 3 flange nuts (5/16 inch) as shown in [Figure 4](#).



Count on it.