



MODEL NO. 30505

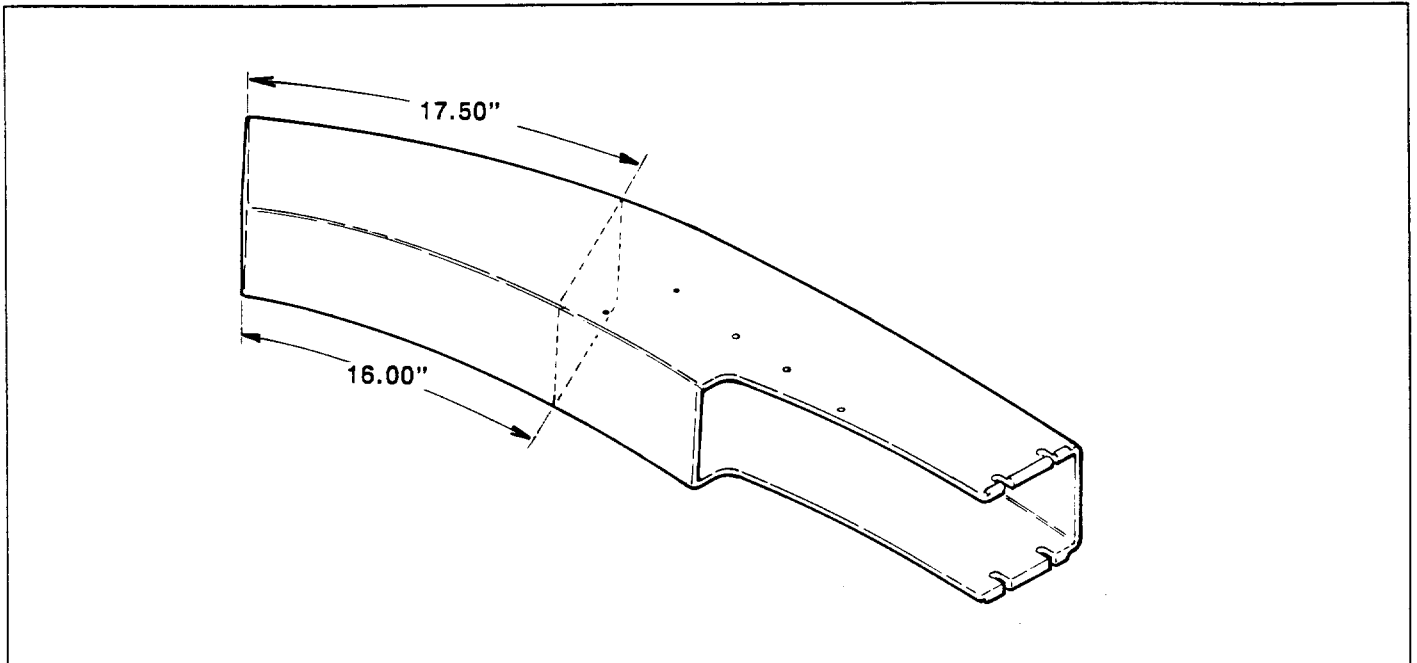
ADDENDUM

**15 CU-FT HOPPER**  
CHUTE MODIFICATION

**IMPORTANT:** When the chute in the Blower Kit is used with a 15 cubic foot Hopper Kit, you must cut off a section of the chute to assure proper fit between the blower and the hopper.

1. Using dimensions shown in illustrations below, use a tape measure and mark the chute.
2. Draw lines around all sides of the chute and cut off with a saw.

**Note:** For convenience, some chutes have a light scribe mark where the chute must be cut off.

**62" BLOWER CHUTE****52" BLOWER CHUTE**