

**MODEL NO. 59405** 

INSTALLATION INSTRUCTIONS

## **CURB WHEEL KIT**

(2 HP EDGER)

- 1. Remove right rear wheel bolt securing wheel and lower handle to frame assembly.
- 2. Remount lower handle to frame with a button head capscrew and locknut (Fig. 1).

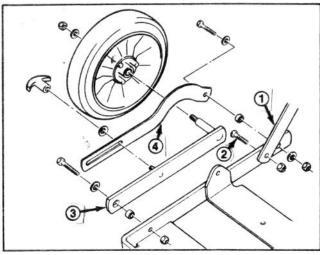


Figure 1

- 1. Lower Handle
- 2. Button Head Capscrew
- 3. Wheel Mount
- 4. Axle Link
- 3. Secure wheel mount to front hole in side of frame with a capscrew, washer, spacer and locknut (Fig. 1).
- 4. Secure axle link to rear hole in side of frame with a capscrew, (2) washers, spacer and locknut (Fig. 1).

- 5. Position wheel mount stud thru slot in axle link and secure with a bellevile washer and T-handle (Fig. 1).
- 6. Mount wheel to wheel mount with wheel washer and locknut (Fig. 1).

## **ADJUSTING WHEEL**

The adjustable wheel lets you edge along curbs and similar objects. Simply loosen the T-handle and slide the wheel assembly up or down until edger is level. Then tighten handle and start edging (Fig. 2).

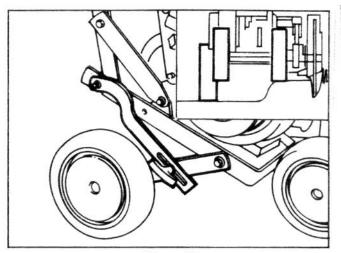


Figure 2