

TORO[®]

PART NO. 57-5680

INSTALLATION
INSTRUCTIONS**SPARK ARRESTER KIT**

For TC 2000 Gas Trimmers

INSTALLING SPARK ARRESTER

**CAUTION**

Do not touch muffler if engine has just been run because it will be hot enough to cause a burn.

In some areas there are local, state or federal regulations requiring that a spark arrester muffler be used on the engine of this trimmer. This muffler was qualified by the United States Department of Agriculture Forest Service as meeting minimum required performance levels for spark arrester mufflers.

When trimmer is used or operated on any California forest, brush or grass covered land, a working order spark arrester muffler must be used on the engine. If not, the operator is violating state law, Section 4442 Public Resources Code.

1. Remove (2) screws securing muffler cover to trimmer (Fig.1).

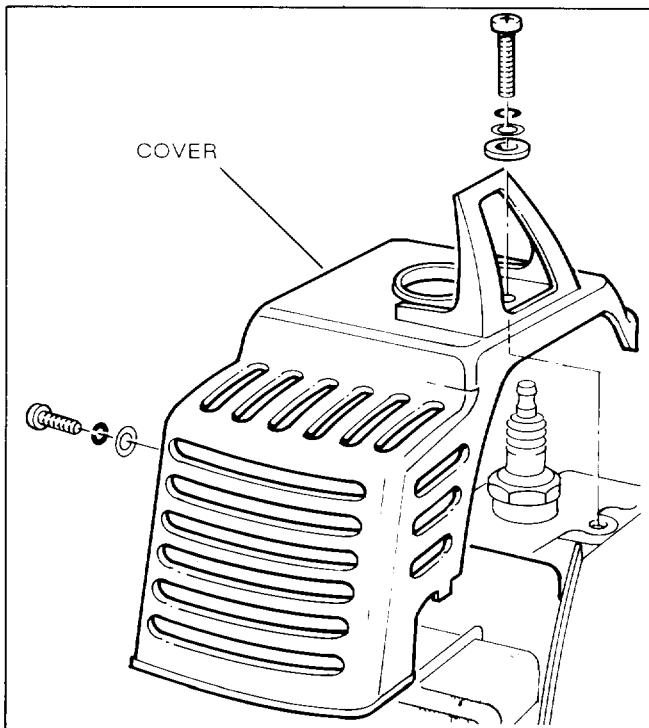


Figure 1

2. Remove screw securing muffler lid, gasket, and baffle to muffler body (Fig. 2).
3. Remove baffle from inside muffler body (Fig. 2).
4. Install new spark arrester baffle into muffler body (Fig. 2).
5. Make sure muffler gasket is still useable (replace, if necessary) (Fig. 2).
6. Install muffler lid and gasket to muffler body with screw previously removed (Fig. 2).

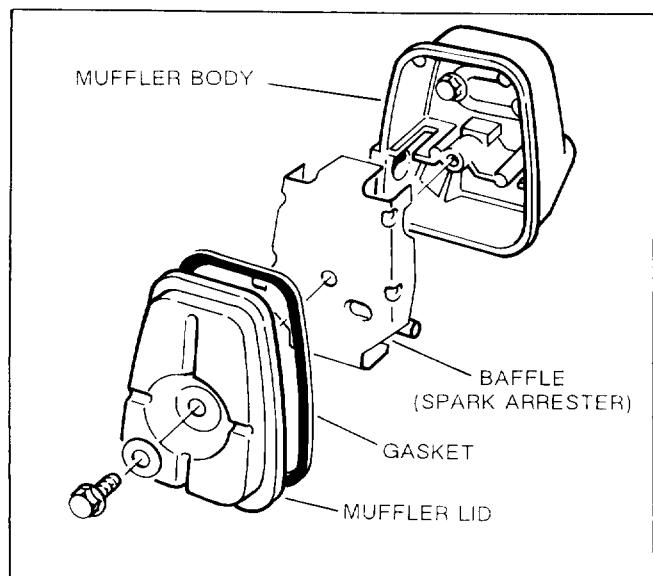


Figure 2

7. Install muffler cover to trimmer with (2) screws previously removed (Fig.1).

SERVICE INSTRUCTIONS

If spark arrester becomes plugged:

1. Remove spark arrester baffle from muffler body.
2. Clean screen of carbon with wire brush or compressed air. If screen is damaged or deteriorated, spark arrester baffle must be replaced: refer to your local TORO dealer for replacement parts.