



Weight Kit

Proline Commercial Walk-Behind Mower

Model No. 138-6866

Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	No parts required	–	Prepare the machine.
2	Weight Bracket Washer Bolt Nut	2 2 4 4 4	Install the kit.

1

Preparing the Machine

No Parts Required

Procedure

1. Park the machine on a level surface.
2. Disengage the PTO, engage the parking brake.
3. Shut off the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.



2

Installing the Kit

Parts needed for this procedure:

2	Weight
2	Bracket
4	Washer
4	Bolt
4	Nut

Procedure

Install a weight over both frame tubes as close to the front caster hub as possible (Figure 1).

Note: For 122 cm (48 inch) and 137 cm (54 inch) machines, install the mounting hardware through the tie-down hole.

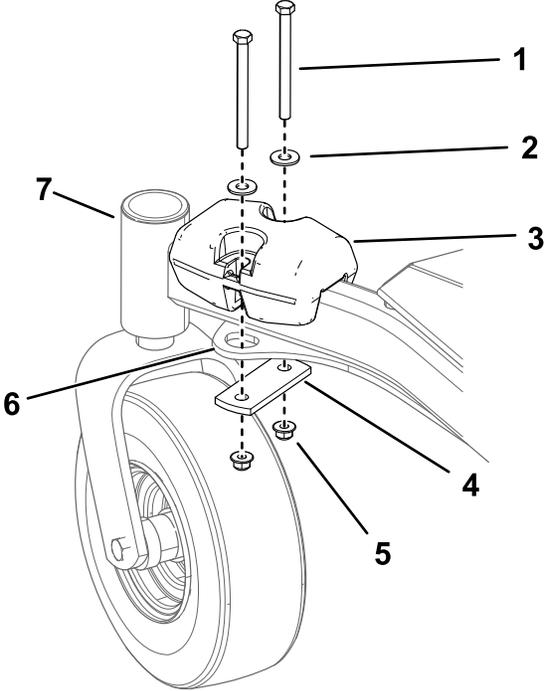


Figure 1

g310688

- 1. Bolt (2)
- 2. Washer (2)
- 3. Weight
- 4. Bracket
- 5. Nut (2)
- 6. Tie-down for 122 cm (48 inch) and 137 cm (54 inch) machines
- 7. Caster hub