



12V CE Kit

Workman® GTX Utility Vehicle

Model No. 140-4846

Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
No parts required	–	Prepare the machine.
12 V Horn Kit	1	
CE decal	1	Install the kit.
2019 production year decal	1	

Preparing the Machine

1. Park the machine on a level surface.
2. Engage the parking brake.
3. Shut off the machine and remove the key.

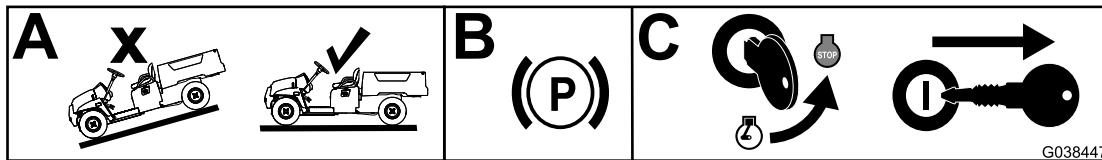


Figure 1

g038447

Installing the 12V CE Kit

1. Install the 12 V Horn Kit (Model 133-3016) according to the *Installation Instructions*.
2. Apply the CE decal and 2019 production year decal to the left of the serial number decal (Figure 2).

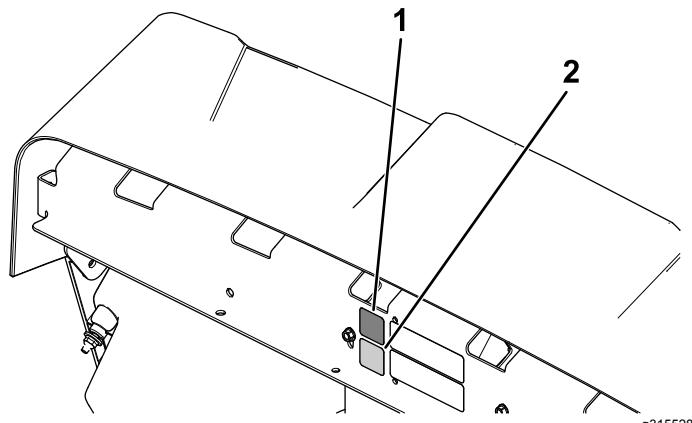


Figure 2

1. CE decal
2. 2019 production year decal



* 3 4 3 8 - 4 5 8 *