FORM NO. 3324-595

Attach-a-Matic® Kit

Part No. 100-8716 Part No. TR100D8716	INSTALLATION INSTRUCTIONS

Loose Parts

Note: Use the chart below to identify parts for assembly.

DESCRIPTION	QTY.	USE
Attach-a-Matic®	1	Install Attach-a-Matic®
Bolts	4	
Nuts	4	

Installing Attach-a-Matic®

1. Remove the E-ring and all washers from the front axle pivot pin (Fig. 1). Remove muffler shield.
2. Install (4) 3/8 x 1" carriage bolts into the keyhole slots in the axle bracket. (Fig. 1).
3. Install the muffler shield and place the front hitch onto the tractor, securing it with (4) 3/8" locknuts (Fig. 1).
4. Reinstall enough washers to fill the space between hitch and E-ring groove. Install E-ring (Fig. 1).

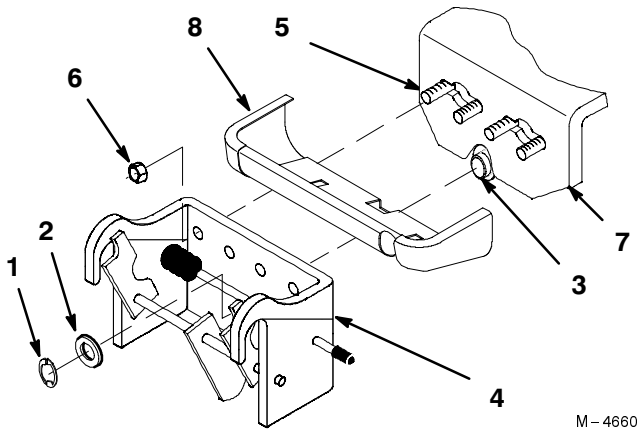


Figure 1

1. E-ring
2. Thick Washer
3. Axle pivot
4. Front hitch
5. Carriage bolt 3/8 x 1" (Installed)
6. Locknut 3/8"
7. Front of Tractor
8. Muffler Guard

Printed in USA