

Attach-a-Matic® Kit

Part No. 100-8716
Part No. TR100D8716

INSTALLATION INSTRUCTIONS


Loose Parts

Note: Use the chart below to identify parts for assembly.

DESCRIPTION	QTY.	USE
Attach-a-Matic®	1	
Bolts	4	Install Attach-a-Matic®
Nuts	4	

Installing Attach-a-Matic®

1. Remove the E-ring and all washers from the front axle pivot pin (Fig. 1). Remove muffler shield.
2. Install (4) 3/8 x 1" carriage bolts into the keyhole slots in the axle bracket. (Fig. 1).
3. Install the muffler shield and place the front hitch onto the tractor, securing it with (4) 3/8" locknuts (Fig. 1).
4. Reinstall enough washers to fill the space between hitch and E-ring groove. Install E-ring (Fig. 1).

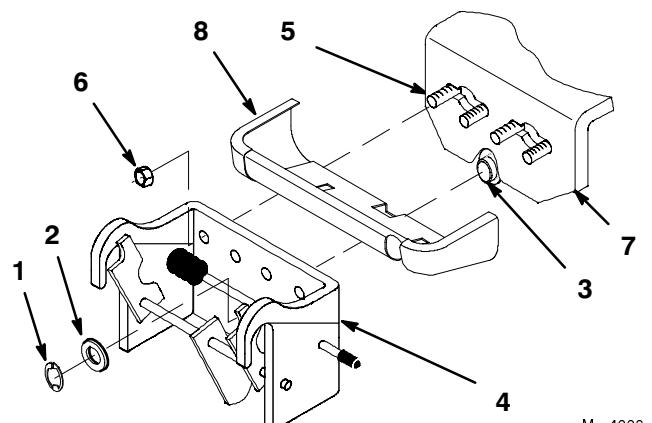

M-4660

Figure 1

1. E-ring	5. Carriage bolt 3/8 x 1" (Installed)
2. Thick Washer	6. Locknut 3/8"
3. Axle pivot	7. Front of Tractor
4. Front hitch	8. Muffler Guard