

|  |                              |
|--|------------------------------|
| Attach-a-Matic® Kit                      |                              |
| Part No. 100-8716<br>Part No. TR100D8716 | INSTALLATION<br>INSTRUCTIONS |

Loose Parts

**Note:** Use the chart below to identify parts for assembly.

| DESCRIPTION     | QTY. | USE                     |
|-----------------|------|-------------------------|
| Attach-a-Matic® | 1    | Install Attach-a-Matic® |
| Bolts           | 4    |                         |
| Nuts            | 4    |                         |

Installing Attach-a-Matic®

- 1. Remove the E-ring and all washers from the front axle pivot pin (Fig. 1). Remove muffler shield.
- 2. Install (4) 3/8 x 1" carriage bolts into the keyhole slots in the axle bracket. (Fig. 1).
- 3. Install the muffler shield and place the front hitch onto the tractor, securing it with (4) 3/8" locknuts (Fig. 1).
- 4. Reinstall enough washers to fill the space between hitch and E-ring groove. Install E-ring (Fig. 1).

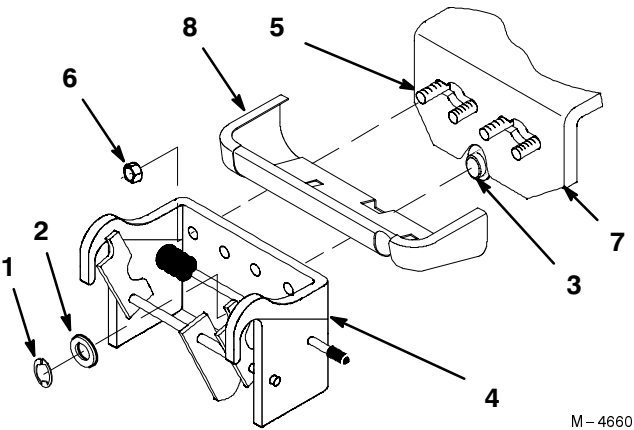


Figure 1

- |                 |                                       |
|-----------------|---------------------------------------|
| 1. E-ring       | 5. Carriage bolt 3/8 x 1" (installed) |
| 2. Thick Washer | 6. Locknut 3/8"                       |
| 3. Axle pivot   | 7. Front of Tractor                   |
| 4. Front hitch  | 8. Muffler Guard                      |