



PART NO. 6-7859

INSTALLATION INSTRUCTIONS

GRASSMASTER® BAG KIT

1. Slide bag support through hem in bag assembly (Fig. 1). Be sure holes in bag support and bag assembly align. If holes do not align, bag support is in backwards and must be removed and turned around.

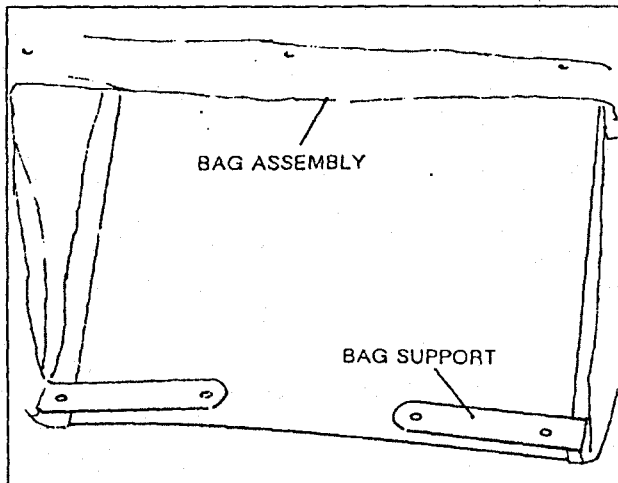


Fig. 1

2. Slide bag door on to door bracket (Fig. 2).

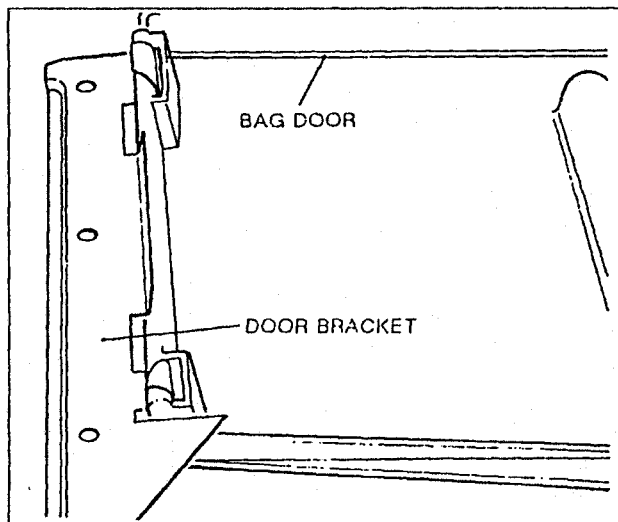


Fig. 2

3. Place door bracket under bag assembly and align holes. Place support bracket into position. Secure door bracket, bag assembly, bag support, and support bracket with (4) screws and locknuts (Fig. 3).

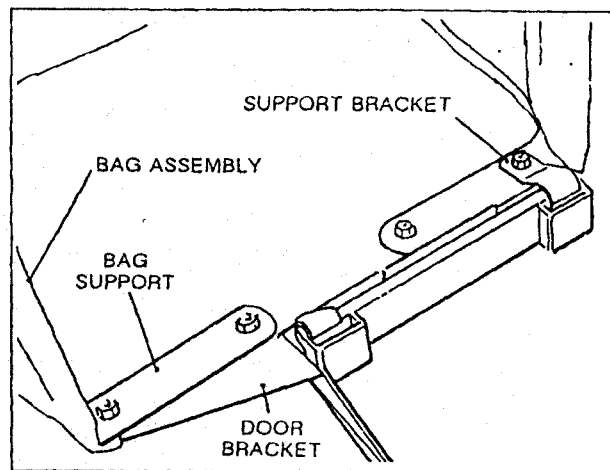


Fig. 3

4. Slide bag frame diagonally into bag assembly. Position bag frame at top and align holes. Secure with (3) machine screws and locknuts (Fig. 4).

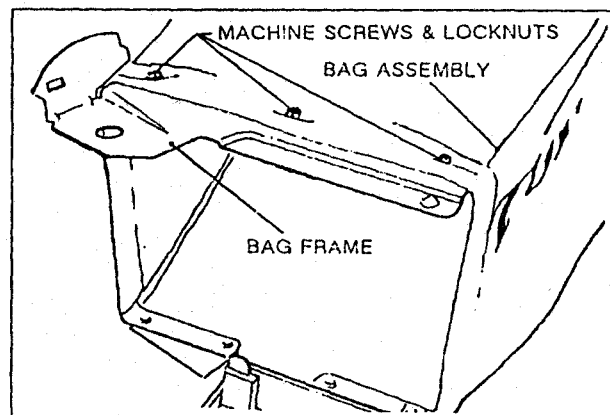


Fig. 4