



# Tub Service Kit

## Mud Buggy

Model No. 139-7216

Form No. 3439-841 Rev A

### Installation Instructions

1. Park the machine on a level surface, engage the parking brake, lower the hopper, shut off the engine, and remove the key.
2. Remove the existing tub.
3. Secure the new tub to the frame using 4 bolts, 4 washers, and 4 nuts.


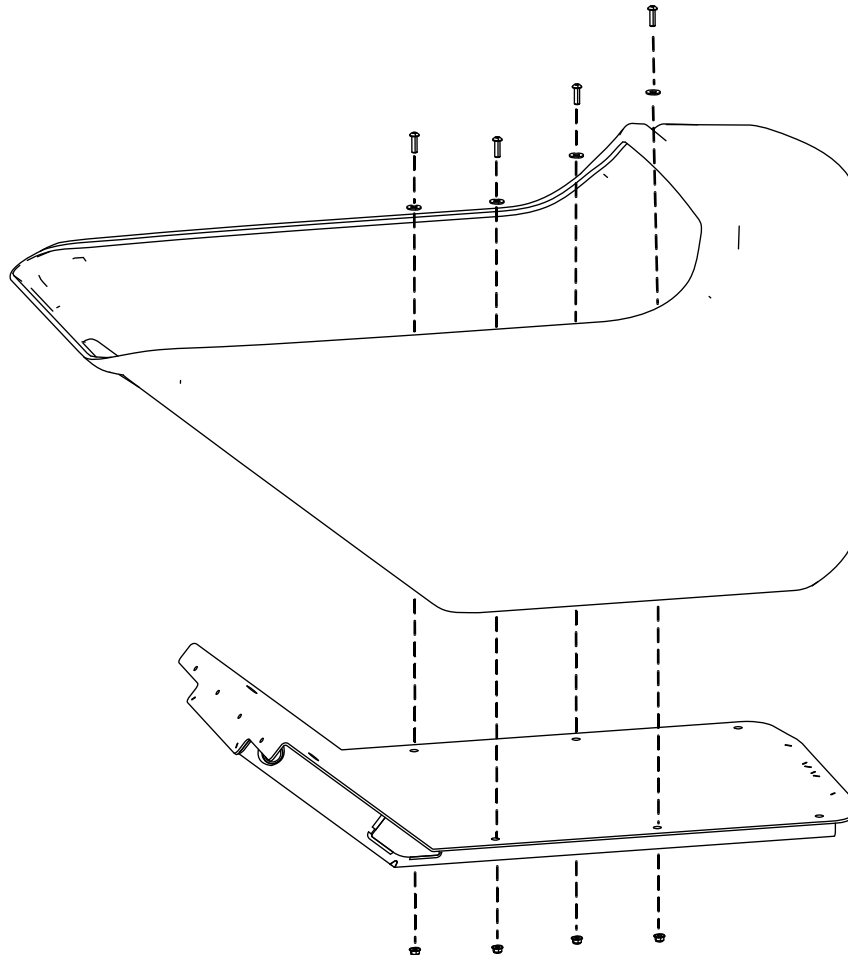


Figure 1

g322995




4. Using the new tub as a template, mark and drill 2 holes (9/16 inch).

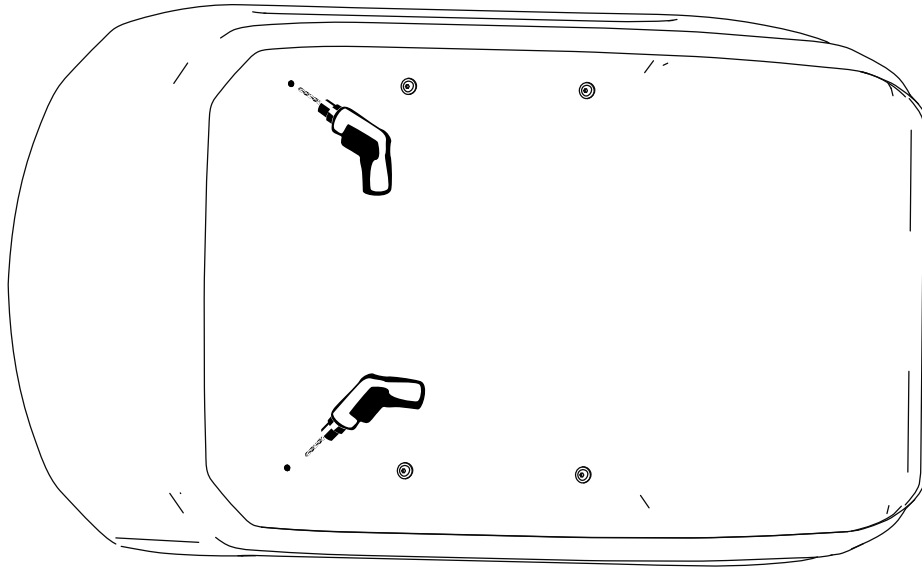

**Figure 2**

g322994

5. Install the remaining hardware to secure the tub to the frame.

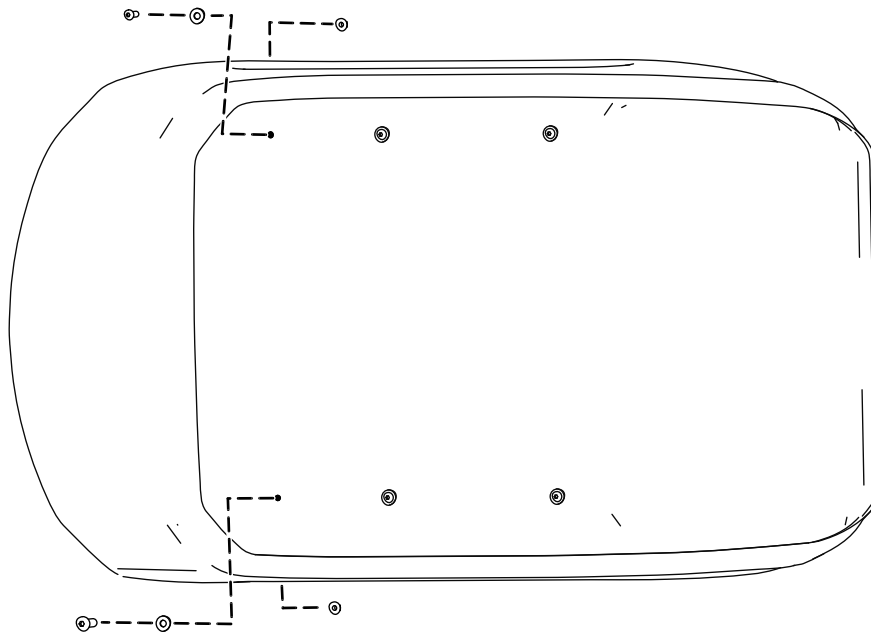

**Figure 3**

g322996

6. Torque the bolt to 37 to 45 N·m (27 to 33 ft-lb).