

TORO®PART NO. 11-6439
PART NO. 11-6429INSTALLATION
INSTRUCTIONS**HOOD LATCH KIT**
GROUNDMASTER® 300 SERIES**REMOVE OLD HOOD LATCH**

1. Unlatch and open hood.
2. Remove screws securing hood hinge to grille and remove hood.
3. Remove (2) rivets securing flexible hood latch to back of rear frame channel. Discard hood latch.

INSTALL NEW HOOD LATCH

1. Using dimensions shown in figure 1, locate, mark and drill (2) .140" dia. holes in back of rear frame channel.
2. Mount new flexible hood latch to back of rear frame channel with rivets included in kit.
3. Install new hood and hook flexible latch to keeper on hood.

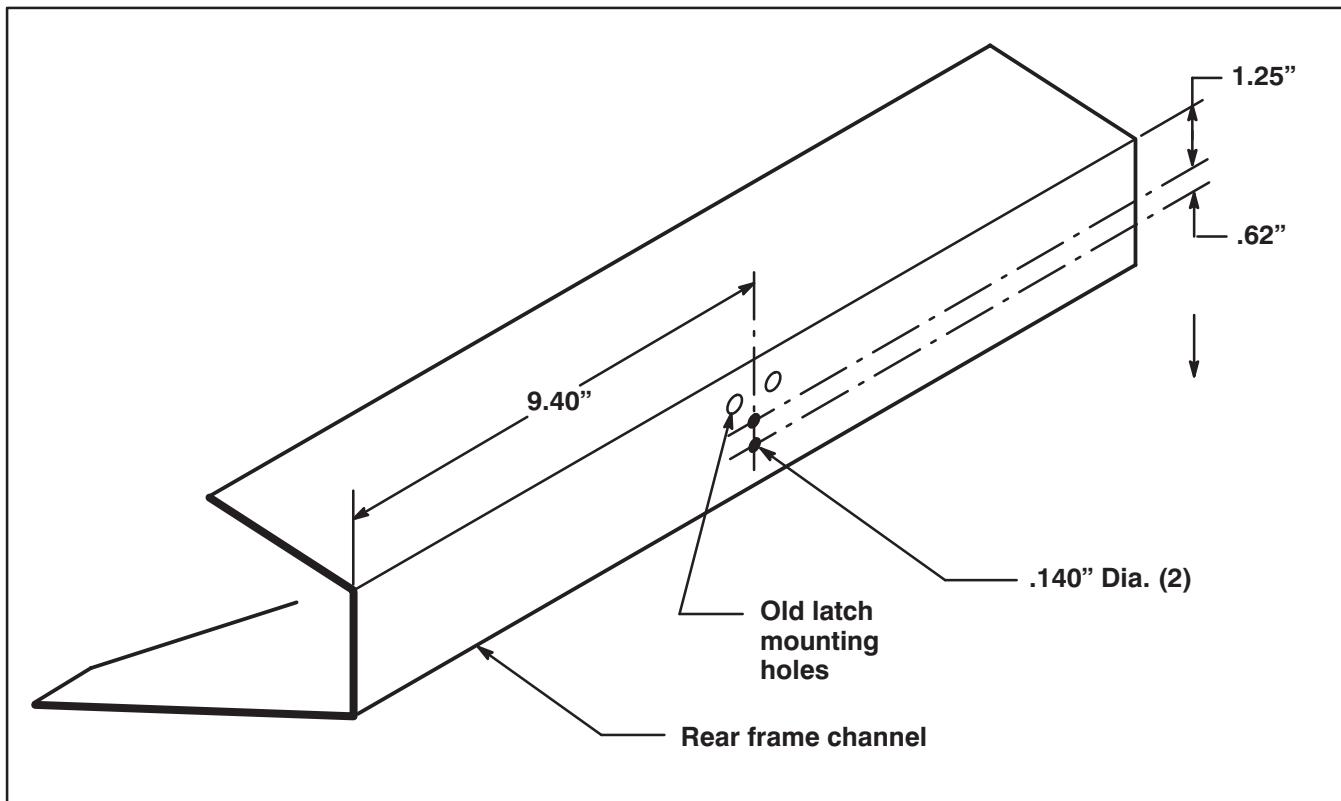


Figure 1