

TORO®

MODEL NO. 52919—2000001 &amp; up

Installation  
Guide

## Colonial Accent Fixture

These instructions are for installing the Colonial Accent lighting fixture.

*The most important part of installing the fixtures is making sure their metal pins pierce the wire inside the cable:*



This

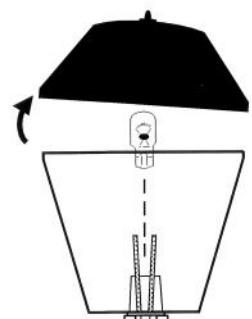


Not This

Correct Piercing Points      Misaligned Piercing Points

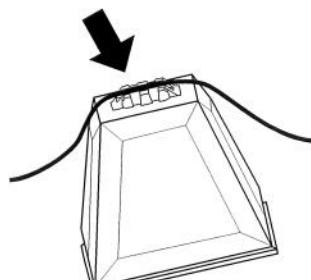


*You'll know they're well-aligned and the wire was pierced when the light comes on.*

**Install the light bulb.**

Remove the fixture cap by pulling straight up on one side.

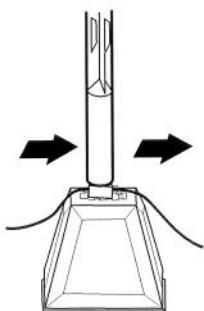
Install the new bulb by pushing it straight down into the socket.

**Attach the electrical cable to the fixture.**

Make sure your power pack is on.

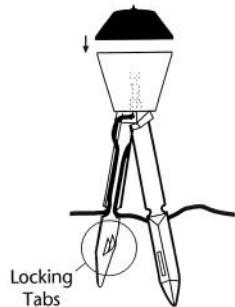
Make sure the brass piercing points in the cable channel at the base of the fixture **are straight**.

Place the electrical cable onto the piercing points and press the cable down **firmly**. If the piercing points contact the wire in the cable, the fixture will light. If it doesn't, make sure the power pack is on (and the photocell is covered to block light), the piercing points **are straight**, and try again. You can reposition the cable; the earlier holes created by the piercing points will self-seal and not cause a hazard.

**Attach the stake to the fixture.**

Slide the closed stake onto the fixture base. (Follow the arrow direction on the fixture.) This locks the cable against the contacts.

After the stake is attached, attach the black cover to the top of the fixture.

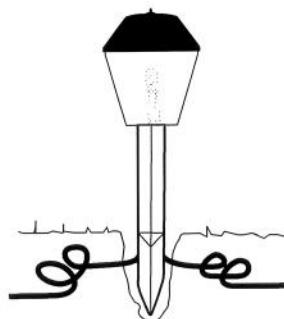


#### **Lay the cable inside the stake.**

Open the stake by pinching the locking tabs together.

Fold the cable into each side of the stake. Align the cable with the notches at the bottom of the stake and snap the stake closed.

Snap on the black cover by pushing it straight down onto the lens.



#### **Put the stake into the ground.**

Make a hole in the ground for the stake. Don't push the stake into the ground without making a hole first because the stake could be damaged. Insert the stake, fill around it with dirt. Do not hammer or press on the lamp fixture assembly.

## **WARNING**

### **! Possible Burns !**

Never remove bulbs while the fixtures are on because you may be burned. Let the bulb cool for 1-2 minutes before removing it.

**IMPORTANT: To ensure your power pack isn't overloaded, use a replacement bulb with the same wattage as the original bulb. Maximum wattage allowed for this fixture is 7 watts.**

#### **BURY OR HIDE YOUR CABLE.**

Once you've made all your connections and experimented with different lighting effects at night, you can bury or hide the cable. Bury the cable at a depth of two to four inches in the ground or under rocks. It's not necessary to tape the end of the cable.

**MAKE SURE YOU REMOVE ANY TAPE OR OTHER COVERING FROM THE PHOTOELECTRIC CELL IN YOUR POWER PACK. .**

**NOW, JUST SIT BACK AND ENJOY THE NEW BEAUTY OF YOUR HOME OR LANDSCAPING.**