

OPERATOR'S MANUAL ADDENDUM

IMPORTANT ASSEMBLY INSTRUCTIONS

BE SURE TO READ OPERATOR'S MANUAL BEFORE OPERATING

©The Toro Company - 1991

TPS

ASSEMBLING HANDLE TUBE

1. Trimmer should appear as shown in Figure 1 when fully assembled.

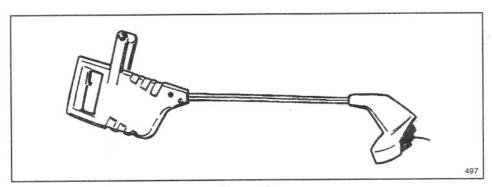


Figure 1

2. Remove hang tag from connector plug extending out of battery housing. Make sure connector plug does not pull back into housing (Fig. 2).

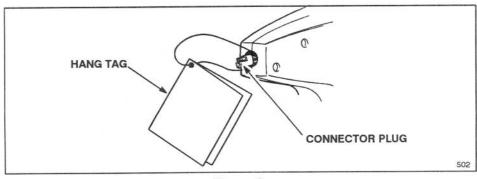


Figure 2

3. Grasp handle tube firmly with one hand and the connector plug extending out of housing with the other (Fig. 3).

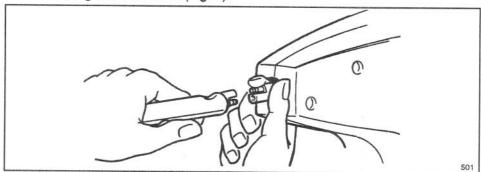


Figure 3

4. Connect plug in battery housing with connector plug extending out of tube (Fig. 4). Be sure connectors are securely connected to one another before inserting tube into housing.

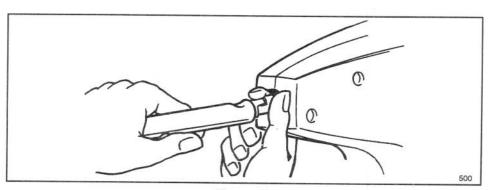


Figure 4

5. Grasp handle tube firmly and slide tube into battery housing. Align screw holes in housing with grooves in tube (Fig. 5).

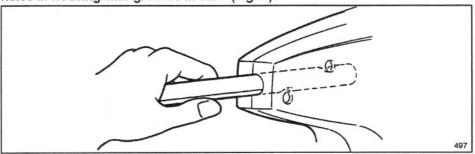


Figure 5

6 Secure battery housing to tube using the (2) screws and hex nuts supplied (Fig. 6).

Note: Rear screw installation will be easier if you use a blunt object such as a pencil eraser to hold the rear nut in place while installing the screw.

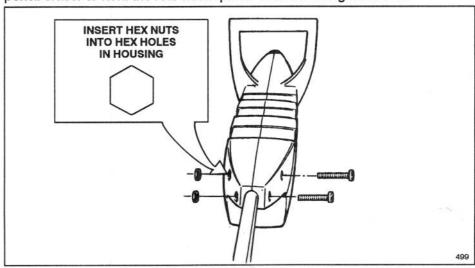


Figure 6