



Rear Attachment Receiver

Workman® GTX Series Utility Vehicle with Steel Cargo Bed

Model No. 07186

Installation Instructions

Note: Determine the left and right sides of the machine from the normal operating position.

Loose Parts

Use the chart below to verify that all parts have been shipped.

| Procedure | Description | Qty. | Use |
|-----------|---|----------------------------|---------------------------------------|
| 1 | No parts required | — | Prepare the machine for installation. |
| 2 | Rear attachment receiver Jam nut Button-head bolt T-handle Locknut (3/8 inch) Carriage bolt (3/8 x 1 inch) | 1 1 1 1 4 4 | Install the kit. |


1

Preparing the Machine

No Parts Required

Procedure

1. Park the machine on a level surface.
2. Engage the parking brake.
3. Shut off the engine and remove the key.

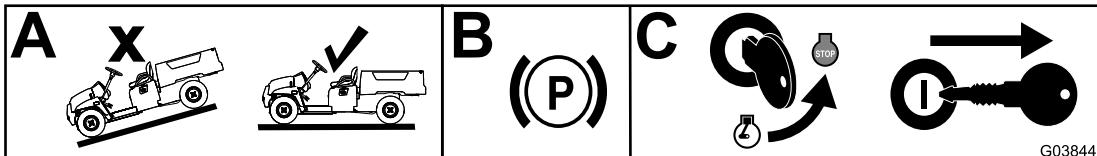

G038447

Figure 1



* 3 4 4 5 - 8 0 8 *

2


Installing the Kit

Parts needed for this procedure:

| | |
|---|------------------------------|
| 1 | Rear attachment receiver |
| 1 | Jam nut |
| 1 | Button-head bolt |
| 1 | T-handle |
| 4 | Locknut (3/8 inch) |
| 4 | Carriage bolt (3/8 x 1 inch) |

Procedure

1. Secure the T-handle to the rear attachment receiver using the jam nut and button-head bolt (Figure 2).

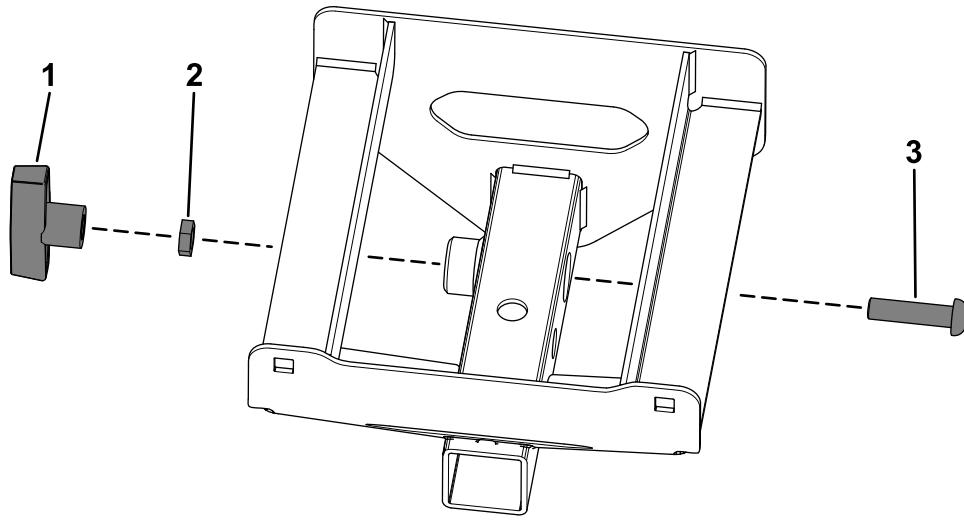

g355574

Figure 2

1. T-handle
2. Jam nut
3. Button-head bolt

2. Secure the rear attachment receiver to the bed using 4 carriage bolts (3/8 x 1 inch) and 4 locknuts (3/8 inch) as shown in [Figure 3](#).
3. Torque the 4 locknuts (3/8 inch) to 28 N·m (21 ft-lb).

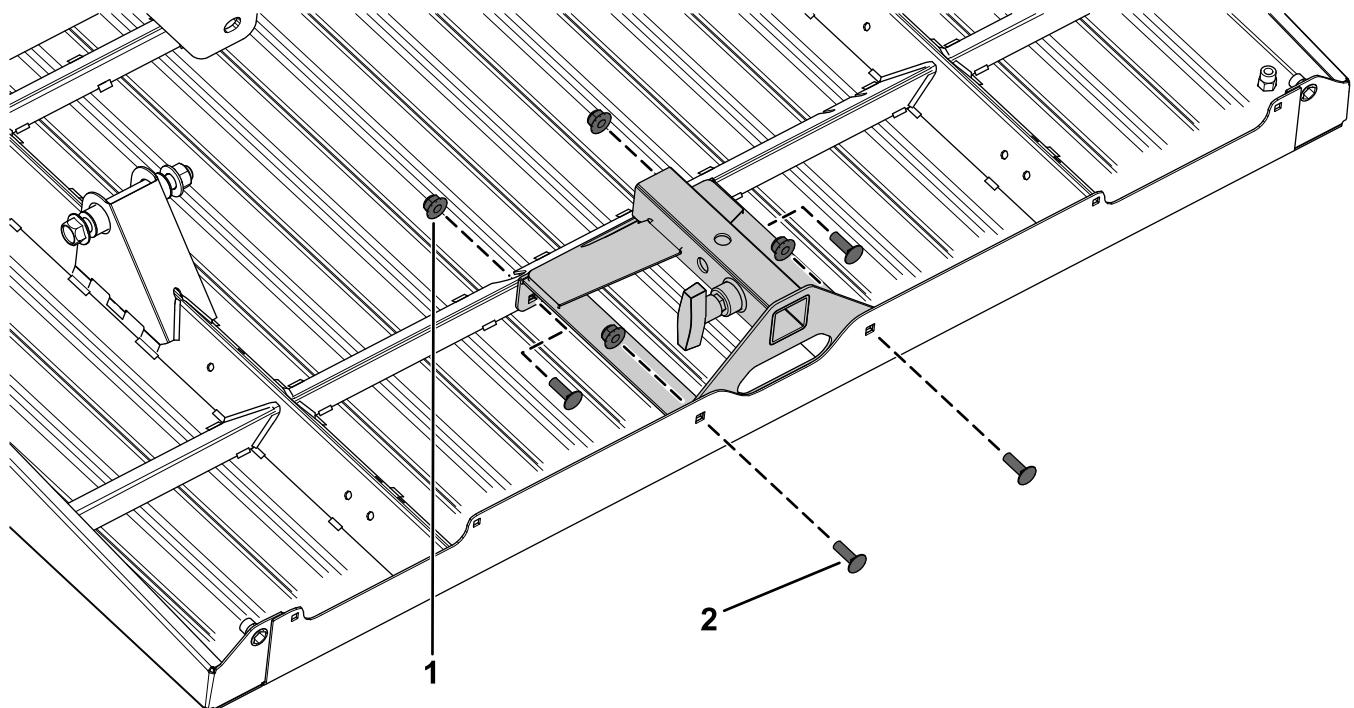


Figure 3

1. Locknut (3/8 inch)
2. Carriage bolt (3/8 x 1 inch)



Count on it.