Form No. 3326-117

TORO®

Smooth Castor Wheel

TimeCutter™ Z Riding Mowers

Part No. 105-1856

Installation Instructions

1. Remove the bolt and nut attaching the existing castor wheel (Fig. 1).
2. Remove the spanner from the existing wheel and insert it into the smooth castor wheel (Fig. 1).
3. Attach the smooth castor wheel to the castor fork with the existing bolt and nut (Fig. 1).
4. Repeat the procedure with the other castor wheel.

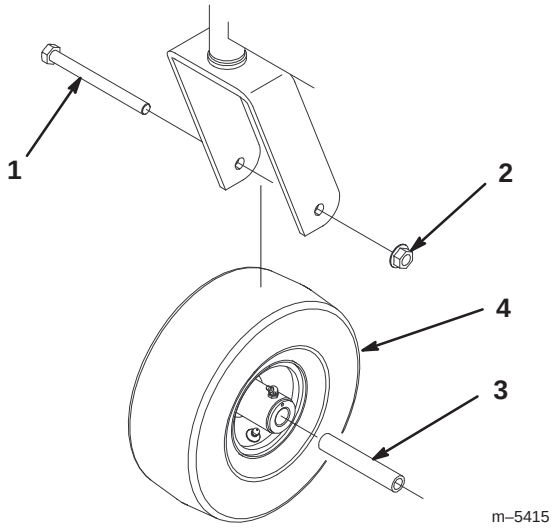


Figure 1

1. Bolt
2. Nut
3. Spanner
4. Castor wheel

© 2001 by The Toro Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196

All Rights Reserved
Printed in the USA