



Heavy-Duty Rear Hitch

Workman® 1100/2100 and Twister™ Utility Vehicle

Model No. 07275

Installation Instructions

Installing the Hitch

1. Position the machine on a level surface. Set the parking brake, turn the ignition off, and remove the key.



Caution



If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition switch before you do any maintenance.

Note: Installation may be easier if the cargo box is removed.

2. Remove the existing hitch and hardware. Save them for future installation.
3. Position the heavy-duty hitch on the rear of the frame as shown in Figure 1.
4. Secure the hitch with 8 flange head bolts and locknuts (Fig. 1). Tighten the fasteners to 25 ft.-lb. (34 N·m).

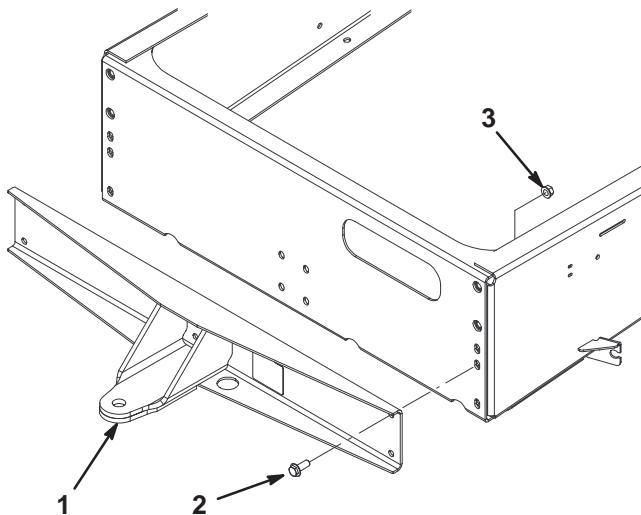


Figure 1

1. Heavy-duty hitch
2. Flange head bolts
3. Locknuts

Towing



Warning



Towing a load could cause loss of control or tipping of the vehicle, resulting in personal injury.

- To provide adequate braking and traction, always load the cargo box when trailering. Do not exceed the Gross Trailer Weight limits.
- Do not tow a load that exceeds 800 lb. (363 kg).
- Do not exceed a tongue weight of 100 lb. (45 kg).
- Never exceed 10 MPH (16 km/h) when towing a load.