



Floor Mat Kit

Workman[®] 1100/2100 and Twister[™] Utility Vehicle

Model No. 07295

Model No. 07295R

Form No. 3326-274 Rev B

Installation Instructions

1. Position the machine on a level surface. Set the parking brake, turn the ignition off, and remove the key.



Caution



If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition switch before you do any maintenance.

2. Remove the 6 flange bolts and locknuts at the front of the floor plate.
3. Attach the floor mat to the floor of the vehicle with the existing 6 flange bolts, new washers, and existing locknuts (Fig. 1). Torque the bolts to 175–225 in.-lb. (20–25 N·m).

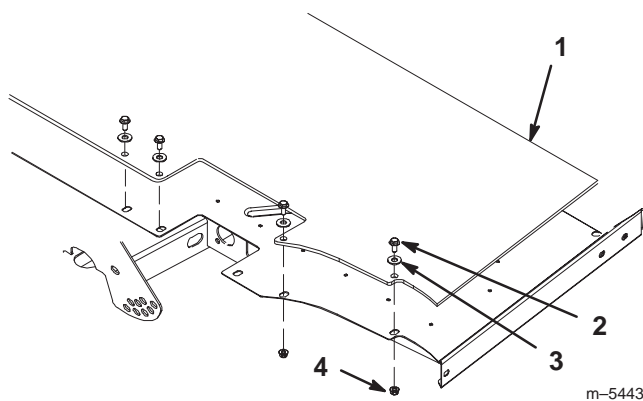


Figure 1

- | | |
|----------------|------------|
| 1. Floor mat | 3. Washer |
| 2. Flange bolt | 4. Locknut |