



Stake Side Kit

Workman® 1100/2100 and Twister™ Utility Vehicle

Model No. 07290

Model No. 07290R

Form No. 3326-267 Rev D

Installation Instructions

1. Position the machine on a level surface. Set the parking brake, turn the ignition off, and remove the key.



Caution




If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition switch before you do any maintenance.

2. Using Figure 1 as a guide, assemble the front boards and side boards together with the screws (1/4 x 1-1/2 in.) and washers. Torque the screws to 90–110 in.-lb. (10–12 N·m).

Note: The holes in the horizontal board in the front assembly are spaced further apart than the holes in the horizontal boards in the side assembly.

3. For a tighter fit against the box, attach the shims to the assemblies with the short screws (1/4 x 3/4 in.) (Fig. 1). Tighten the screws, being careful not to over-tighten them.
4. Slide the front assembly into the slots at the front of the cargo bed and the side assemblies into the slots at the sides of the cargo bed (Fig. 1).

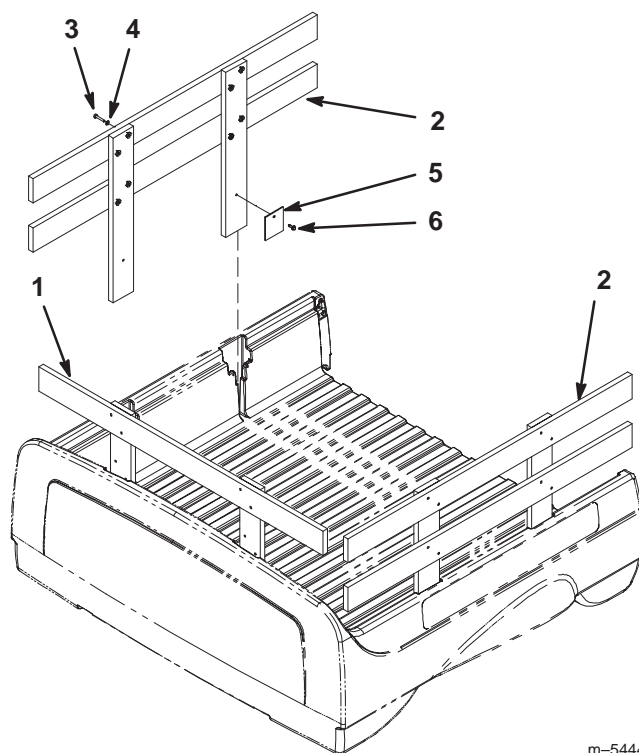

m-5444

Figure 1

- | | |
|---------------------------|-------------------------|
| 1. Front assembly | 4. Washer |
| 2. Side assembly | 5. Shim |
| 3. Screw, 1/4 x 1-1/2 in. | 6. Screw, 1/4 x 3/4 in. |