



Solid Windshield Kit

Workman® 1100/2100 and Twister™ Utility Vehicle

Model No. 07294
Model No. 07294R


Form No. 3326-472 Rev A

Installation Instructions

Note: To attach the Solid Windshield Kit, you must have a Canopy Kit (Model No. 07297 or 07297R) installed on your vehicle.

Assembly

1. Position the machine on a level surface. Set the parking brake, turn the ignition off, and remove the key.

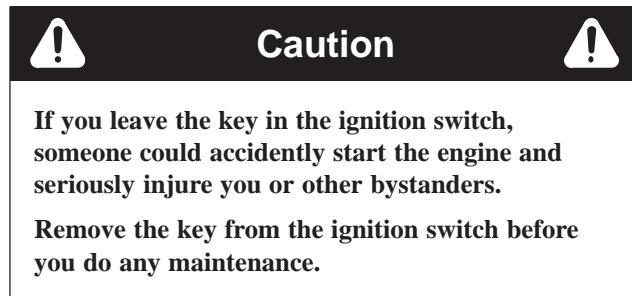

2. Attach the windshield tube to the front support tubes on the canopy using 2 screws, flat washers, and capped nuts (Fig. 1).

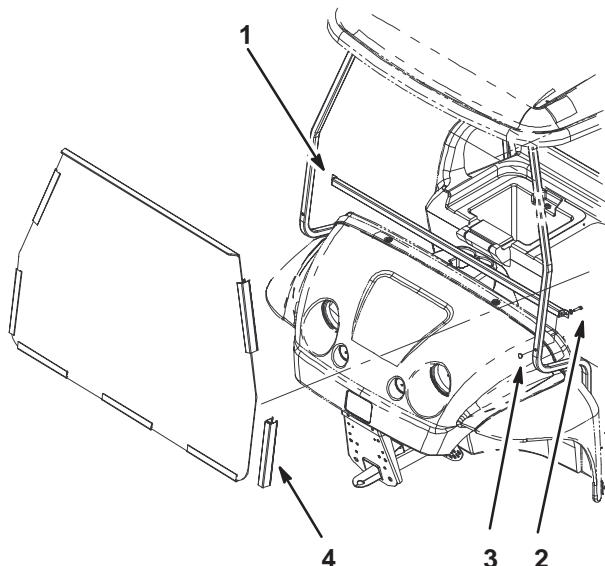


Figure 1

| | |
|--------------------------|-----------------|
| 1. Windshield tube | 3. Capped nut |
| 2. Screw and flat washer | 4. Snap-on clip |

3. Remove the protective film from the windshield.
4. Install the snap-on clips to windshield as shown in Figure 1.
5. Attach the snap-on clips on the side of the windshield to the canopy frame. Align the clips on the bottom of the windshield with the windshield tube and press the windshield securely into place (Fig. 1).
6. Ensure that all of the clips are secured firmly to the frame.

Maintenance



Important To prevent degrading of the windshield or clips, clean the windshield with mild soap and water only. Do not use glass cleaners and solvents such as ammonia, alcohol, and petroleum distillates.