

TORO®

PART NO. 80-3350

**INSTALLATION
INSTRUCTIONS****FRONT WEIGHT KIT**

(FOR PROLINE WALK MOWERS)

1. Center weight on front of carrier frame.
2. Using weight as a template, locate, mark and drill (2) 3/8" dia. holes thru front of carrier frame.
3. Mount weight on rear (inside) of carrier frame with (2) capscrews and locknuts provided in kit.

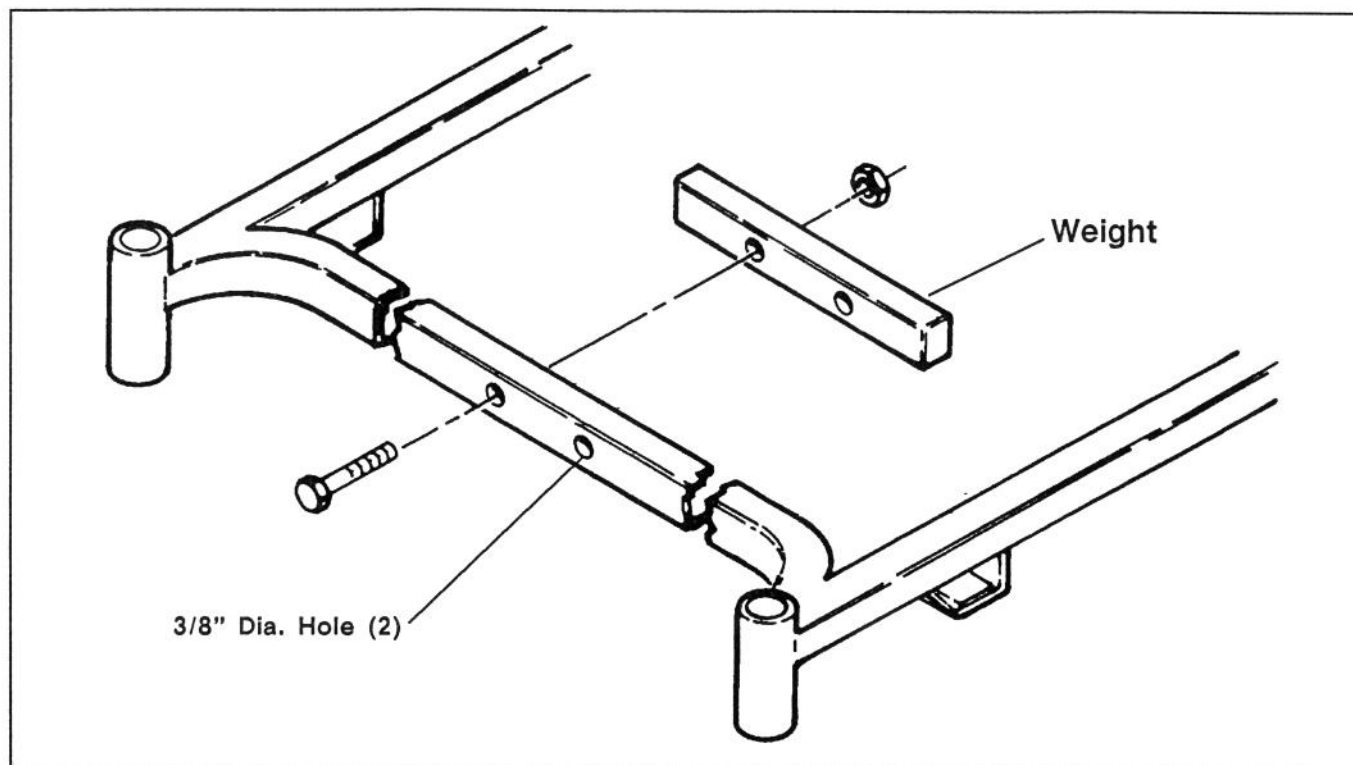


Figure 1

