Form No. 3461-906 Rev A

Rear View Mirror Kit

Model No. 08141

Installation Instructions

Installation

Preparing the Machine

1. Park the machine on a level surface.
2. Shift the transmission lever to the P (Park) position.
3. Shut off the engine and remove the key.
4. Wait for all movement to stop.

Installing the Mirror


For Workman® UTX Models

1. Use 2 bolts to secure the mirror bracket to the front crosslink.

   Torque the bolts to 3 N·m (30 in-lb).

2. Use a locknut to secure the mirror to the mirror bracket. Hold the mirror jam nut with a wrench while tightening the locknut to keep mirror pivot tension correct.

   Torque the locknut to 26 N·m (228 in-lb).

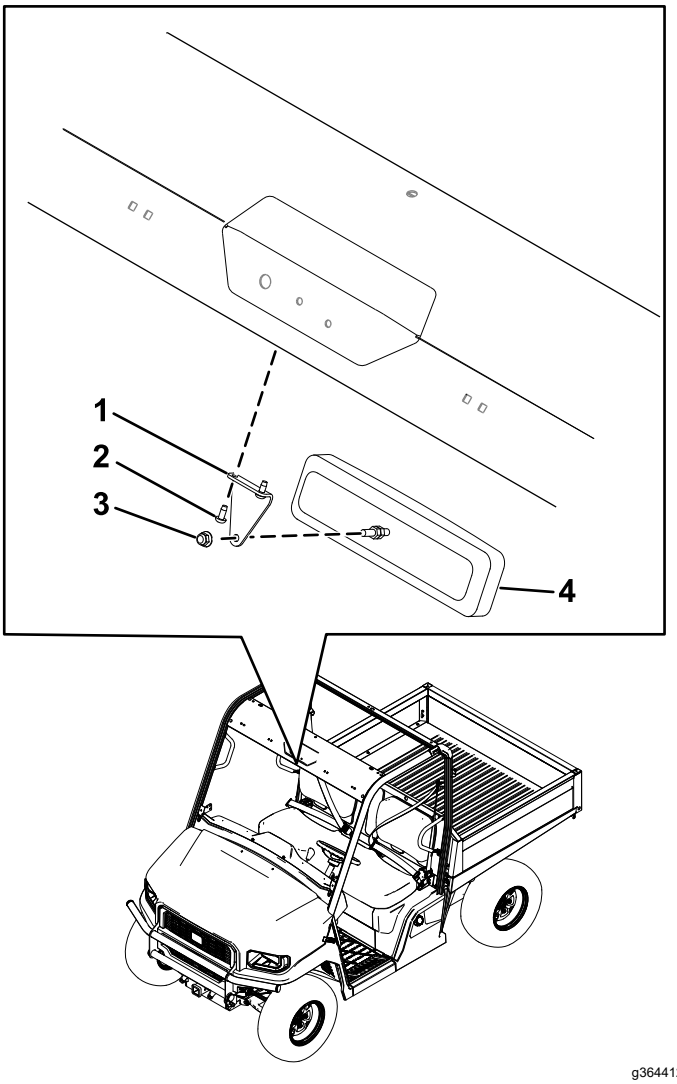

g364412

Figure 1

1. Mirror bracket
2. Bolt
3. Locknut
4. Mirror

© 2023—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

Original Instructions (EN)
Printed in the USA
All Rights Reserved

3461-906

Installing the Mirror


For Vista™ Models

1. Use 2 bolts to secure the mirror bracket to the front crosslink.

   Torque the bolts to 3 N·m (30 in-lb).

2. Use a locknut to secure the mirror to the mirror bracket. Hold the mirror jam nut with a wrench while tightening the locknut to keep mirror pivot tension correct.

   Torque the locknut to 26 N·m (228 in-lb).

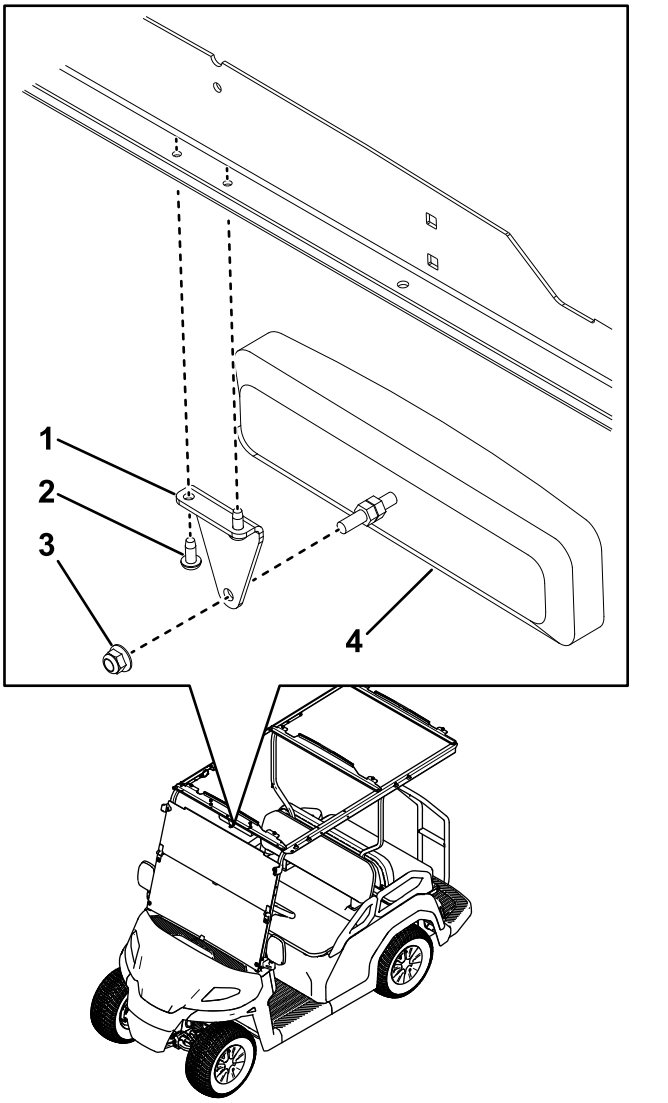

g428937

Figure 2

Canopy hidden from view

1. Mirror bracket
2. Screw
3. Locknut
4. Mirror