



Rear View Mirror Kit

Model No. 08141

Form No. 3461-906 Rev A

Installation Instructions

Installation

Preparing the Machine

1. Park the machine on a level surface.
2. Shift the transmission lever to the P (Park) position.
3. Shut off the engine and remove the key.
4. Wait for all movement to stop.

Installing the Mirror

For Workman® UTX Models

1. Use 2 bolts to secure the mirror bracket to the front crosslink.
Torque the bolts to 3 N·m (30 in-lb).
2. Use a locknut to secure the mirror to the mirror bracket. Hold the mirror jam nut with a wrench while tightening the locknut to keep mirror pivot tension correct.
Torque the locknut to 26 N·m (228 in-lb).


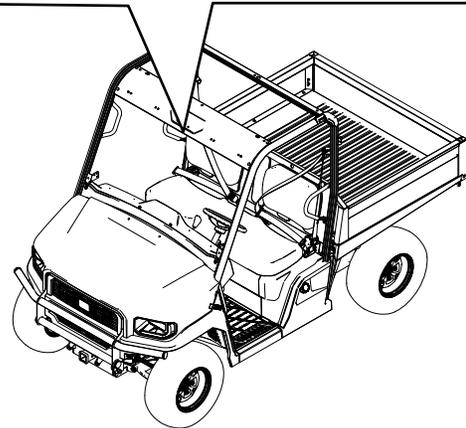


Figure 1

g364412

- | | |
|-------------------|------------|
| 1. Mirror bracket | 3. Locknut |
| 2. Bolt | 4. Mirror |

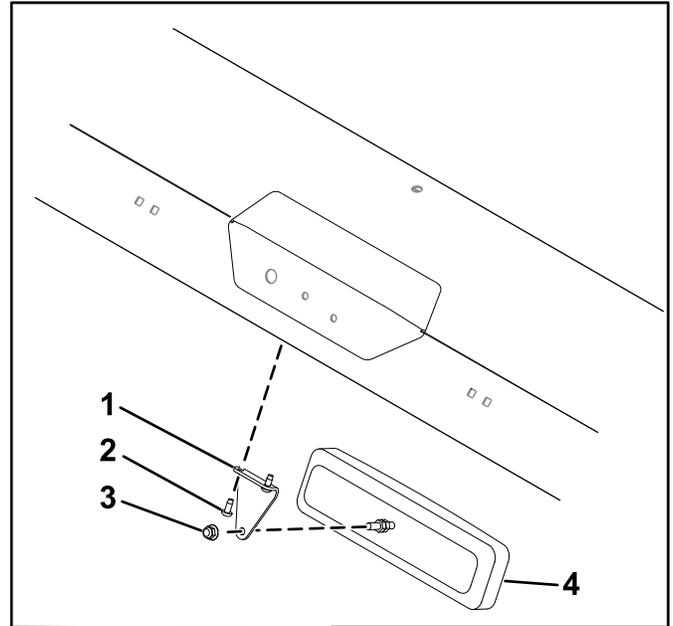

Installing the Mirror

For Vista™ Models

1. Use 2 bolts to secure the mirror bracket to the front crosslink.
Torque the bolts to 3 N·m (30 in-lb).
2. Use a locknut to secure the mirror to the mirror bracket. Hold the mirror jam nut with a wrench while tightening the locknut to keep mirror pivot tension correct.
Torque the locknut to 26 N·m (228 in-lb).

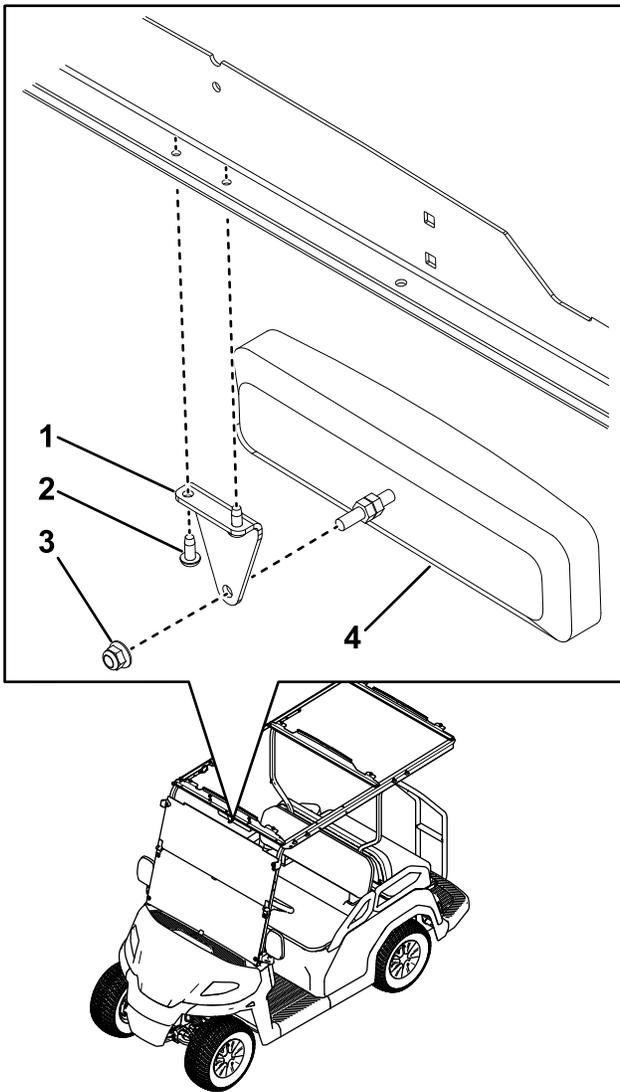


Figure 2

Canopy hidden from view

g428937

- | | |
|-------------------|------------|
| 1. Mirror bracket | 3. Locknut |
| 2. Screw | 4. Mirror |