



Stake Pocket Adapter Kit

2011 and After Workman® MD Series Utility Vehicle

Model No. 119-9604

Installation Instructions

Loose Parts

Use the chart below to verify that all parts have been shipped.


| Description | Qty. | Use |
|---------------------------------|------|------------------------------------|
| No parts required | — | Prepare the machine. |
| Receiver assembly | 2 | Install the stake pocket adapters. |
| Hex-head screw (1/4 x 3/4 inch) | 4 | |

Preparing the Machine

1. Park the machine on a level surface.
2. Engage the parking brake.
3. Shut off the machine and remove the key.

Installing the Stake Pocket Adapters

1. Install a receiver assembly into the hole.
2. Secure the receiver to the bed using 2 hex-head screws (1/4 x 3/4 inch).
3. Torque the hex-head screws (1/4 x 3/4 inch) to 4 to 5 N·m (35 to 45 in-lb).

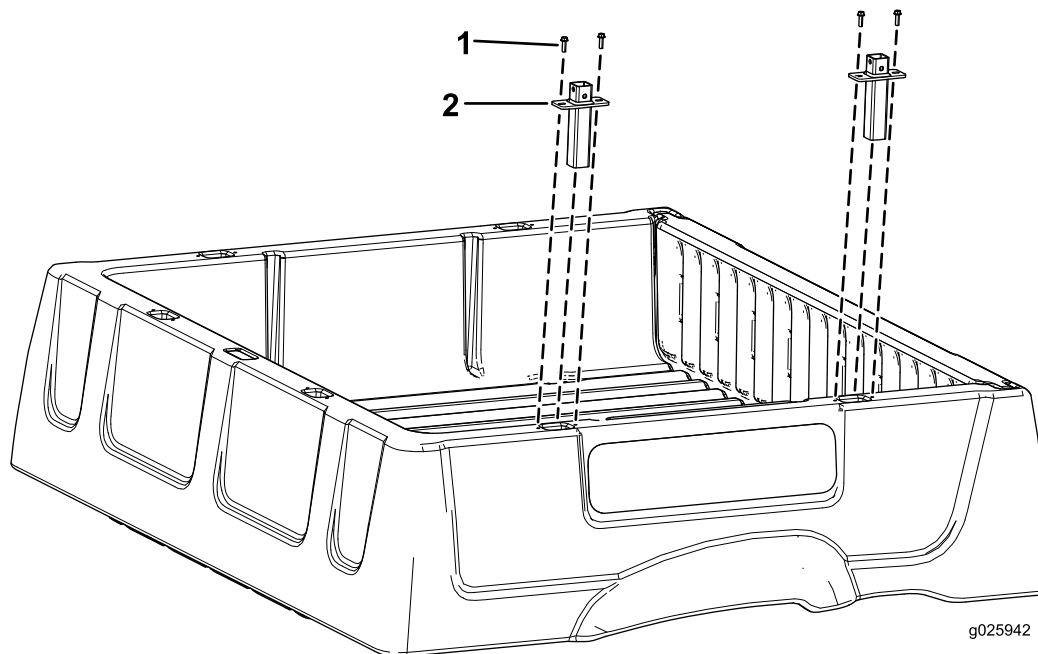

g025942

g025942

1. Hex-head screw (1/4 x 3/4 inch)

2. Receiver assembly

