Folding Windshield Kit Workman® GTX Utility Vehicle with Canopy Model No. 07923

Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
No parts required	_	Prepare the machine.
Folding windshield assembly	1	Install the folding windshield (for canopy Models 07921 and 07922).
Rubber clamp	2	
Short plastic rivet	2	
Long plastic rivet	8	
Plastic spacer	8	
Folding windshield assembly	1	Install the folding windshield (for canopy Models 07140 and 07141 and canopy with ROPS Model 07169).
Rubber clamp	2	
Short plastic rivet	2	
Long plastic rivet	8	
Plastic spacer	8	

Preparing the Machine

- Park the machine on a level surface.
- 2. Engage the parking brake.
- Shut off the engine and remove the key. 3.

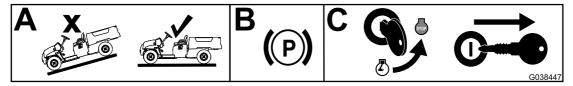



Figure 1

g038447

Installing the Folding Windshield

For Canopy Models 07921 and 07922

1. Unfold the windshield and secure the upper portion of the windshield to the canopy support tubes using the 2 rubber clamps and 2 short plastic rivets in the upper holes (Figure 2).

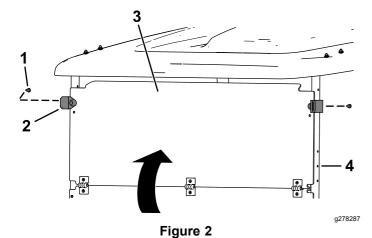

- 1. Short plastic rivet
- 2. Rubber clamp
- 3. Windshield—upper portion
- 4. Canopy support tube
- 2. Align the holes in lower portion of the windshield with the holes in the canopy support tubes (Figure 3).
- 3. Secure the sides of the windshield to the canopy support tubes using 6 plastic spacers and 6 long plastic rivets (Figure 3).

Note: Ensure that you install the plastic spacers between the windshield and canopy support tubes.


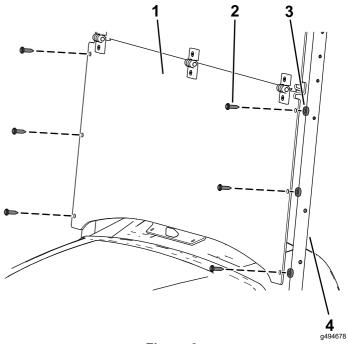



Figure 3

- 1. Windshield—lower portion
- 3. Plastic spacer
- 2. Long plastic rivet
- 4. Canopy support tube
- 4. Using the windshield as the template, drill 2 holes (8 mm or 5/16 inch) into the dash (Figure 4).

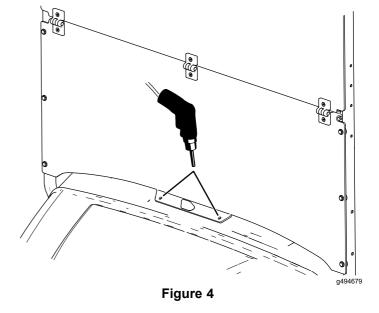

5. Secure the bottom of the lower portion of the windshield to the dash using 2 plastic spacers and 2 long plastic rivets (Figure 5).

Note: Ensure that you install the plastic spacers between the windshield and dash.

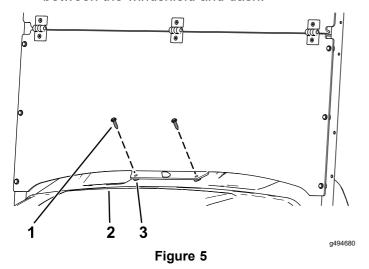

3. Plastic spacer

- 1. Long plastic rivet
- 2. Dash

Installing the Folding Windshield

For Canopy Models 07140 and 07141 and Canopy with ROPS Model 07169

1. Mark and drill 3 holes (8 mm or 5/16 inch) in each canopy support tube using the measurements shown in Figure 6.

Important: Ensure that you drill through 1 side of the canopy support tubes only.


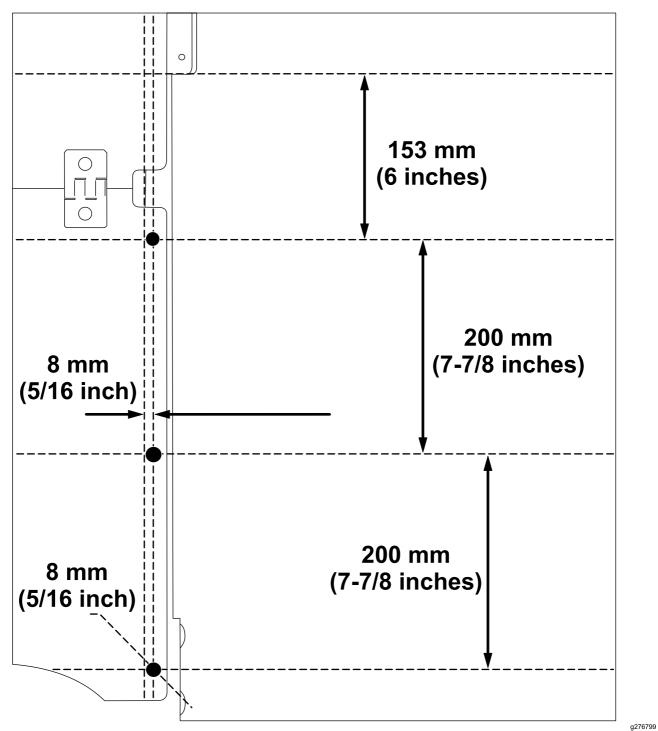


Figure 6
Driver's side tube shown

4

2. Unfold the windshield and secure the upper portion of the windshield to the canopy support tubes using the 2 rubber clamps and 2 short plastic rivets in the lower holes (Figure 7).

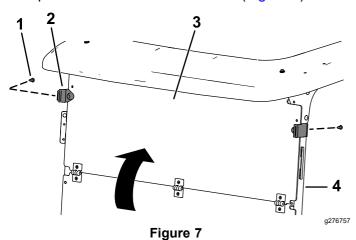

- Short plastic rivet
- 3. Windshield—upper portion
- Rubber clamp
- 4. Canopy support tube
- Align the holes in lower portion of the windshield with the holes in the canopy support tubes (Figure 8).
- Secure the sides of the windshield to the canopy support tubes using 6 plastic spacers and 6 long plastic rivets (Figure 8).

Note: Ensure that you install the plastic spacers between the windshield and canopy support tubes.


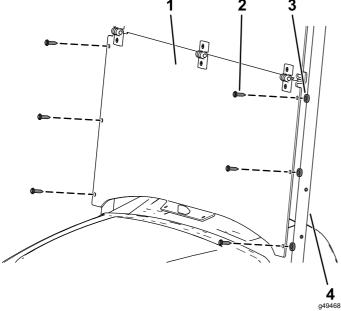


Figure 8


- 1. Windshield—lower portion 3. Plastic spacer
- 2. Long plastic rivet
- 4. Canopy support tube

Using the windshield as the template, drill 2 holes (8 mm or 5/16 inch) into the dash (Figure

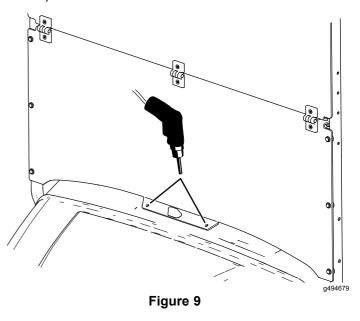

Secure the bottom of the lower portion of the windshield to the dash using 2 plastic spacers and 2 long plastic rivets (Figure 10).

Note: Ensure that you install the plastic spacers between the windshield and dash.

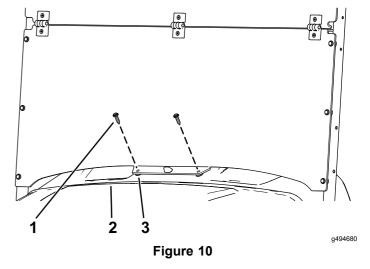

- Long plastic rivet
- 2. Dash

3. Plastic spacer

Operation

Transporting a Machine with the Windshield Installed

When transporting a machine with the folded windshield installed, ensure that you follow these recommendations:

- The machine is facing forward during transportation.
- The folding windshield is secured in the down position using the rubber clamps.
- Do not exceed a vehicle speed of 96 km/h (60 mph).

Maintenance

Cleaning the Windshield

- 1. Rinse the windshield with lukewarm water (60° C or 140° F).
- 2. Using a soft cloth or sponge, wash the windshield with mild-detergent soap to clear the dirt and grime.

Important: Do not scrub the windshield with a brush or rough fiber.

- Rinse the windshield with lukewarm water (60° C or 140° F).
- 4. Dry the windshield using a soft cloth to prevent water spots.

Notes:

