



Brush Guard Kit Twister™ Utility Vehicle Model No. 19051

Form No. 3329-402

Addendum

Note: A spacer has been provided to adapt the brush guard kit with Twister 1600 Utility Vehicles.

Place the spacer between the brush guard and the vehicle after removing existing bumper. Follow the installation instructions provided to attach the brush guard and spacer to the vehicle. Spacer design allows for only one orientation. (See Fig. 1)

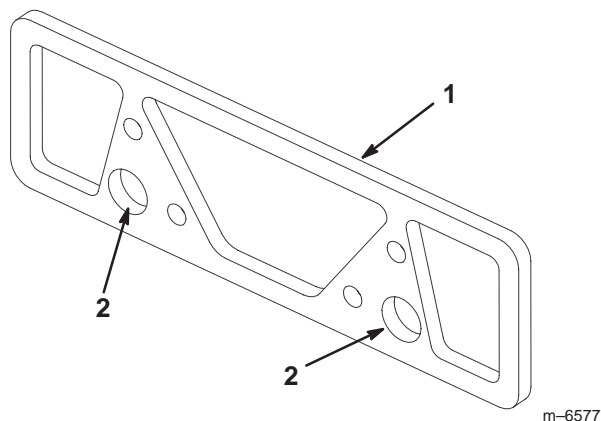


Figure 1

1. Spacer

2. Mount holes