

## Toro Workman Cab Update Kit 108-7030

4-14905

Update detailed request list, Dec. 28, 2004.

1. In the mount kit box; Rear seal flaps -change out the short seal flaps with the long seal flaps.  
See Figure 1.

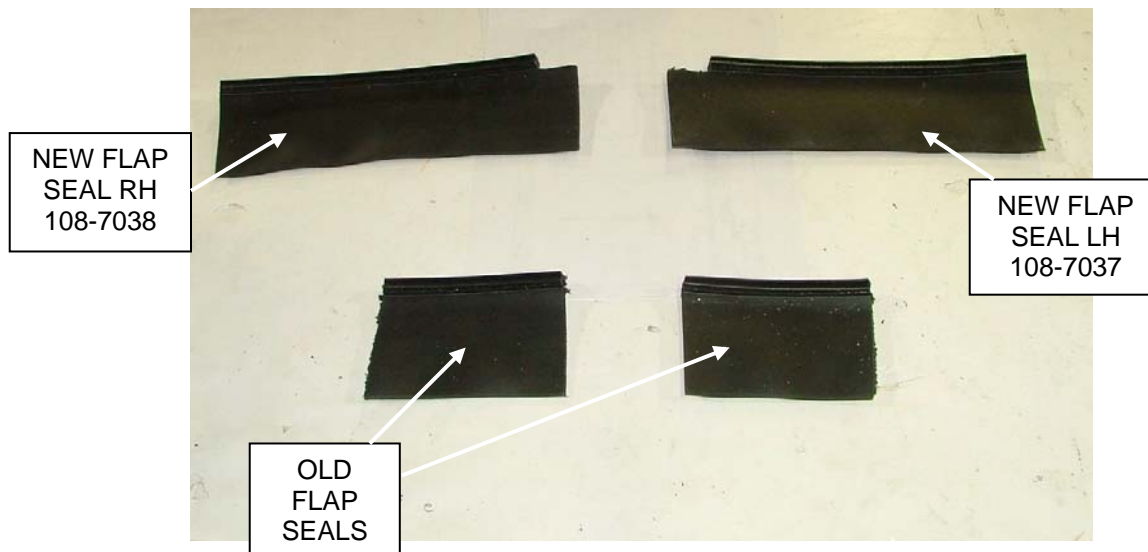


Figure 1

2. Front hood seal; Replace the small bubble rubber with the larger bubble rubber 108-3086.  
See Figure 2



Figure 2

## Toro Workman Cab Update Kit 108-7030

4-14905


Remove roof for steps 3 and 4.

3. Roof sealing; Remove underside rubber washers. See Figure 3.



**Figure 3**

4. Install profile corner seal pads ( $\frac{1}{2}$ " x 2 x 2) Part No. 108-7031. Install (4) Qty in front, (2) Qty in rear. See Figures 4a, 4b and 4c.

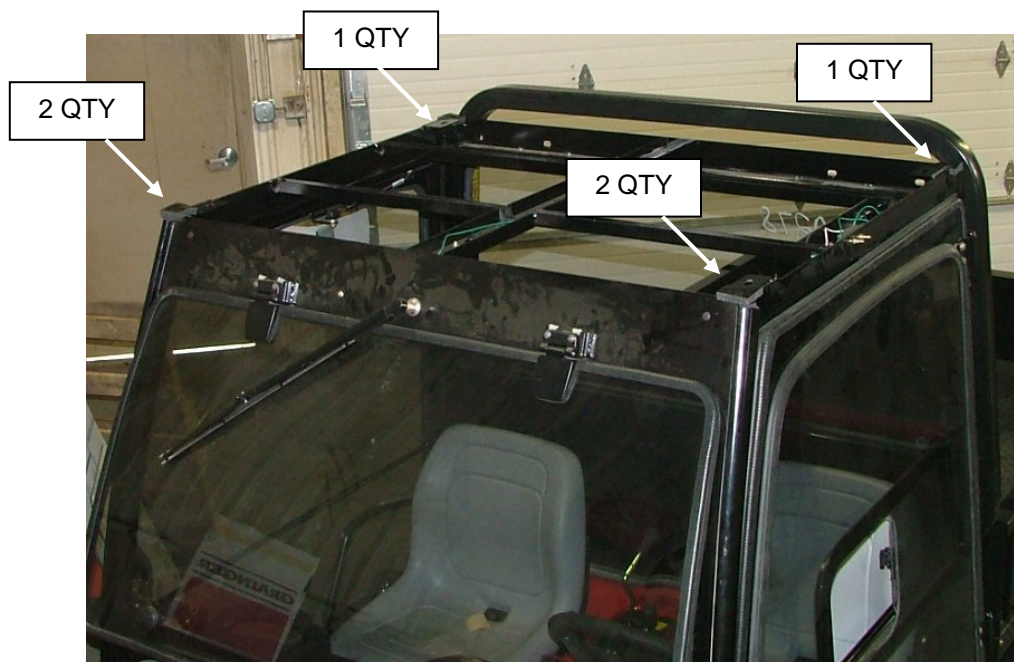

**Figure 4a**



# Toro Workman Cab Update Kit 108-7030

4-14905



Figure 4b



Figure 4c

## Toro Workman Cab Update Kit 108-7030

4-14905

5. Re-install roof.
6. Door seal issue; Add .312" X .750" adhesive seal to the front and top profile tube-door sealing surface, each side of cab. See Figure 6. Adjust hinges and striker stud if required.



Figure 6

UPDATE KIT 108-7030

ITEM	DESCRIPTION	TORO No.	QTY
1	05-10518 INSTRUCTIONS	3353-568	1
2	1-44072 REAR FLAP LH	108-7037	1
3	1-44073 REAR FLAP RH	108-7038	1
4	3-10611 BUBBLE RUBBER LARGE	108-3086	8.16
5	3-18376 RUBBER SEAL STRIP PSA .312 x .750	108-7032	15.33
6	3-17966 BOX, 12 x 12 x 9	N/A	1
7	3-18320 SEAL PAD BLACK POLY	108-7031	6