



Replacement Housing Kit


For 2005 and After 21in Super Recyclers

Model No. 108-4750

Installation Instructions

Installation

Note: This decal is only installed on domestic blade brake clutch (BBC) models. This decal is shipped loose.

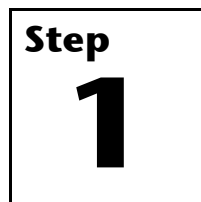

Parts needed for this step:

1	Decal
---	-------

Procedure

1. Clean the area where the decal will be installed.
2. Install the decal in the position shown in Figure 1.

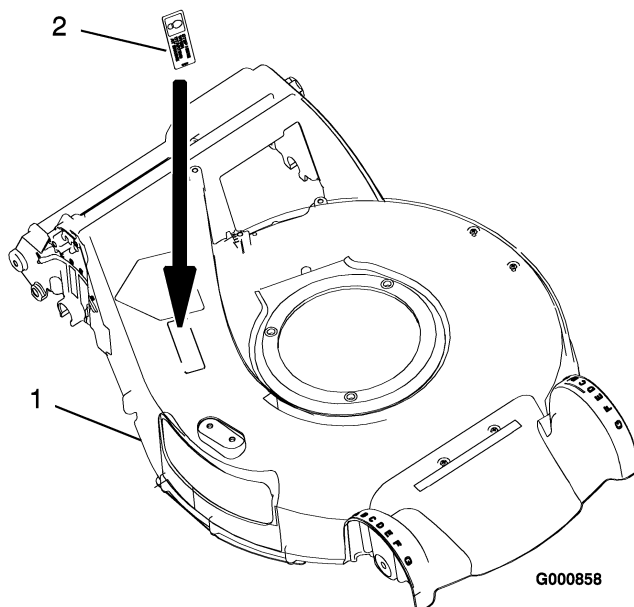


Figure 1

1. Mower deck housing 2. Decal




Kit de alojamiento de repuesto

Super Recyclers de 21 pulgadas, de 2005 y posteriores
Nº de modelo 108-4750

Instrucciones de Instalación

Montaje

Nota: Esta pegatina solamente está instalada en los modelos nacionales con freno/embrague de cuchilla (BBC). Esta pegatina se suministra suelta.

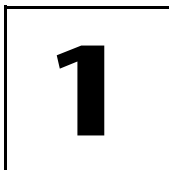

Piezas necesarias en este paso:

1	Pegatina
---	----------

Procedimiento

1. Limpie la zona donde se va a instalar la pegatina.
2. Instale la pegatina en la posición mostrada en Figura 1.

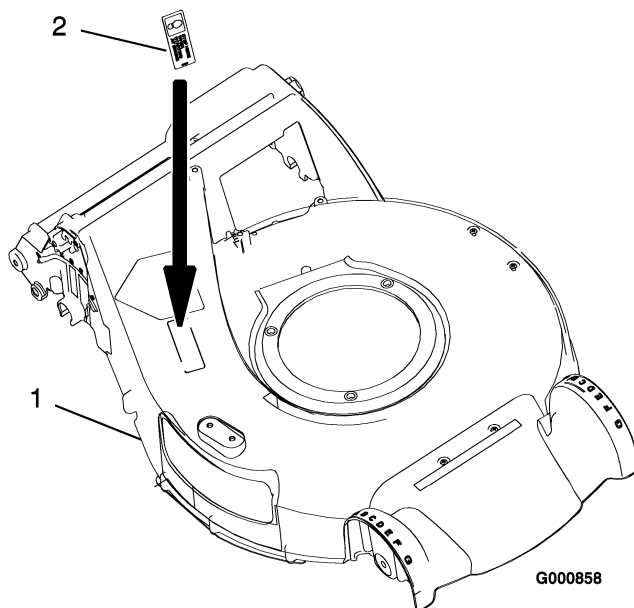


Figura 1

1. Alojamiento de la plataforma de corte
2. Pegatina



Kit carter de rechange


Pour les Super Recycler 21 pouces à partir de 2005

N° de modèle 108-4750

Instructions d'installation

Mise en service

Remarque: Cet autocollant n'apparaît que sur les modèles domestiques à embrayage de frein de lame (BBC) Il est livré non collé.

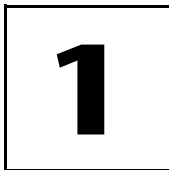

Pièces nécessaires pour cette opération :

1	Autocollant
---	-------------

Procédure

1. Nettoyez la surface où l'autocollant doit être apposé.
2. Collez l'autocollant à la position indiqué à la Figure 1.

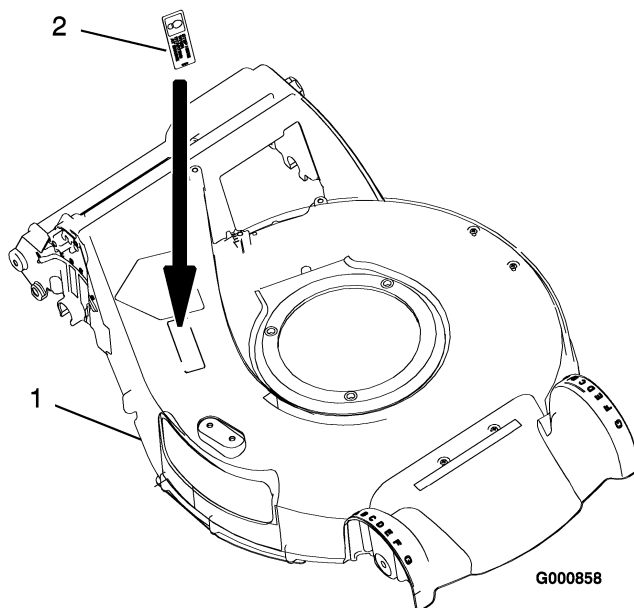


Figure 1

1. Carter du plateau de coupe 2. Autocollant



Count on it.