



36in Bagger Enhancement Kit

For Turbo Force® Cutting Unit for Mid-Size Mowers

Model No. 110–2026

Installation Instructions

Loose Parts

Use the chart below to verify that all parts have been shipped.

Step	Description	Qty.	Use
1	No parts required	–	Prepare the mower deck for installation.
2	Rubber baffle	1	Install the baffles.
	Metal baffle stiffener	1	
	Carriage bolt (5/16 x 1 inch)	5	
	Locknut (5/16 inch)	5	

Step

1

Preparing the Mower Deck

No Parts Required

Procedure

1. Position the mower on a flat surface.
2. Disengage the PTO, move the motion control levers to the neutral locked position and set the parking brake.
3. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
4. Lift the front of the machine and support the machine using jack stands.
5. Thoroughly clean the mower deck. All debris must be removed to ensure the baffle will fit properly against the mower deck.
6. Repair all bent and damaged areas of the mower deck and replace any missing parts.



Mechanical or hydraulic jacks may fail to support the machine and cause a serious injury.

- Use jack stands when supporting the machine.
- Do not use hydraulic jacks.

Step

2

Installing the Baffles

Parts needed for this step:

1	Rubber baffle
1	Metal baffle stiffener
5	Carriage bolt (5/16 x 1 inch)
5	Locknut (5/16 inch)

Procedure

Note: Install bolts as shown in Figure 1.

1. Install rubber baffle and the baffle stiffener with 5 bolts (5/16 x 1 inch) and 5 locknuts (5/16 inch) (Figure 1).
2. Rotate the cutting blades and make sure they do not hit the baffles.

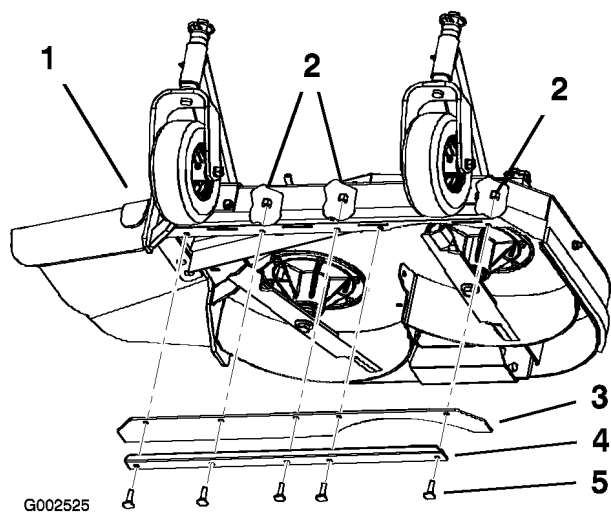


Figure 1

- | | |
|------------------------|----------------------------------|
| 1. Mower deck | 4. Baffle stiffener |
| 2. Locknut (5/16 inch) | 5. Carriage bolt (5/16 x 1 inch) |
| 3. Rubber baffle | |
-