



# Operator Presence Kit Greensmaster® Flex Mowers

Part No. 105-5333

Form No. 3356-381 Rev A

## Installation Instructions

### Mount Bail

1. Remove (2) screws securing each end of console panel to handle bar (Fig. 1). Slide console up control levers to gain access to left control bracket.

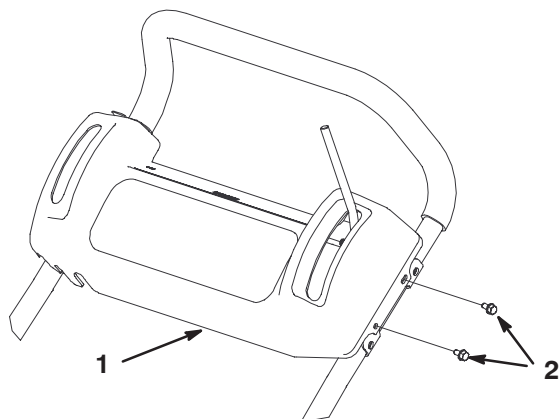


Figure 1

1. Console panel
2. Mounting screws (4)

2. Remove screw and nut securing top of left and right control brackets to handle bar (Fig. 2). Discard screws and nuts.

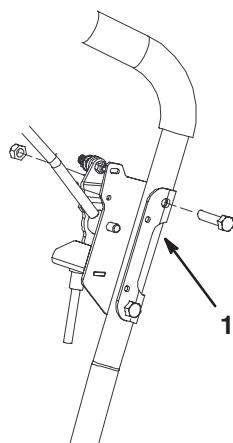


Figure 2

1. Brake bracket

3. Mount each end of bail to control bracket and handle bar with a spacer and new washer head screw and nut (Fig. 3). Spacer to be positioned between control bracket and bail. Small end of spacer to be inserted into pivot hole in bail.

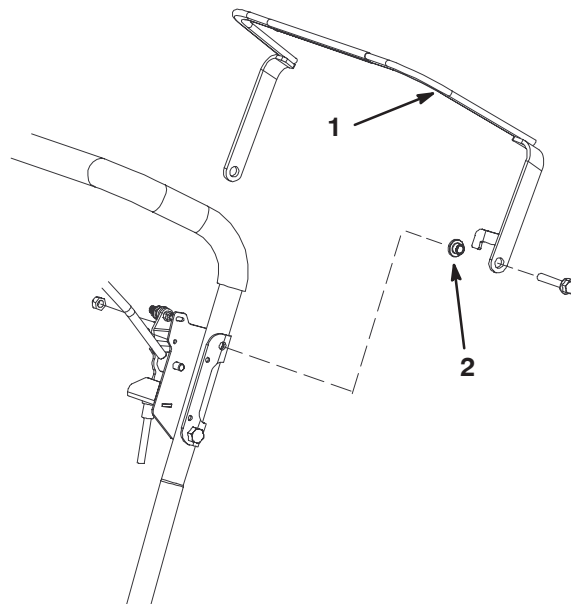


Figure 3

1. Bail
2. Spacer

### Mount Switch

1. Loosely mount switch to control bracket with (2) screws and nuts while inserting spring over switch plunger. Do not tighten nuts at this time. Switch plunger to be aligned with bail tab.

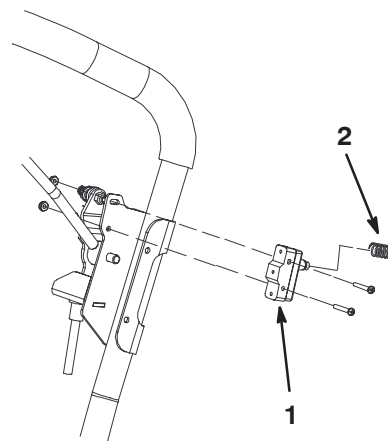


Figure 4

1. Switch
2. Spring

## Connect Wire Harness


1. Secure spade connectors from wire harness to **Common and Normally Open** screws on switch.
2. Secure wire harness to brake cable with (2) cable ties.
3. Locate interlock module on back of engine. Unplug and discard loop back connector from connector on interlock module.
4. Plug wire harness connector into module connector.
5. Secure wire harness to clutch interlock harness with a cable tie.

## Adjust Switch

1. Adjust switch so switch plunger is depressed .080" when bail is engaged. When bail is disengaged, switch plunger should be fully extended. Tighten mounting screws
2. Secure each end of console panel to handle bar with (2) screws previously removed (Fig. 1).

## Affix Decals


1. For CE conformity, affix warning decal (Fig. 5) over existing warning decal on top of console panel.

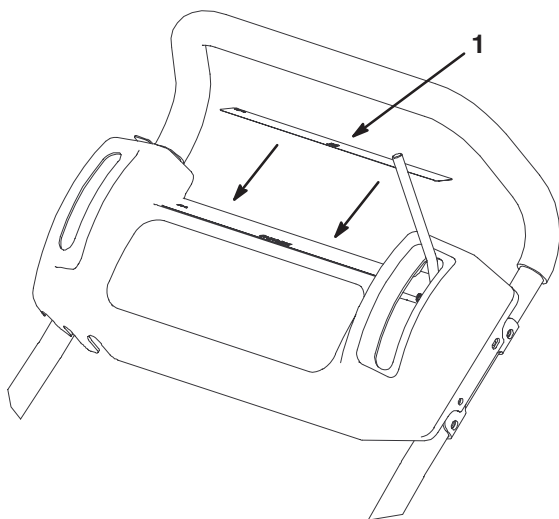

**Figure 5**

1. Warning decal

2. For CE conformity, affix the CE mark decal and noise rating decal onto rear of frame, as shown in figure 6.

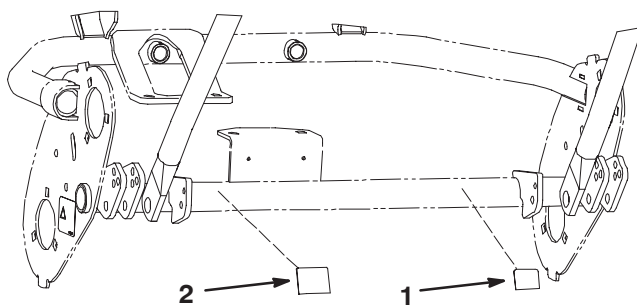

**Figure 6**


1. CE mark decal

2. Noise rating decal

**Note:** Use 98 LWA decal for Models 04021 and 04022.

**Note:** Use 96 LWA decal for Model 04018.


3. For ANSI B71.4–2004 compliance, affix the ANSI safety decal to the right side of the rear frame, as shown in figure 7.

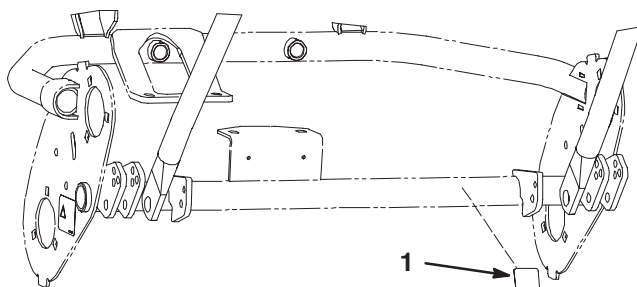

**Figure 7**

1. ANSI safety decal

4. For ANSI B71.4–2004 compliance, affix the danger decal (Fig. 8) on top of existing decal on cutting unit grass shield.

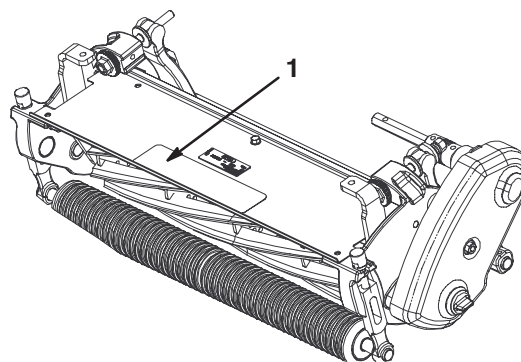

**Figure 8**

1. Danger decal

**Note:** This danger decal must be in place on all cutting units that will be used with ANSI B71.4–2004 compliant machines. For additional decals, order Toro Part No. 62–5070.