



Canadian Decal Kit

For 2006 Toro Lawn Mower with Briggs and Stratton Engine

Model No. 108-8179

Model No. 110-7498

Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Step	Description	Qty.	Use
1	Decals	3	Install the decals.

Note: Visit www.Toro.com and download the French *Operator's Manual* that corresponds to the model and serial number of the product on which this kit is installed.

Step 1

Installing the Decals

Parts needed for this step:

3	Decals
---	--------

Procedure

Install the decals in the positions indicated in the table below. Place each Canadian decal directly over the corresponding US English decal.

Install each decal as follows:

1. Thoroughly clean the area where you will install the decal.
2. Dampen the area with water or mildly soapy water.
3. Peel the decal from the backing and install it in place as shown in Figure 1.



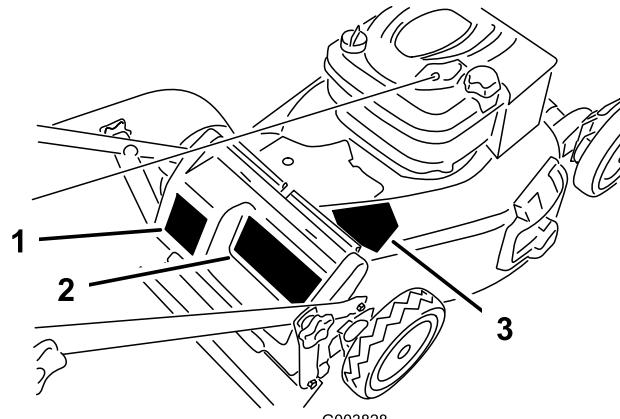


Figure 1

1. Decal 104-7908 3. Decal 94-8072
2. Decal 112-8759

4. Squeegee across the surface of the decal, starting at the center of the decal and working toward the edges, using overlapping strokes.

Location	US English	Canadian
On the back right-hand corner on top of the mower housing	 <p>105-6838</p>	 <p>94-8072</p>
On the left hand side of the rear door	No Decal	 <p>104-7908</p>
On the rear door	 <p>105-1295</p>	 <p>112-8759</p>

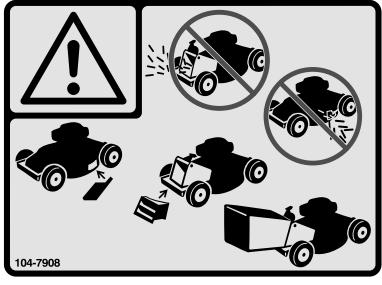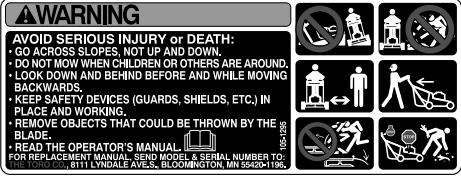

Trousse d'autocollants pour le Canada

Pour 2006 tondeuse Toro équipée d'un moteur Briggs and Stratton

N° de modèle 108-8179

N° de modèle 110-7498

Instructions d'installation

Mise en service

Pièces détachées

Reportez-vous au tableau ci-dessous pour vérifier si toutes les pièces ont été expédiées.

Étape	Description	Qté	Utilisation
1	Autocollants	3	Pose des autocollants.

Remarque: Rendez-vous sur le www.Toro.com et téléchargez, le *manuel de l'utilisateur* en français correspondant au modèle et au numéro de série du produit portant ces autocollants.

1

Pose des autocollants

Pièces nécessaires pour cette opération :

3	Autocollants
---	--------------

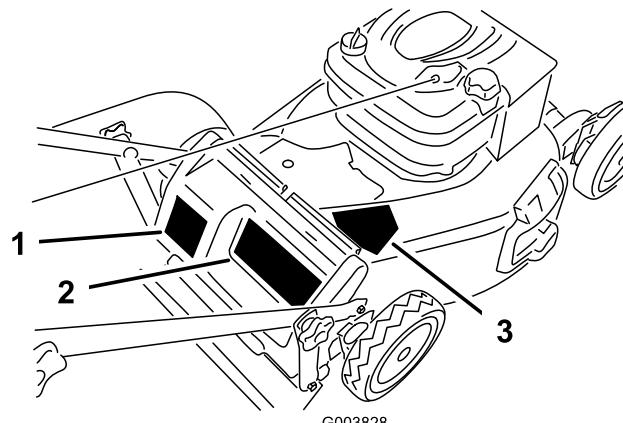


Figure 1

- 1. Autocollant 104-7908
- 2. Autocollant 112-8759
- 3. Autocollant 94-8072


- 4. Aplatissez la surface de l'autocollant du centre vers les bords pour éliminer les bulles d'air. Empiez légèrement à chaque passage.

Procédure

Collez les autocollants aux emplacements indiqués dans le tableau ci-dessous. Recouvrez directement les autocollants anglais avec les autocollants canadiens correspondants.

Placez chaque autocollant comme suit :

1. Nettoyez soigneusement la surface avant d'apposer l'autocollant.
2. Humidifiez la surface avec de l'eau pure ou légèrement savonneuse.
3. Ôtez la pellicule de protection au dos de l'autocollant, puis placez l'autocollant à l'endroit prévu (Figure 1).

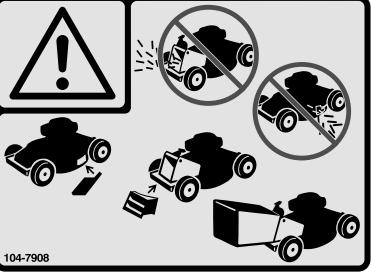Emplacement	Anglais	Canadien
En haut du carter de tondeuse, dans le coin arrière droit	 <p>DANGER KEEP HANDS and FEET AWAY</p> <p>105-6838</p>	 <p>DANGER/PELIGRO KEEP HANDS AND FEET AWAY MANTENGA LAS MANOS Y LOS PIES ALEJADOS ÉLOIGNER LES MAINS ET LES PIEDS</p> <p>94-8072</p>
Sur le côté gauche du volet arrière	<p>Pas d'autocollant</p>	 <p>104-7908</p>
Sur le volet arrière	<p>WARNING</p> <p>AVOID SERIOUS INJURY or DEATH: - GO ACROSS SLOPES, NOT UP AND DOWN. - DO NOT MOW WHEN CHILDREN OR OTHERS ARE AROUND. - LOOK DOWN AND BEHIND BEFORE AND WHILE MOVING BACKWARDS. - KEEP SAFETY DEVICES (GUARDS, SHIELDS, ETC.) IN PLACE AND WORKING. - REMOVE ALL OBJECTS THAT COULD BE THROWN BY THE BLADE. - READ THE OPERATOR'S MANUAL.</p> <p>FOR REPLACEMENT MANUAL, SEND MODEL & SERIAL NUMBER TO: 8111 LYNDALE AVE.S., BLOOMINGTON, MN 55420-1196</p> 	 <p>112-8759</p>