



## Canadian Decal Kit

For 2007 and After Toro Lawn Mower with Briggs and Stratton Engine

Model No. 114-1584

### Installation Instructions

# Installation

## Loose Parts

Use the chart below to verify that all parts have been shipped.

Step	Description	Qty.	Use
<b>1</b>	Decals	4	Install the decals.

**Note:** Visit [www.Toro.com](http://www.Toro.com) and download the French *Operator's Manual* that corresponds to the model and serial number of the product on which this kit is installed.


### Step

# 1

## Installing the Decals

### Parts needed for this step:

4	Decals
---	--------

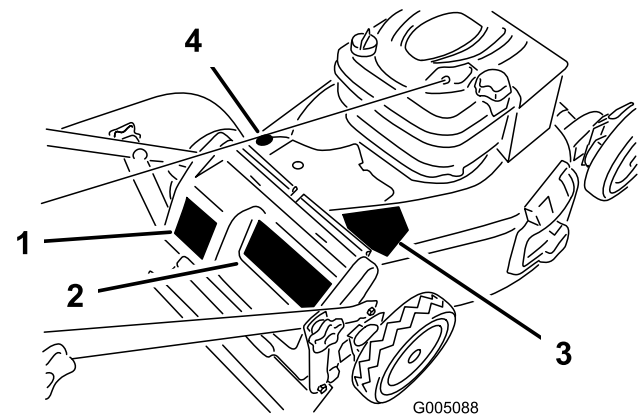

**Figure 1**

- |                   |                   |
|-------------------|-------------------|
| 1. Decal 104-7908 | 3. Decal 94-8072  |
| 2. Decal 112-8759 | 4. Decal 112-8867 |



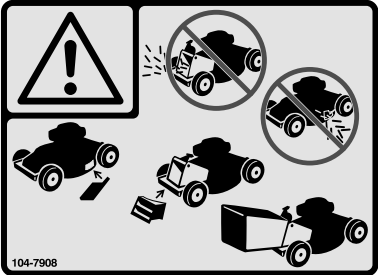
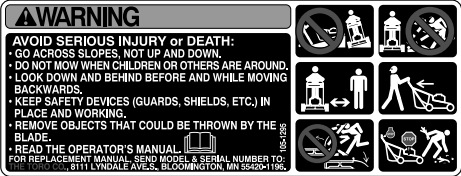



### Procedure

Install the decals in the positions indicated in the table below. Place each Canadian decal directly over the corresponding US English decal.

Install each decal as follows:

1. Thoroughly clean the area where you will install the decal.
2. Dampen the area with water or mildly soapy water.
3. Peel the decal from the backing and install it in place as shown in Figure 1.

4. Squeegee across the surface of the decal, starting at the center of the decal and working toward the edges, using overlapping strokes.

Location	US English	Canadian
On the back right-hand corner on top of the mower housing	 <p><b>105-6838</b></p>	 <p><b>94-8072</b></p>
On the left hand side of the rear door	<p><b>No Decal</b></p>	 <p><b>104-7908</b></p>
On the rear door	 <p><b>105-1295</b></p>	 <p><b>112-8759</b></p>
On the left rear of the housing	 <p><b>112-8868</b></p>	 <p><b>112-8867</b></p>



# Trousse d'autocollants pour le Canada

## Pour tondeuse Toro équipée d'un moteur Briggs and Stratton à partir de 2007

N° de modèle 108-8179

### Instructions d'installation

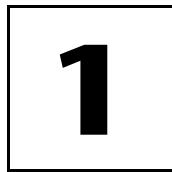
## Mise en service

### Pièces détachées

Reportez-vous au tableau ci-dessous pour vérifier si toutes les pièces ont été expédiées.

Étape	Description	Qté	Utilisation
<b>1</b>	Autocollants	4	Pose des autocollants.

**Remarque:** Rendez-vous sur le [www.Toro.com](http://www.Toro.com) et téléchargez, le *manuel de l'utilisateur* en français correspondant au modèle et au numéro de série du produit portant ces autocollants.



### Pose des autocollants

#### Pièces nécessaires pour cette opération :

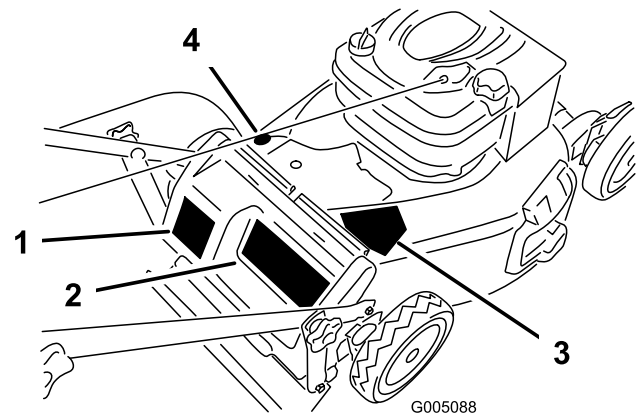
4	Autocollants
---	--------------

#### Procédure

Collez les autocollants aux emplacements indiqués dans le tableau ci-dessous. Recouvrez directement les autocollants anglais avec les autocollants canadiens correspondants.

Placez chaque autocollant comme suit :








1. Nettoyez soigneusement la surface avant d'apposer l'autocollant.
2. Humidifiez la surface avec de l'eau pure ou légèrement savonneuse.
3. Ôtez la pellicule de protection au dos de l'autocollant, puis placez l'autocollant à l'endroit prévu (Figure 1).



**Figure 1**

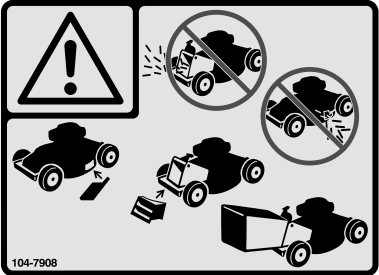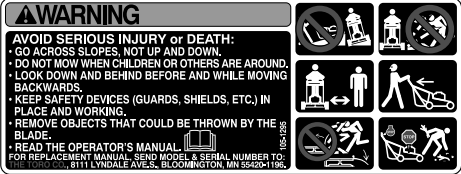- |                         |                         |
|-------------------------|-------------------------|
| 1. Autocollant 104-7908 | 3. Autocollant 94-8072  |
| 2. Autocollant 112-8759 | 4. Autocollant 112-8867 |

4. Aplatissez la surface de l'autocollant du centre vers les bords pour éliminer les bulles d'air. Empiètez légèrement à chaque passage.

Emplacement	Anglais	Canadien
En haut du carter de tondeuse, dans le coin arrière droit	 <p><b>105-6838</b></p>	 <p><b>94-8072</b></p>
Sur le côté gauche du volet arrière	<p><b>Pas d'autocollant</b></p>	 <p><b>104-7908</b></p>
Sur le volet arrière	 <p><b>105-1295</b></p>	 <p><b>112-8759</b></p>
En haut du carter de tondeuse, dans le coin arrière gauche	 <p><b>112-8868</b></p>	 <p><b>112-8867</b></p>