



Slow Moving Vehicle Kit

Groundsmaster® 7200 Series Traction Unit

Part No. 114-4050

Form No. 3358-531 Rev A

Installation Instructions

1. Position the mounting bracket onto the frame cross member so the notch fits around the frame bolt and the front of the bracket is parallel to the cross member (Fig. 1).

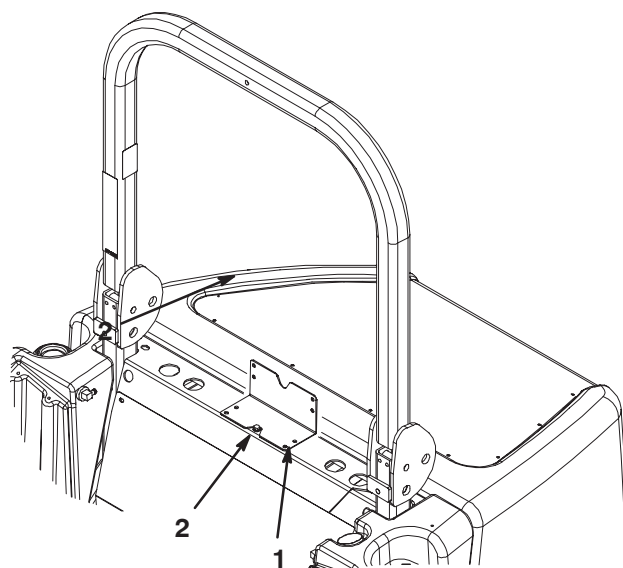


Figure 1

1. Mounting bracket
2. Frame bolt

2. Using the rear holes in the bracket as a template, locate, mark and drill two .280 inch diameter holes in the frame cross member (Fig. 2). Holes may already be in the cross member.

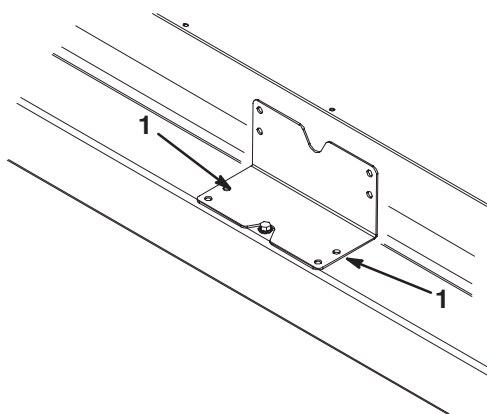


Figure 2

1. Mark and drill these holes

3. Mount the bracket to the cross member with two screws and nuts (Fig. 3).

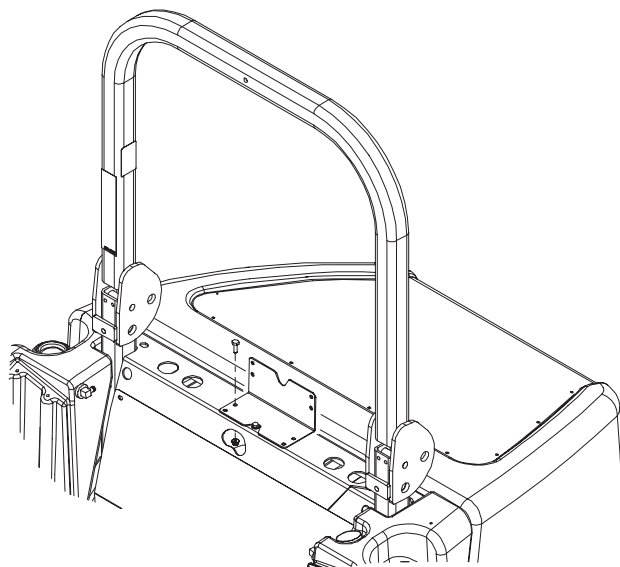


Figure 3

4. Mount the slow moving vehicle emblem to the top holes in the bracket with two screws and nuts (Fig. 4).

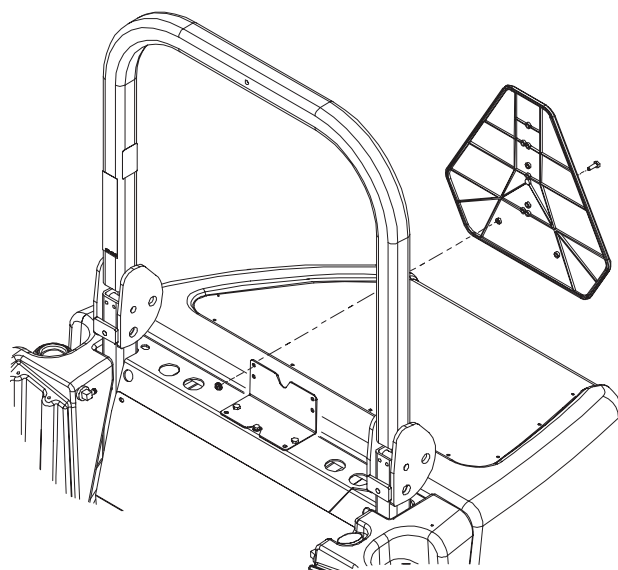


Figure 4