



# Grass Basket Reinforcement Kit

## for Greensmaster Flex 21 Mower

Model No. 115-1749

Form No. 3360-698 Rev A

### Installation Instructions

## Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	Basket strip	1	
	Rivet	8	
	Installation instructions	1	



of the basket (Figure 1). Deburr the drilled holes so the basket strip lays flush on the basket.

- From the bottom up, secure the basket strip to the basket with (8) rivets.

## Parts needed for this procedure:

1	Basket strip
8	Rivet
1	Installation instructions

## Procedure

- Center the basket strip on the back edge of basket bottom with the bent up edge against the formed rib on the basket (Figure 1)

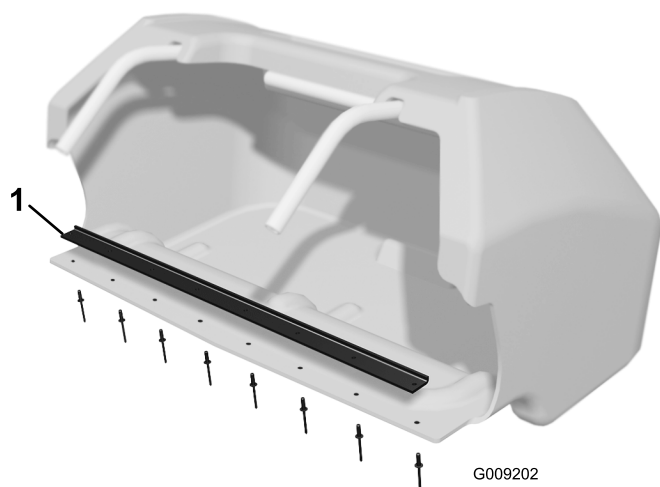


Figure 1

- Basket strip
- Using the basket strip as a template, locate, mark and drill (8) 5/32 inch (4 mm) holes through the bottom