




# Workman 200 Spray System

Heavy-Duty Workman Vehicles

Addendum

## Mounting the Valve

1. Remove the cable ties securing the valve mounting bracket to the sprayer frame uprights (Figure 1).
2. Remove the (2) flange head bolts and flange nuts loosely installed to the sprayer frame uprights (Figure 1).
3. Reposition the valve until the valve mounting bracket holes align with the sprayer frame upright holes as shown in Figure 1.
4. Secure the valve mounting bracket to the rear of the frame uprights with the flange head bolts and flange nuts previously removed (Figure 1).

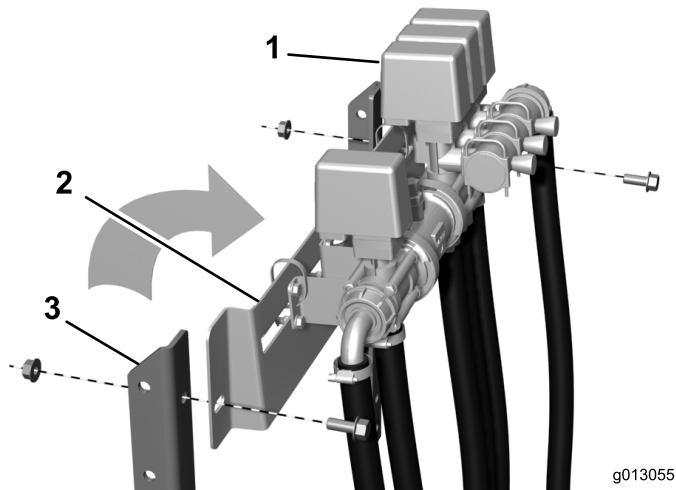

g013055

**Figure 1**

- |                           |                     |
|---------------------------|---------------------|
| 1. Valve                  | 3. Sprayer uprights |
| 2. Valve mounting bracket |                     |