



Storage Stand

ProPass-200 Top Dresser

Model No. 44712

Form No. 3365-549 Rev B

Installation Instructions

Installation

1. Park the work vehicle in the storage spot for the ProPass.
- Note:** The storage spot must be a hard and level surface.
2. Disconnect the electrical connection from the work vehicle.
3. Disconnect the ProPass hydraulic lines from the work vehicle.
4. With the work vehicle in neutral gear, set the parking brake and start the engine.
5. Using the vehicle lift cylinder, raise the front of the ProPass high enough to install the front storage stand legs.
6. Turn off the engine.

⚠ WARNING

Do not climb under or perform work on the ProPass while it is on the storage stand.

7. Insert the front storage legs and the rear jack stands into the ProPass tubes and secure them with the locking pins (Figure 1).

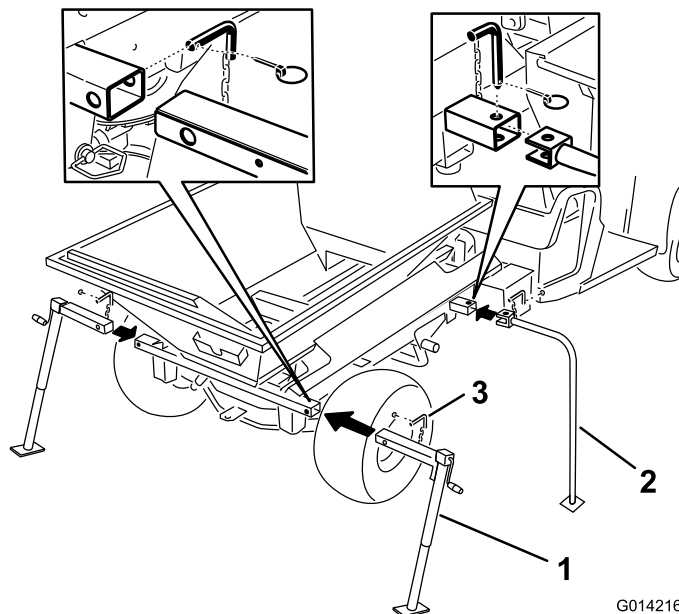


Figure 1

1. Rear jack stands
2. Front storage legs
3. Locking pin

G014216

8. Using the vehicle lift cylinder, lower the front of the ProPass until the front storage stand legs begin to touch the ground.
9. Raise the two rear storage jack stands until the pressure is off the mounting pins that secure the ProPass cross tube to the Workman frame.
10. Remove the rear lynch pins, hitch pins and washers (Figure 2).

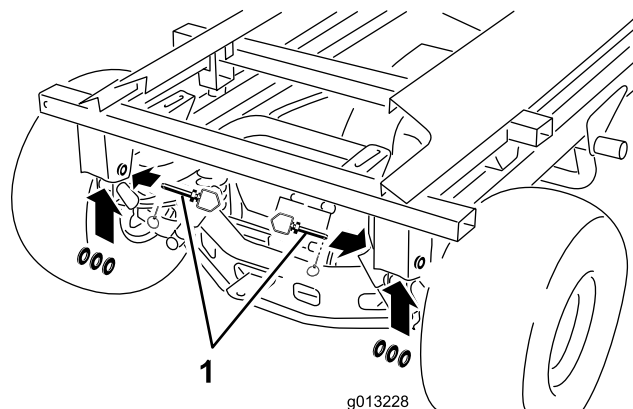


Figure 2

1. Hitch pin, washers & lynch pin

g013228

11. With one hand, hold the lift cylinder. With the other hand, remove the lift cylinder's locking pin (Figure 3).

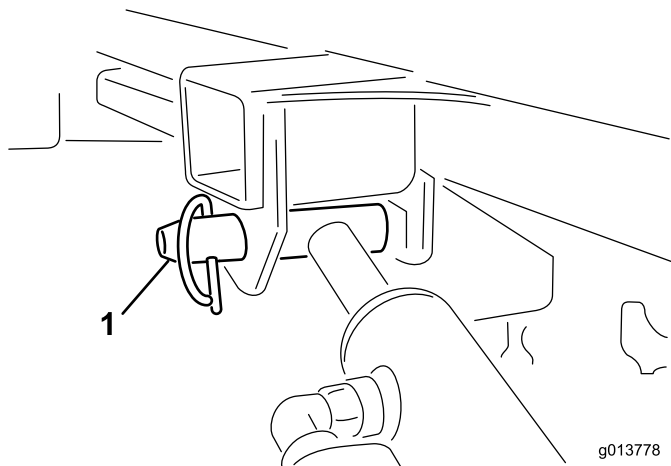


Figure 3

1. Lift cylinder locking pin

-
12. Store the cylinders in the storage clips. Engage the hydraulic lift lock lever on the vehicle to prevent accidental extension of the lift cylinders.
 13. Raise the rear jack stands until enough clearance is attained to drive the vehicle away from the ProPass.
 14. Walk around the ProPass. Ensure that it is clear of the work vehicle's frame and secured within each of the four storage stand legs.
 15. With the work vehicle in neutral gear, set the parking brake and start the engine.
 16. Release the parking brake and slowly drive the work vehicle forward, away from the ProPass truck-mount on the storage stand.

⚠ WARNING

Do not climb under or perform work on the ProPass while it is on the storage stand.