



Tapered Nozzle Kit Rectangular Nozzle Kit Pro Force Debris Blower

Model No. 119-6280

Model No. 119-6281

Form No. 3370-322 Rev A

Installation Instructions

Installation

Assembling the Nozzle Extension

Assemble the nozzle extension halves together using 6 bolts, 6 flange nuts, and 2 handles as shown in Figure 1 or Figure 2.

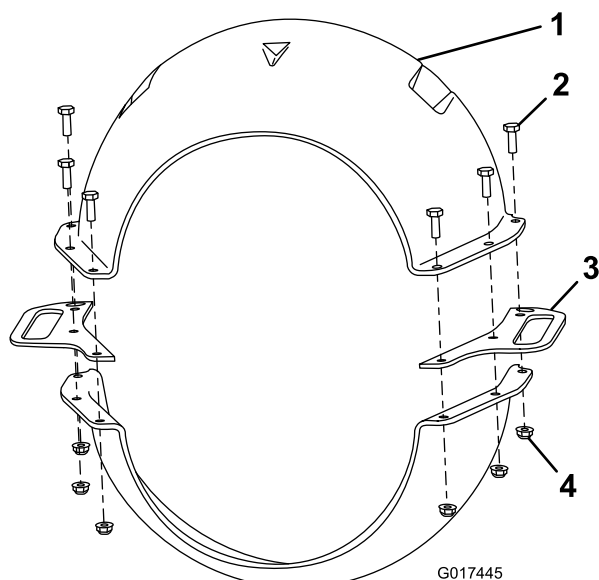


Figure 1

Tapered nozzle extension shown

- | | |
|------------------------------|---------------|
| 1. Nozzle extension half (2) | 3. Handle (2) |
| 2. Bolt (6) | 4. Nut (6) |

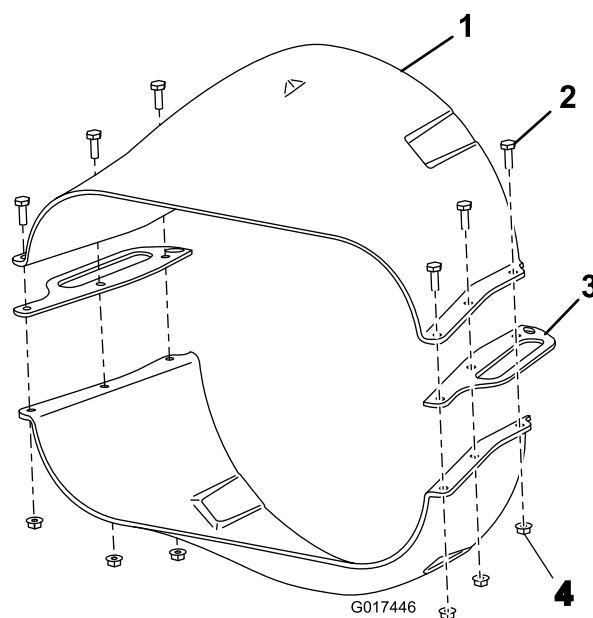


Figure 2

Rectangular nozzle extension shown

- | | |
|------------------------------|---------------|
| 1. Nozzle extension half (2) | 3. Handle (2) |
| 2. Bolt (6) | 4. Nut (6) |

Installing the Nozzle Extension

1. Slide the nozzle extension onto the nozzle, aligning the hole in each handle with the upper and lower holes in each attachment bracket on the nozzle (Figure 3).

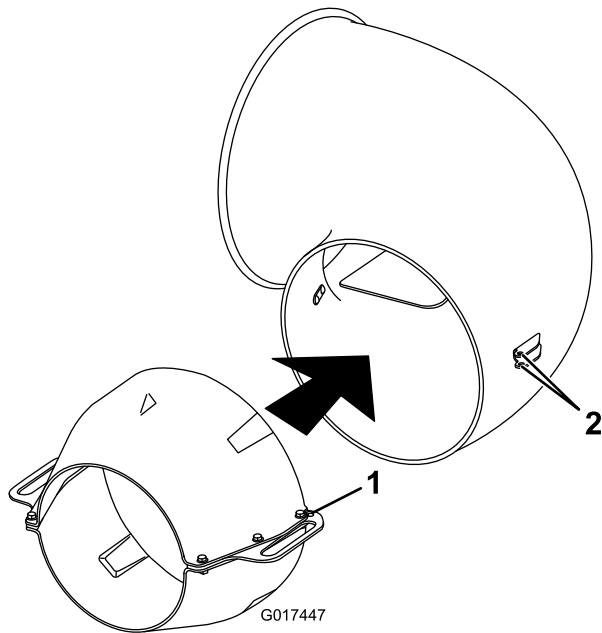


Figure 3

1. Hole in handle
2. Holes in attachment bracket

2. Insert the hitch pins through the holes in the attachment brackets and the handles to secure the nozzle extension to the nozzle end (Figure 4).

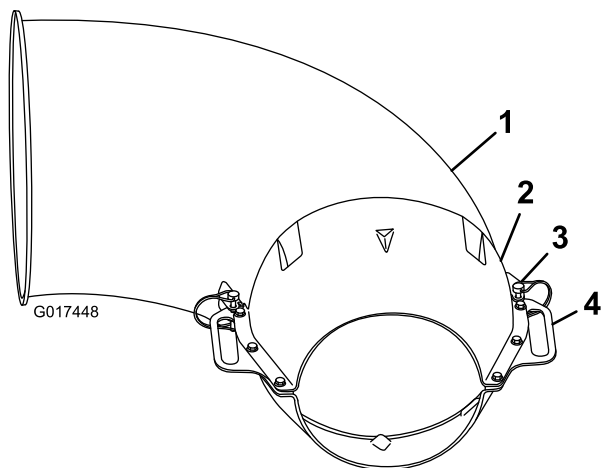


Figure 4

1. Nozzle
2. Nozzle extension
3. Hitch pin
4. Handle