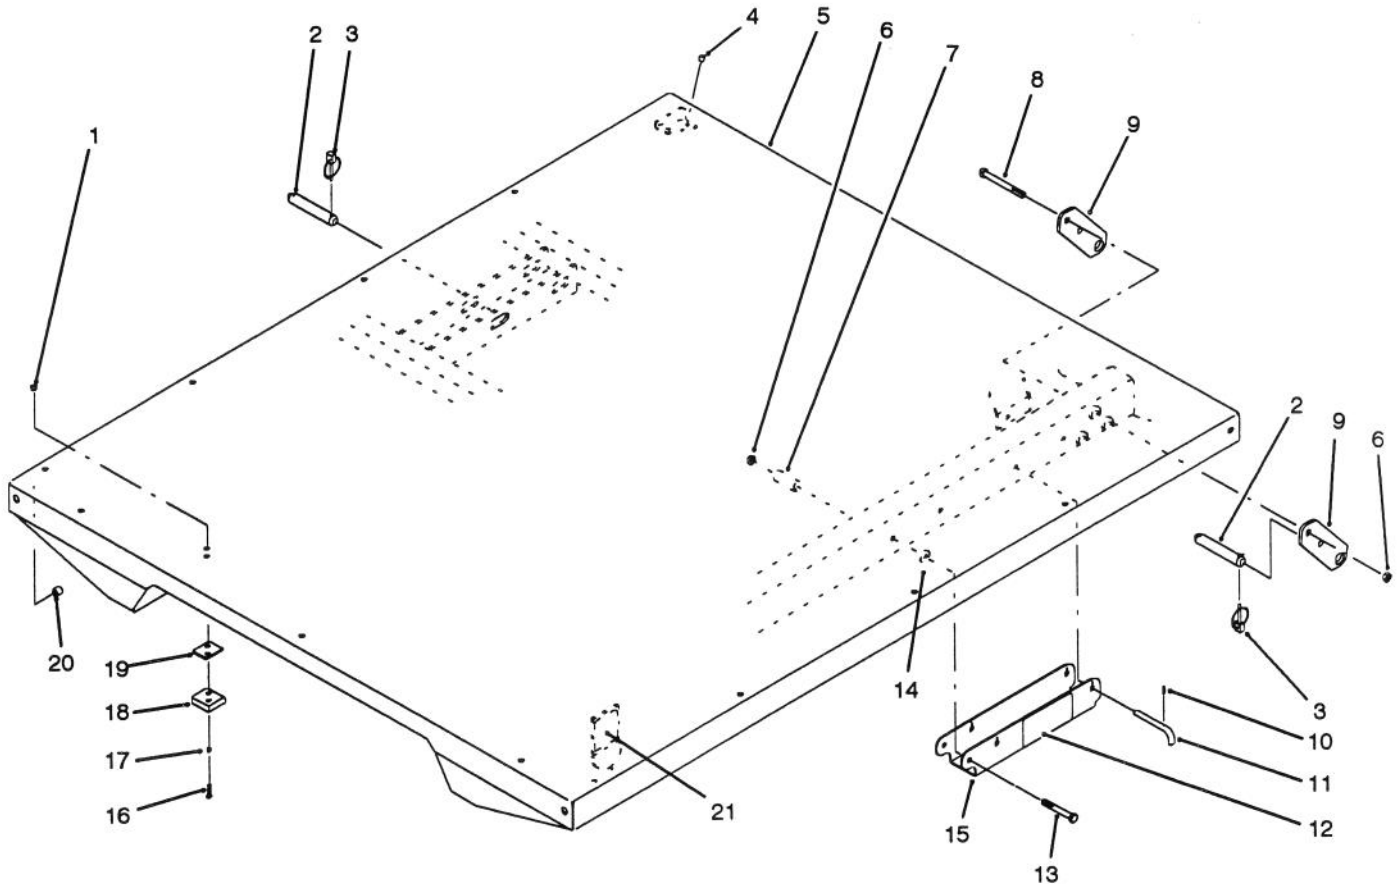


TORO®

MODEL NO. 07301

**PARTS
CATALOG****FULL AREA FLATBED KIT**
For Workman 3000 Series


T-1548

FULL AREA FLATBED ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-2	Nut - Lock	4
2	92-1233	Pin - Clevis	4
3	92-1298	Pin - Lynch	8
4	32148-6	Insert - Threaded	4
5		Bed	1
6	3296-44	Nut - Lock	5
7	92-1239	Spacer - Bed Support	1
8	323-42	Screw - Cap Hex. Hd.	4
9	92-1278	Plate - Flatbed	4
10	32121-107	Pin - Roll	1
11	92-1299	Pin - Clevis	1

Ref. No.	Part No.	Description	No. Used
12	92-1297	Decal - Warning	2
13	323-13	Screw - Cap Hex. Hd.	1
14	68-5920	Washer - Flat	1
15	92-1317	Bed Support Assembly (Incl. Ref. #12)	1
16	32122-28	Screw - Truss Hd.	4
17	40-9520	Spacer - Split	4
18	40-0330	Cushion - Rubber	2
19	42-6200	Shim - Cushion	2
20	32148-7	Insert - Threaded	2
21	92-1312	Decal - Warning	2

TPS

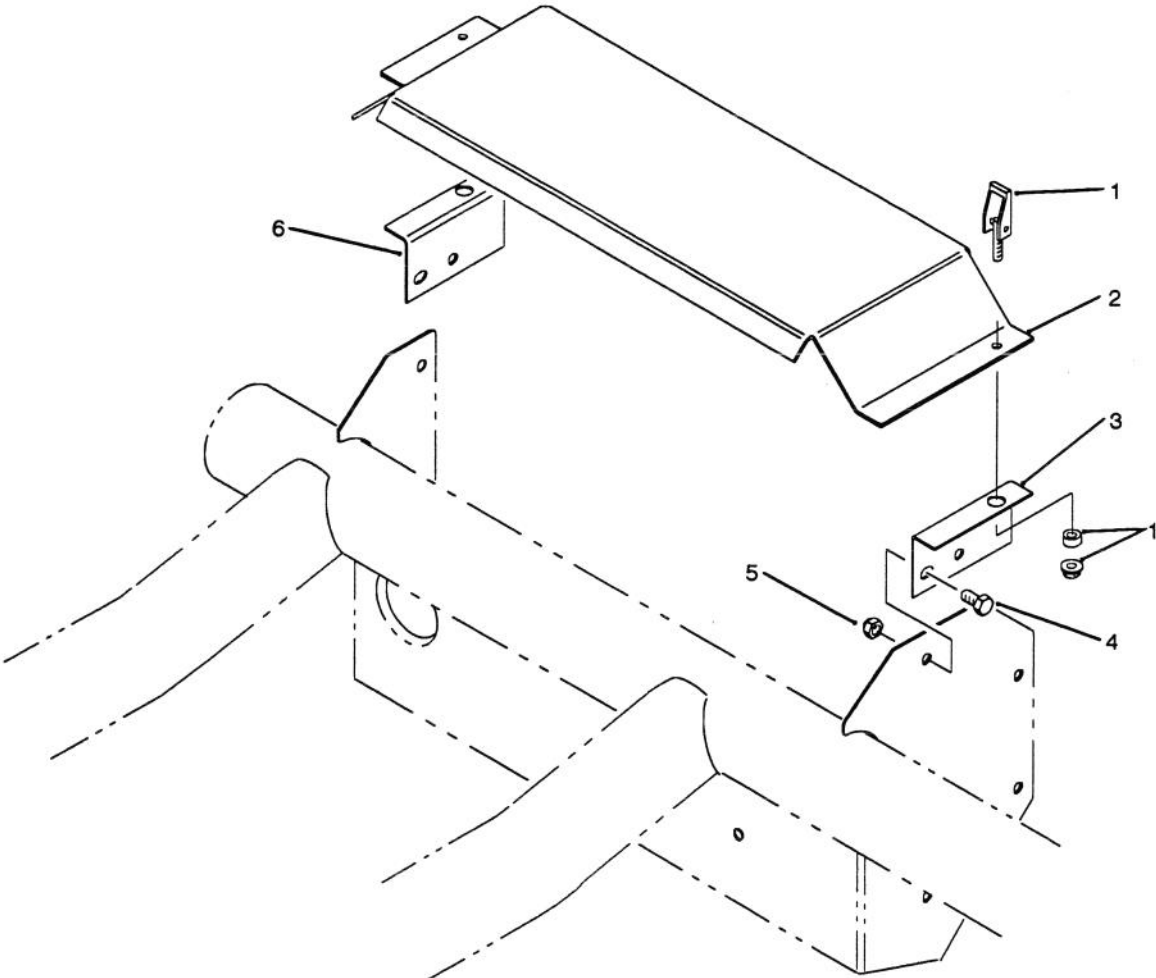

T-1565

RADIATOR COVER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	74-5950	Latch - Swell	2
2	92-1307	Cover - Radiator	1
3	92-1313	Bracket - Cover LH	1

Ref. No.	Part No.	Description	No. Used
4	322-2	Screw - Cap Hex. Hd.	2
5	3296-29	Nut - Lock	2
6	92-1314	Bracket - Cover RH	1

Litho in U.S.A.