



TORO®MODEL AFFECTED: 1132 SNOWTHROWER
MODEL 38160-900001 & UP**OPERATOR'S
MANUAL
ADDENDUM****HEADLIGHT INSTALLATION**


Remove upper capscrew, washers and locknut, securing escutcheon plate to right handle.

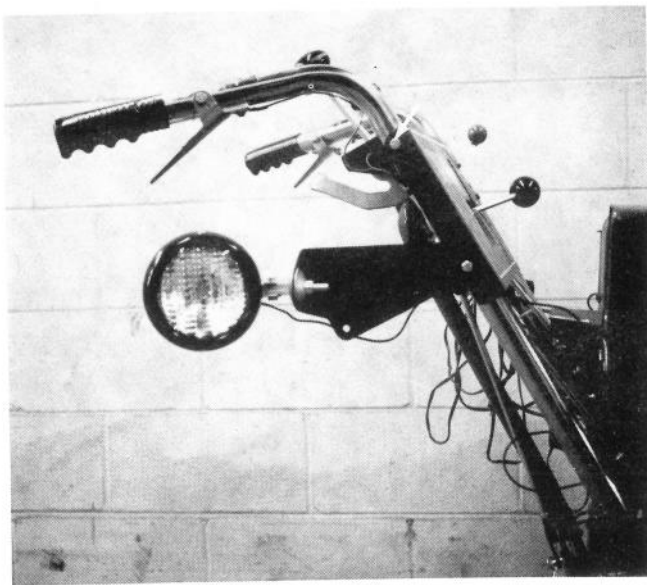


Plug black wire from light into black wire from wire harness.

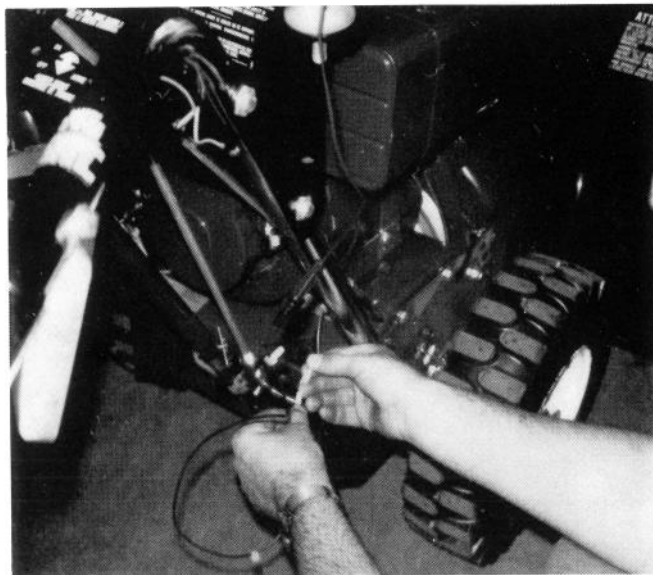

Pivot bracket and light assembly upward and re-secure to escutcheon plate and handle using fasteners removed in previous step.

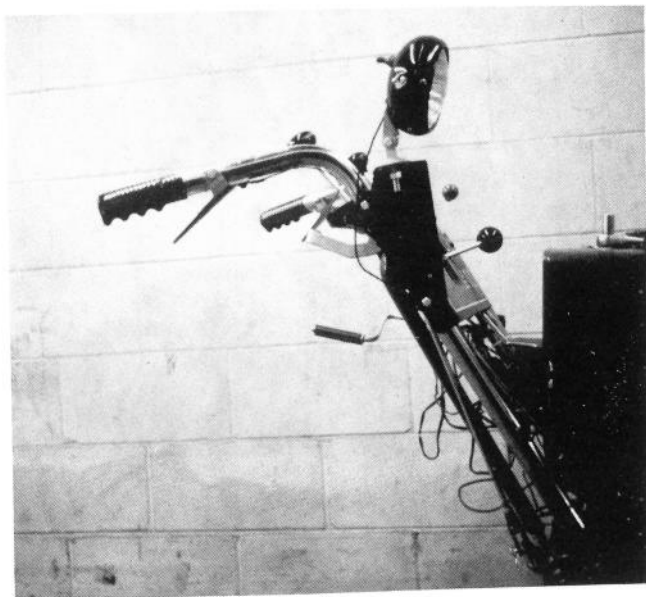


Using wire retainers, secure wire to handle.

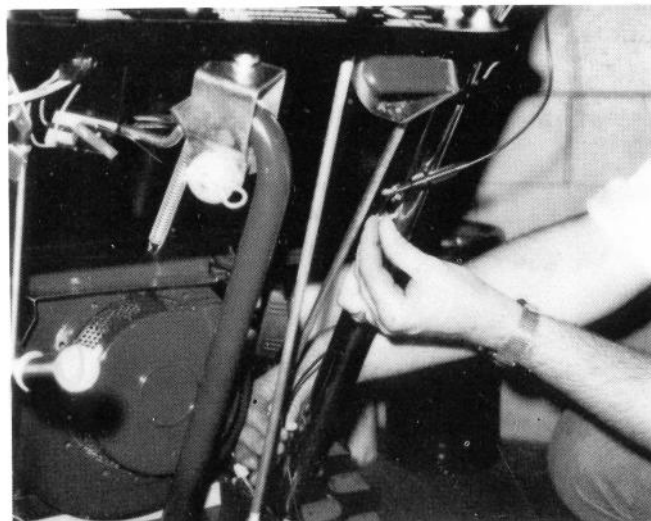


Note: If excess wire accumulates at lower part of handle, wrap wire around handle or tape to handle.

TORO®MODELLO AFFECTATO: 1132 SGOMBRANEVE
MODELLO 38160-900001 E SU**GUIDA PER
L'ACQUIRENTE
APPENDICE****INSTALLAZIONE DELLA LUCE DEI FARO**


Rimuovete il tappo vitti esagnoli superiore, rondellas, e dadi di tenuta, segurando la stemma placea diestra della manovella.

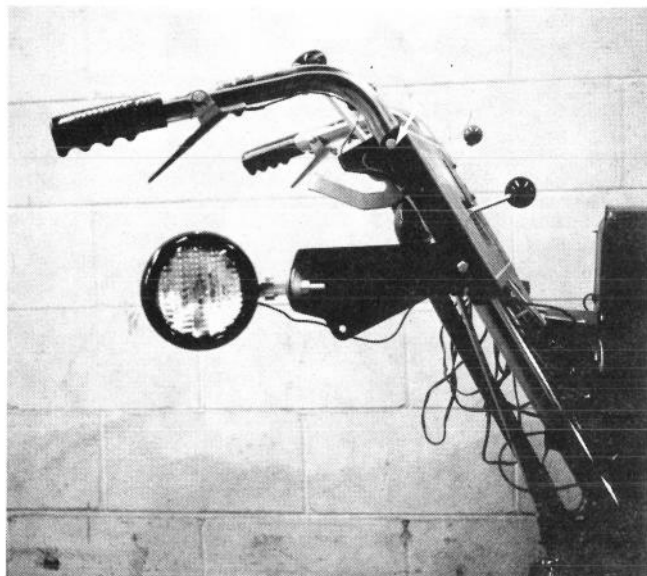


Assicuraré il filo nero della luce a il filo nero dei bardatura.

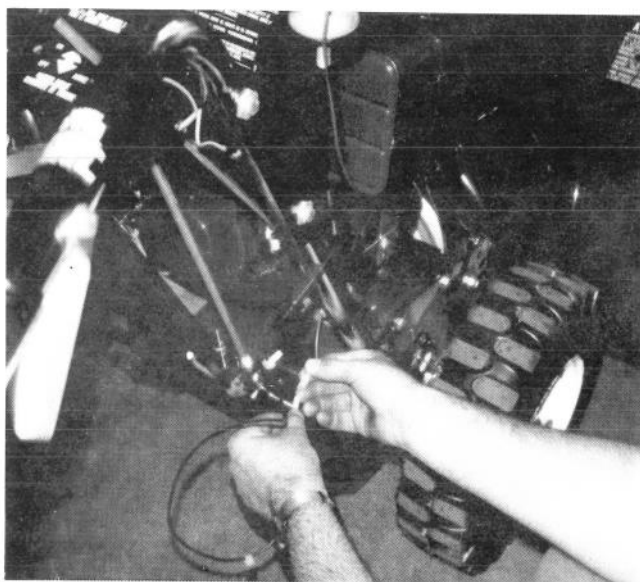

Giraré sú il braccio e riunione della luche piu sopra metteré al sicuró della piastra d'acciaro e ansi la manovella, usando dei fermaglio, eliminate prima.

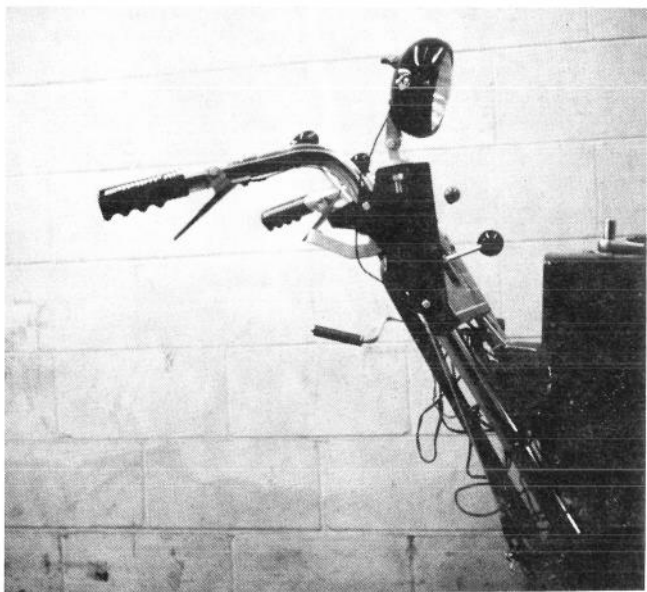

Usaré il filo del seguaci, aseguri filo della manovella.

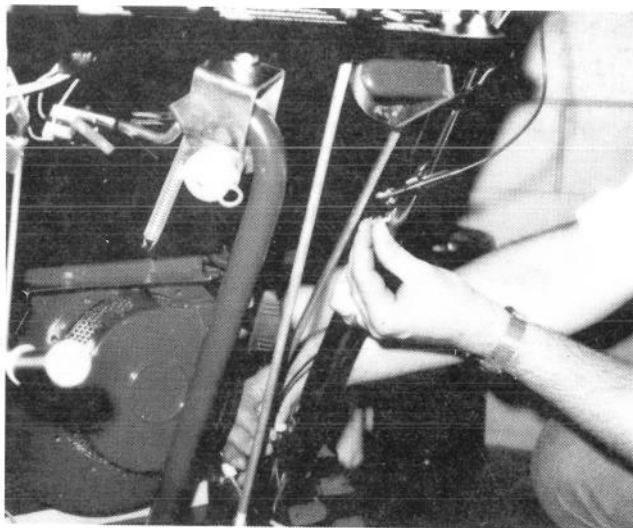

Nota: Si, il filo a piu eccesso, ammassaré la parte piu basso della manovella o metteré nastro.