



Steering Box Cover Kit

Workman® MD Series Utility Vehicle

Model No. 120-5049

Form No. 3371-367 Rev A

Installation Instructions

Installing the Steering Box Cover

1. Stop the machine on a level surface, stop the engine, set the parking brake, and remove the key.
2. Open the hood.
3. Remove the passenger-side, front fender and save the fender and all fasteners.

Note: You do not need to take the outer and inner fenders apart.

4. Locate the steering box opening (Figure 1).
 - If the machine has been driven without a cover over the opening, and the area is wet or dirty, disassemble and clean the steering box thoroughly. Refer to the *Service Manual* or your Authorized Toro Distributor for assistance.
 - If the machine is new or has only been used in clean, dry conditions, clean the area around the opening (without getting water into the opening).

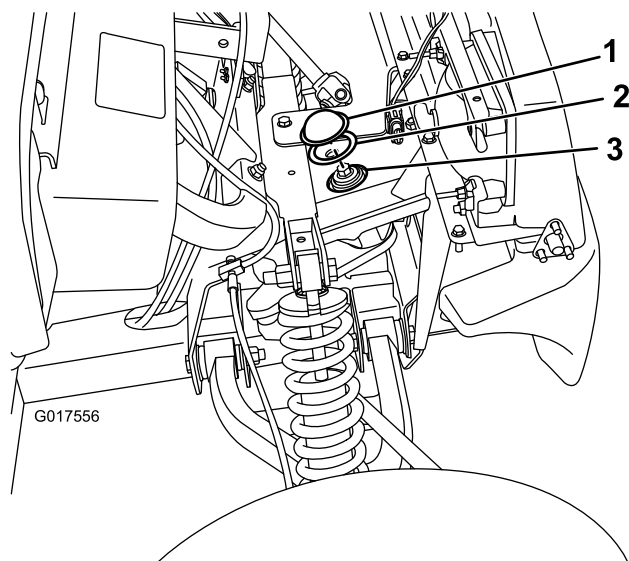


Figure 1

1. Cover
2. Adhesive gasket
3. Steering box opening

5. Remove the adhesive backing from one side of the adhesive gasket and adhere the gasket to the flange on the underside of the cover (Figure 1).

6. Remove the adhesive backing from the other side of the gasket and adhere the cover to the frame as shown in Figure 1.
7. Replace the fender using the fasteners you removed previously.
8. Close the hood.