Form No. 3375-168 Rev A

Slow-Moving Vehicle Kit

Groundsmaster® 3280-D and 7200 Series Traction Unit

Model No. 120-6809

Installation Instructions

⚠ WARNING

CALIFORNIA
Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

Installation

Groundsmaster 7200/7210 Installation

1. Position the mounting bracket onto the frame cross member so the notch fits around the frame bolt and the front of the bracket is parallel to the cross member (Figure 1).

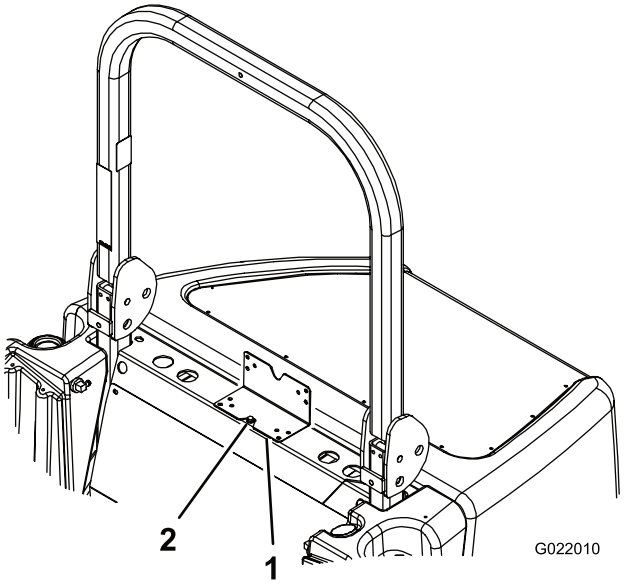


Figure 1

1. Mounting bracket
2. Frame bolt

2. Using the rear holes in the bracket as a template, locate, mark and drill (2) .280 inch diameter holes in the frame cross member (Figure 2). Holes may already be in the cross member.

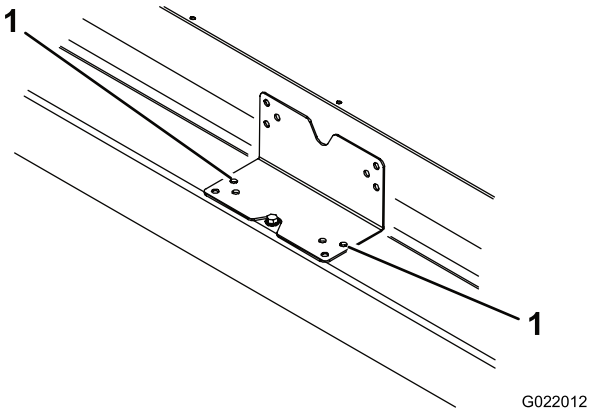


Figure 2

1. Mark and drill these holes

3. Mount the bracket to the cross member with two screws and nuts (Figure 3).

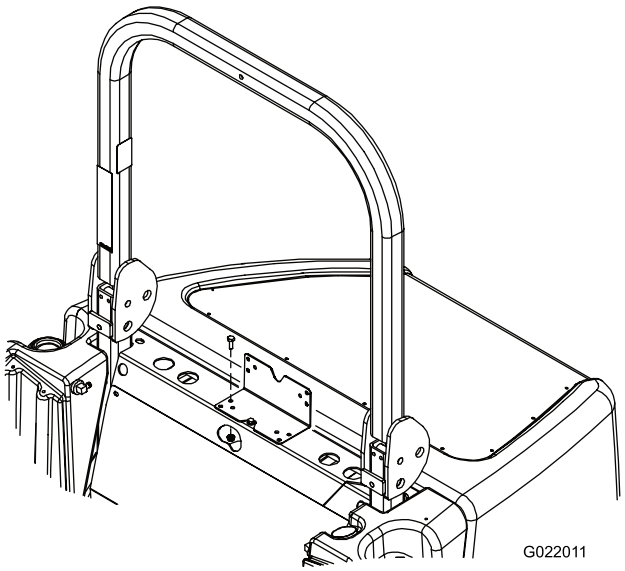


Figure 3

© 2013—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

CE

Original Instructions (EN)
Printed in the USA.
All Rights Reserved

3375-168 A

4. Mount the slow moving vehicle emblem to the top holes in the bracket with two screws and nuts (Figure 4).

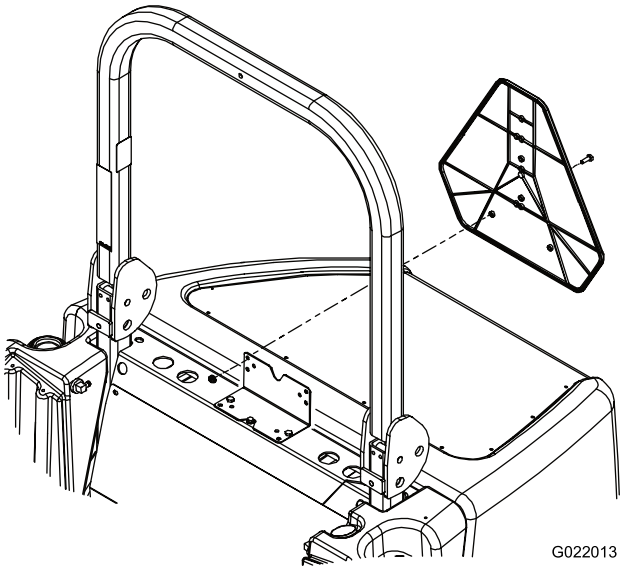


Figure 4

Groundsmaster 3280 Installation

1. Release the latches and open the hood.
2. Remove the (2) screws securing the hood handle to the hood. Remove the handle (Figure 5).

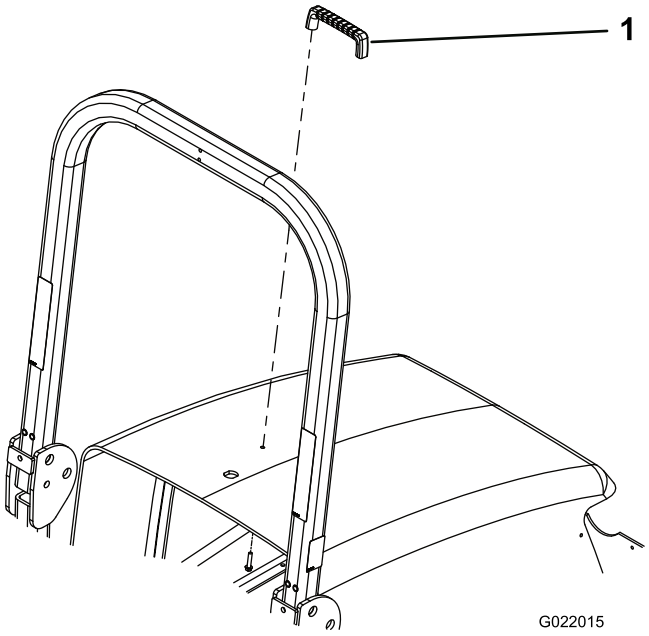


Figure 5

1. Hood handle

3. Position the mounting bracket onto the hood, aligning the holes with the holes in the hood (Figure 6).

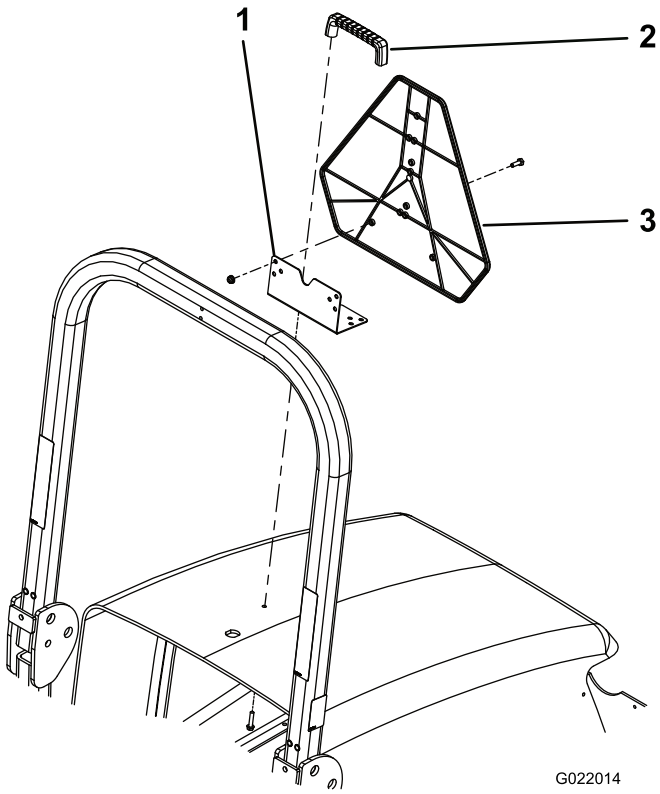


Figure 6

1. Mounting bracket
2. Hood handle
3. Slow moving vehicle emblem

4. Using the hood handle and mounting screws previously removed, secure the mounting bracket to the hood (Figure 6).
5. Mount the slow moving vehicle emblem to the top holes in the bracket with two screws and nuts (Figure 6).
6. Close and latch the hood