



Armrest Kit

GreensPro™ 1200 Greens Roller

Model No. 44908

Form No. 3375-919 Rev A

Installation Instructions

Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
Left armrest bracket	1	Assemble the armrest.
Right armrest bracket	1	
Armrest pad	2	
Bolt (M10 x 45mm)	2	
Locknut	2	
Spacer	4	
Bolt (M6 x 25mm)	6	Install the armrest.
Clip nut	6	

Assembling the Armrest

1. Align a spacer on each side of the right armrest bracket (Figure 1).
2. Align the spacers and the right armrest bracket with the holes in the armrest pad (Figure 1).
3. Align a bolt (M10 x 45mm) with the holes in the armrest pad, spacers, and the armrest bracket (Figure 1).
4. Thread a nut onto the bolt (M10 x 45mm) (Figure 1).
5. Tighten the nut onto the bolt until the nut and bolt head are flush with the armrest pad.

Note: Do not over tighten the nut and bolt.

6. Repeat steps 1 through 5 to assemble the left armrest.

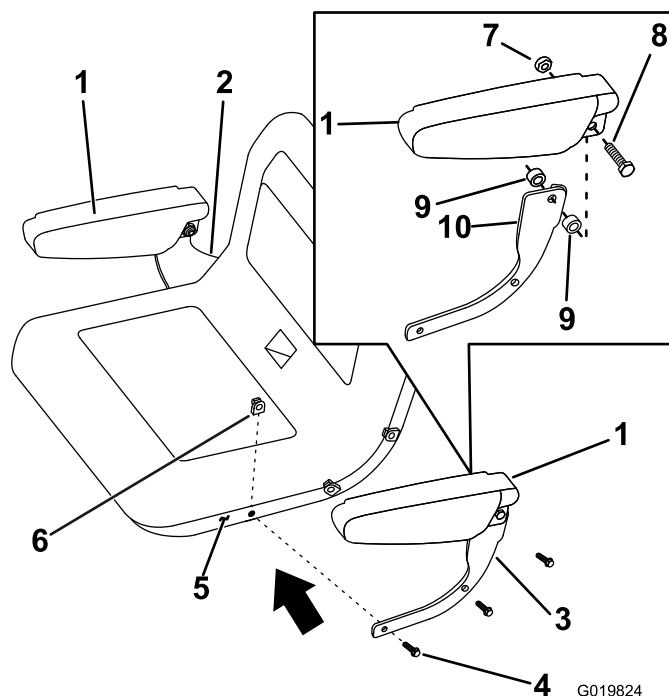


Figure 1

- | | |
|--------------------------|----------------------------------|
| 1. Armrest pad | 6. Clip nut |
| 2. Right armrest bracket | 7. Nut |
| 3. Left armrest bracket | 8. Bolt (M10 x 45mm) |
| 4. Bolt (M6 x 25mm) | 9. Spacer |
| 5. Seat pan flange | 10. Armrest bracket (left shown) |



Installing the Armrest

1. Insert the clip nuts over each hole of the seat pan flange (Figure 1).
2. Align the completed right armrest with the holes found on the right side of the seat pan flange (Figure 1).
3. Insert a bolt (M6 x 25mm) into each hole of the armrest and clip nuts (Figure 1).
4. Tighten the bolts.
5. Repeat steps 1 through 4 to install the left armrest.