

**TORO®**

PART NO. 60-9030

**INSTALLATION  
INSTRUCTIONS****BAFFLE KIT**  
(44" Cutting Unit)

1. Position the baffle under the deck with the outset corner pushed up flush against the outset corner of the deck (Fig.1). The front edge of the baffle should rest up tight against the front lip of the deck.

NOTE: MAKE SURE THAT BAFFLE IS FLAT AND FLUSH WITH BOTTOM OF DECK. A BENT BAFFLE COULD AFFECT QUALITY-OF-CUT.

2. Using the baffle mounting straps as templates, locate and mark the position of the mounting holes

in deck. Drill (3) 7/16" dia. holes thru deck at locations marked (Fig.1).

3. Secure the baffle to the underside of deck with the (3) carriage bolts and locknuts supplied with kit. Locknuts to be positioned on outside of deck.

**CAUTION: IF THE BAFFLE IS REMOVED FROM THE DECK, PLUG THE MOUNTING HOLES WITH (3) 5/16" CAPSCREWS.**

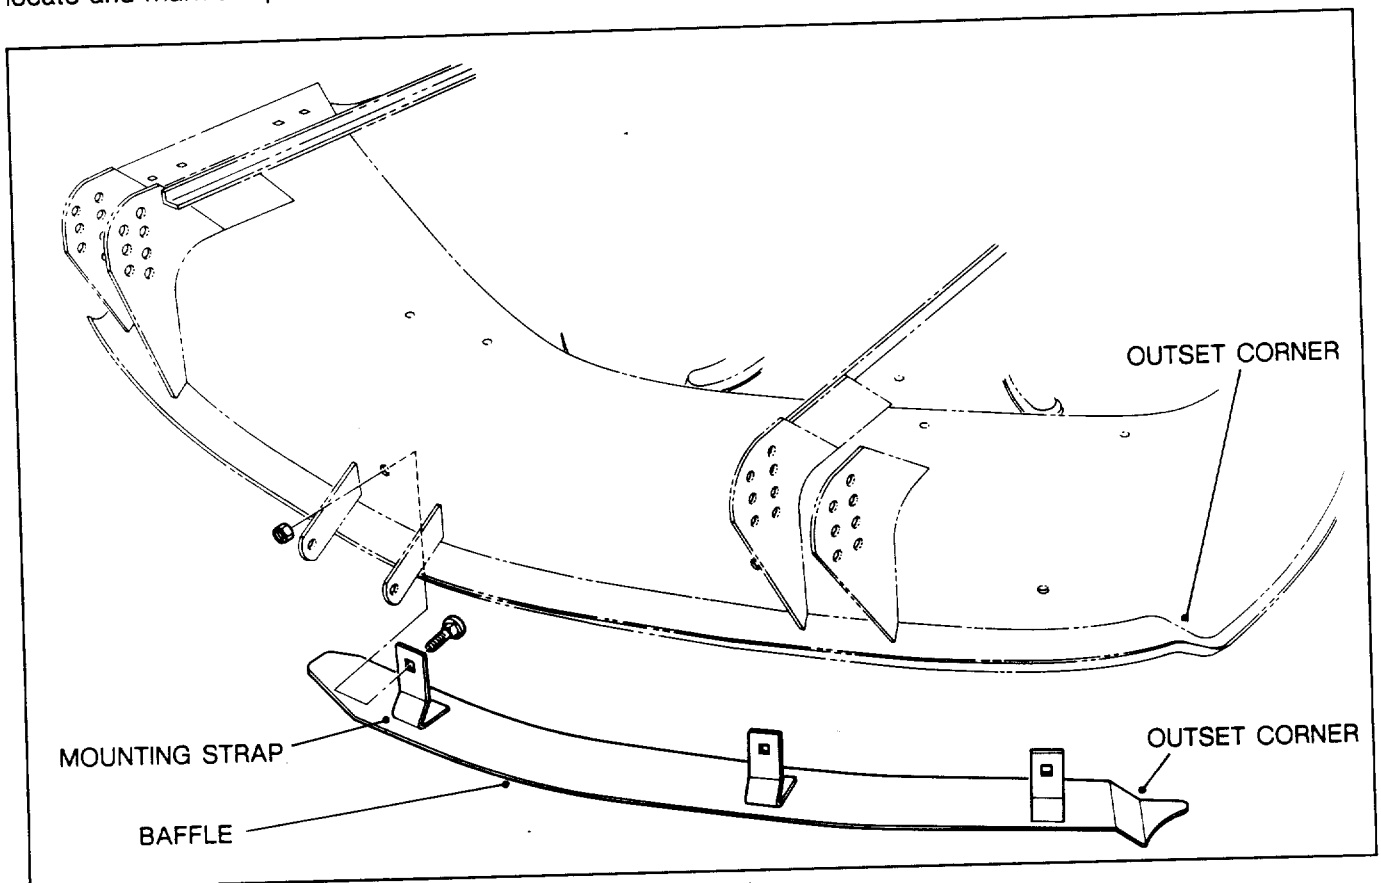


Figure 1