

TORO®

Part No. 84-1790

**INSTALLATION
INSTRUCTIONS****EXHAUST DEFLECTOR KIT**
Reelmaster 216 (Gas) Traction Units

NOTE: The muffler must be allowed to cool before installing the exhaust deflector.

1. Remove the muffler grille by removing four hex head cap screws.
2. Position the exhaust deflector inside the existing deflector on the muffler. The exhaust deflector must not cover any of the exhaust holes in the muffler.
3. Clamp the exhaust deflector in position.
4. Using the two holes in the deflector as a template, drill two 5/32" dia. holes into the muffler and install the two self tapping screw.
5. Drill a 7/32" dia. hole through the existing deflector and new deflector. Install the slotted head hex screw and flange lock nut.
6. Reinstall muffler grille using the four existing screws and washers.

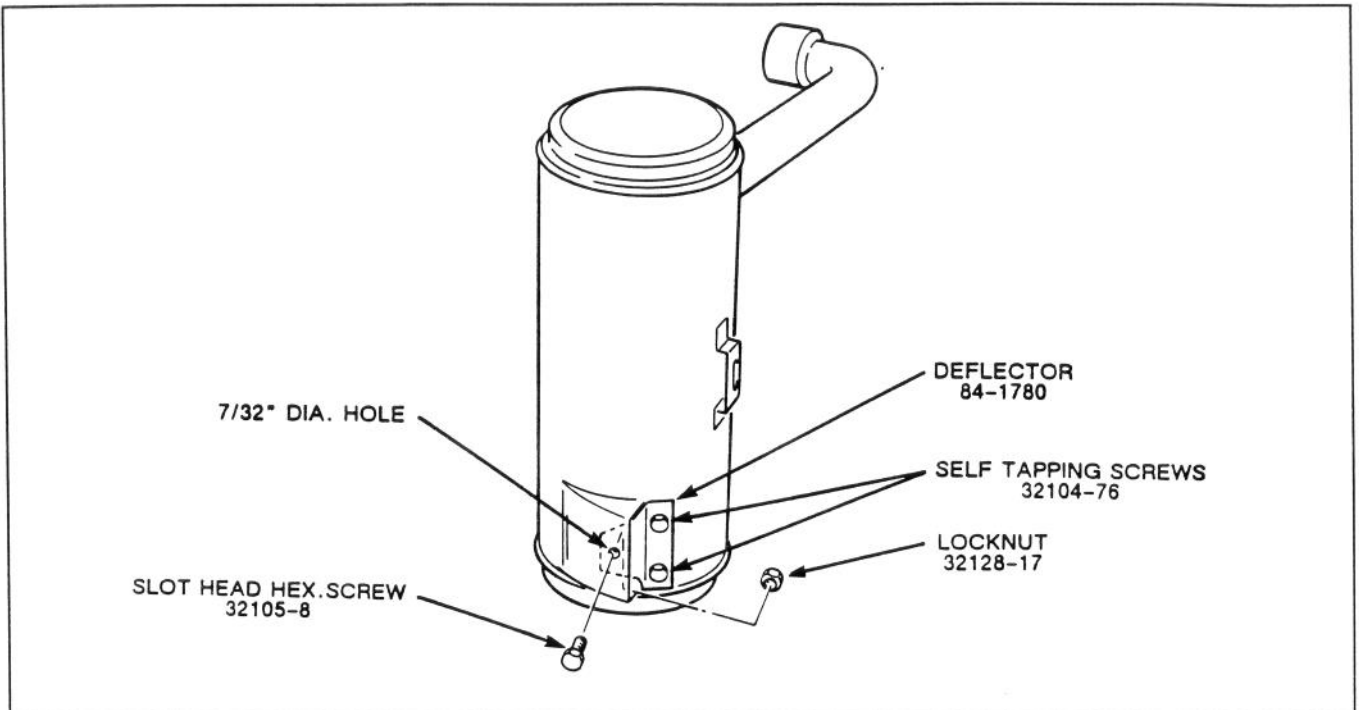


Figure 1