



Count on it.


Parts Catalog

Cargo Bed Installation Kit with Manual Dump

**2010 and Before Workman® MD Series Utility
Vehicle**

Model No. 131-3457



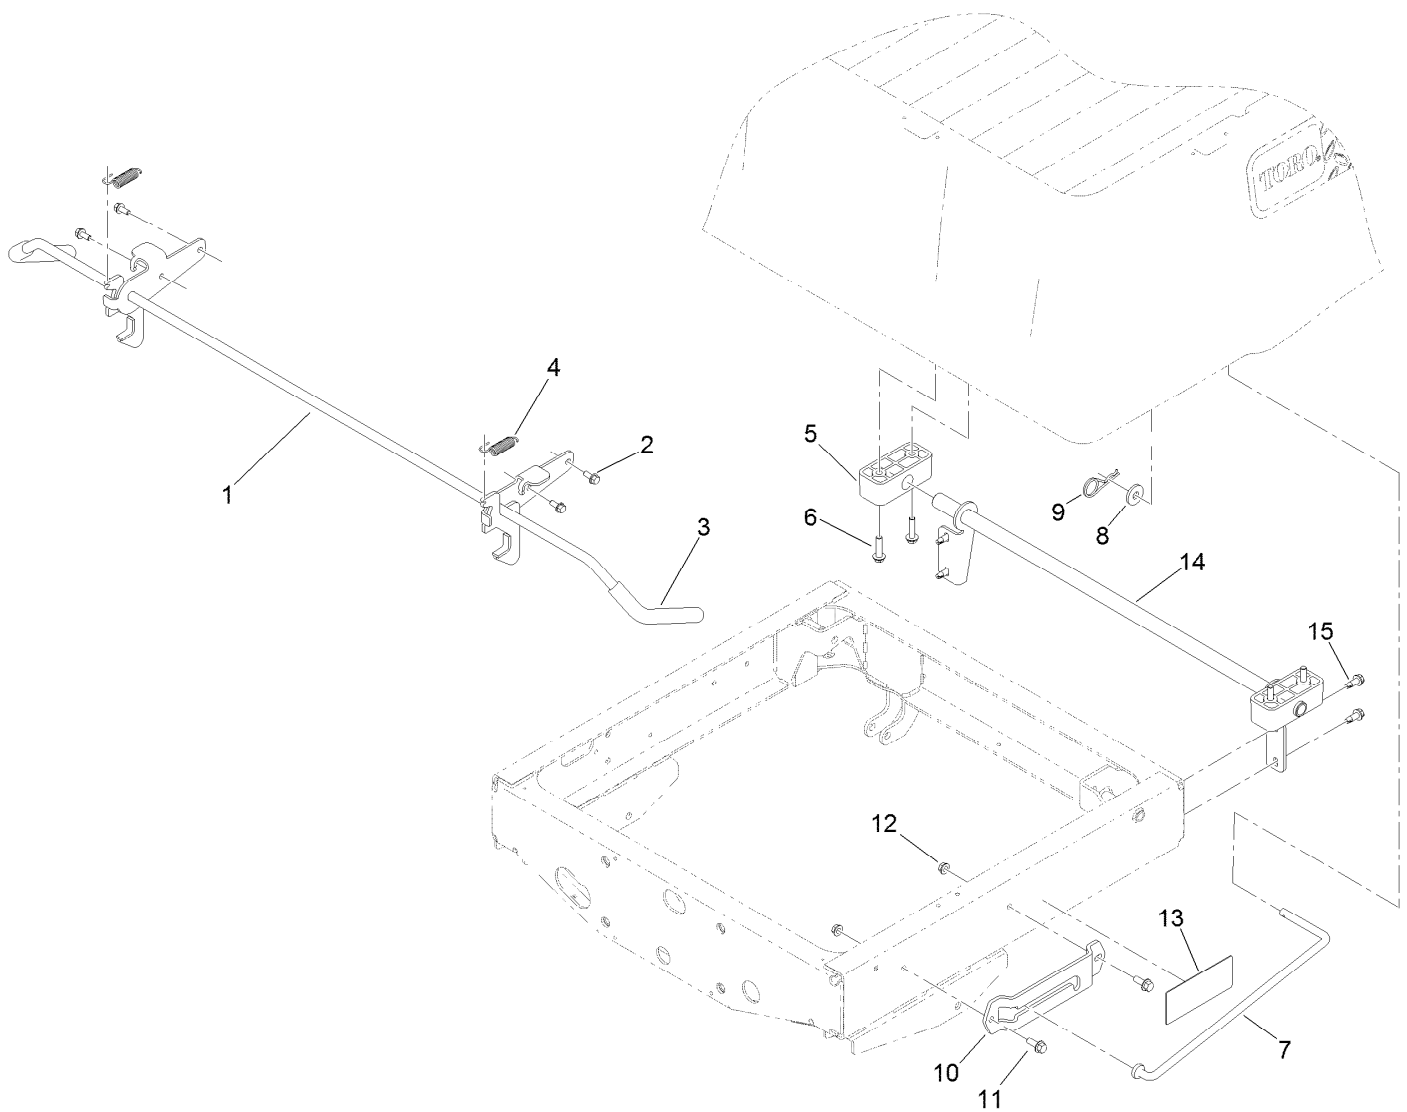

Cargo Bed Installation Kit Assembly No. 131-3457

Ref.	Part Number	Qty.	Description
1	121-6344	1	Latch ASM
2	3234-5	4	Screw-HHF
3	119-9627	2	Grip-Handle
4	5-7290	2	Spring-Tension
5	121-6342	2	Bushing-Pivot
6	3234-18	4	Screw-HHF
7	121-6316	1	Rod-Prop
8	110-6147	1	Washer-Flat
9	107-3155	1	Hairpin
10	119-9583	1	Bracket-Rod, Prop
11	3234-11	2	Screw-HHF
12	3290-357	2	Nut-HHF, Whiz
13	99-7345	1	Decal-Warning
14	119-0848-03	1	Bracket-Pivot
15	105-6245	4	Screw-Tapping