

Backup-Alarm Kit Workman® HDX-Auto Utility Vehicle

Model No. 127-8729

Installation Instructions


Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
Backup alarm	1	
Hex bolt	2	
Nut	2	Install the kit.
Wiring harness	1	
Cable tie	6	

Installing the Kit

- 1. Park the machine on a level surface, stop the engine, set the parking brake, and remove the key from the ignition.
- 2. Remove the 2 nuts from the ground stud of the backup alarm (Figure 1).

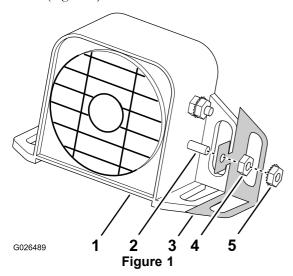

- 1. Backup alarm
- 4. Plain nut
- Ground stud
- 5. Star-washer nut
- 3. Grounding strap
- 3. Remove the grounding strap from the stud of the alarm (Figure 1).

Note: Discard the ground strap.

- 4. Install the plain-terminal nut onto the ground terminal hand tight (Figure 1).
- 5. Attach the backup alarm to the rear bracket of the machine using the hex bolts and nuts (Figure 2).


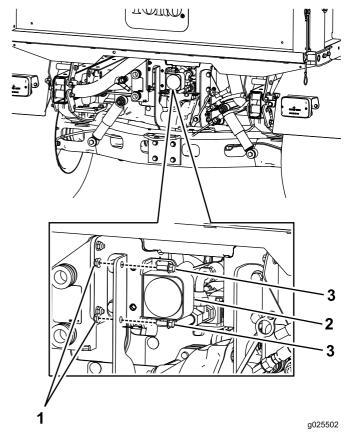


Figure 2


- 1. Nut
- 2. Backup alarm
- 3. Hex bolt




6. Secure the wiring harness to the backup alarm (Figure 3).

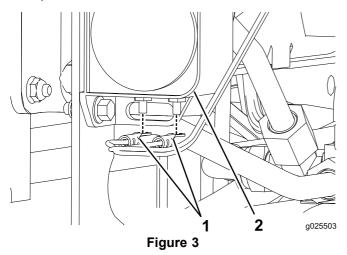

- Backup-alarm wiring harness
- 2. Backup alarm
- 7. Route the wiring harness to the front of the machine by following the other wiring harnesses (Figure 4).

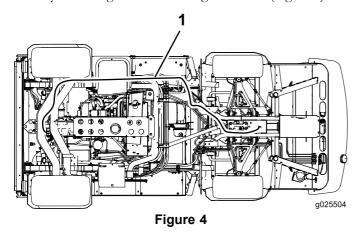


- 1. Backup-alarm wiring harness
- 8. Secure the wiring harness with cable ties.
- 9. Remove the screws and remove the control panel in-between the 2 seats (Figure 5).

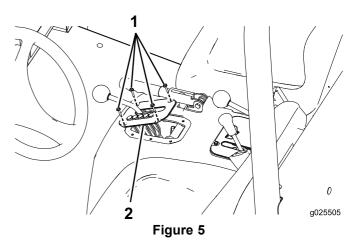

1. Screws

2. Control panel

10. Unplug the shift-indicator connector from the vehicle harness (Figure 6).

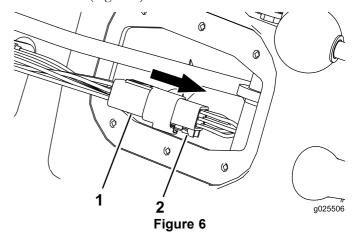

- 1. Shift-indicator connector
- 2. Vehicle harness
- 11. Plug the shift-indicator connector to the backup-alarm harness (Figure 7).


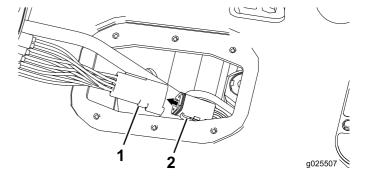


Figure 7

- 1. Shift-indicator connector
- 2. Backup-alarm harness
- 12. Plug in the vehicle connector harness to the backup-alarm harness (Figure 8).

Note: Ensure that the wiring harnesses are not in the way of moving parts.

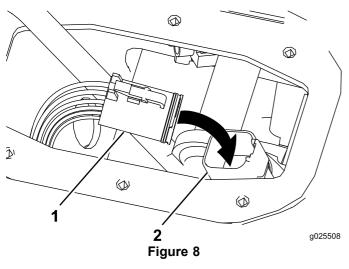

- 1. Vehicle harness
- 2. Backup-alarm harness
- 13. Replace the control panel.

